
Manual


DIAZ | SUNPROTECTION

Diaz B.I. battery motor with integrated battery

Scan code for video manual


Introduction

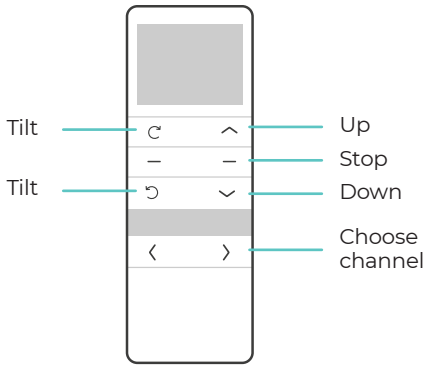

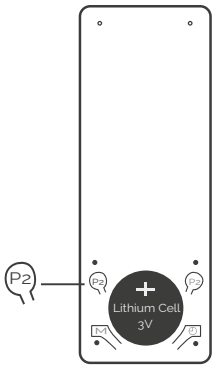

If your motor does not respond as described in this manual, please proceed to troubleshooting (pg 3).


Before first usage, please fully charge the battery motor.

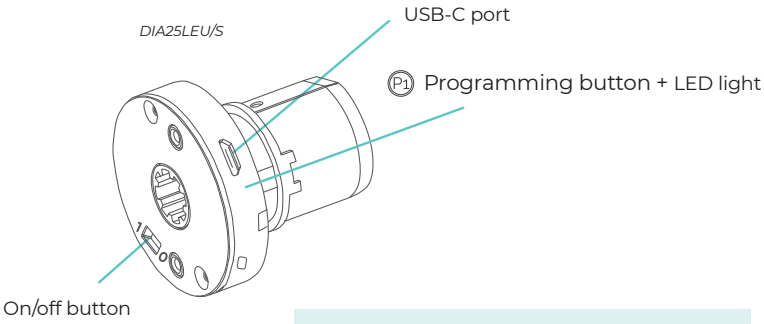

Red flashing light: Battery level = low


Green flashing light: Charging

Green light: Fully charged

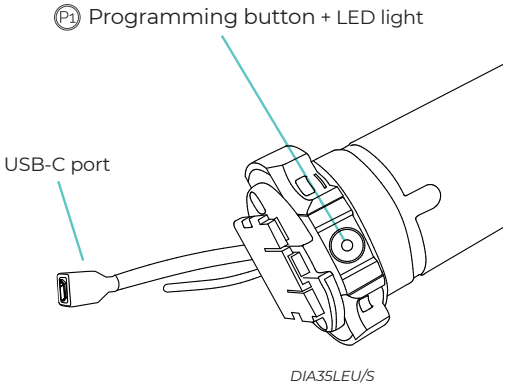

Quick start guide

1 Pair the first remote

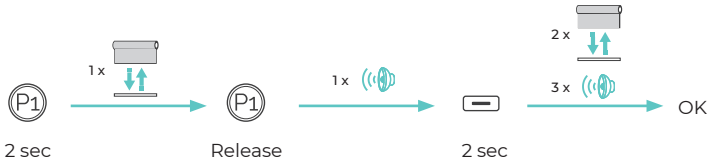

Always choose the right channel before pairing or copying a remote/channel.


Attention! Pair the remote within 10 sec after operating P1.

To delete a connected channel, repeat the steps above.

Optional


1 Adjust upper- and lower limit

1.1 Upper limit

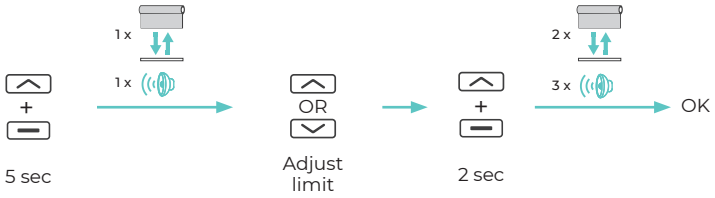



For the venetian blinds in alu and wood we always leave a gap of +/- 1 cm between the first slat and the headrail. If the cords are under tension this will cause them to wear and break more rapidly. Therefore we advise you not to change the upper position!

1.2 Lower limit

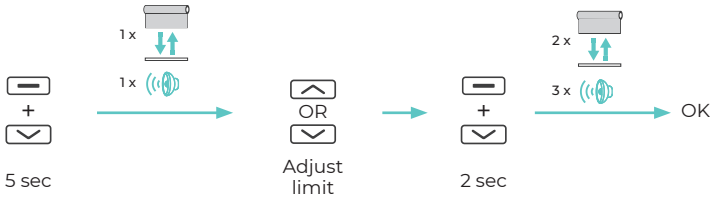


2 Pair/remove additional remote/channel

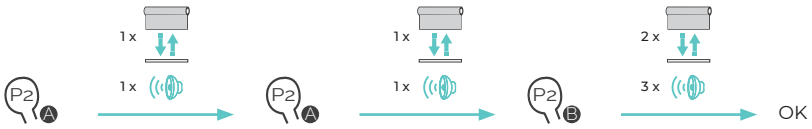

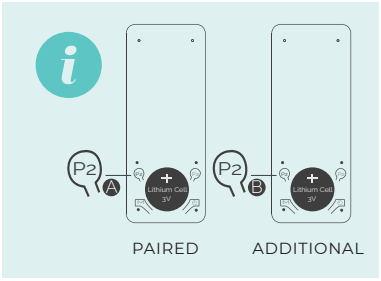


3 Favorite position ★

3.1 Set-up

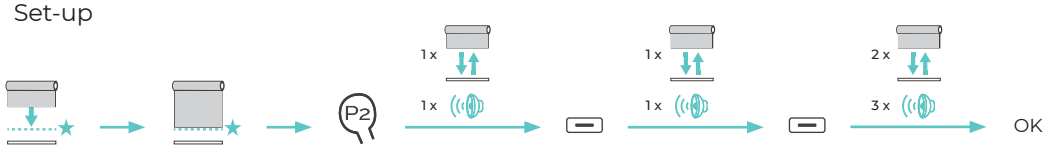


3.2 Go to favorite position



Diaz remote controlled internal B.I. battery motor | DIA25LEU/S DIA35LEU/S
V. 23-02

4 Activate/deactivate step by step mode

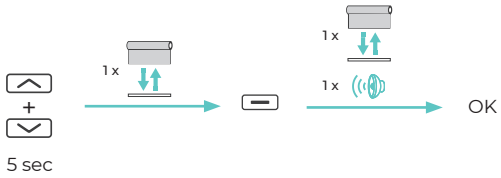


Step by step mode allows you to perfectly tilt venetian blinds with precision.

Troubleshooting


If you opt to do a factory reset of the motor, you need to follow all these steps.

1 Factory reset

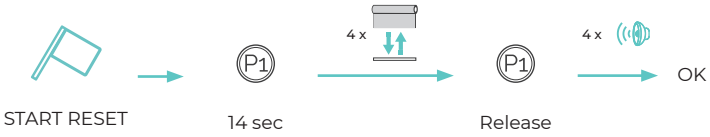

Warning! move the blind away from the upper- and lower limit before the reset.

2 Pair the first remote.

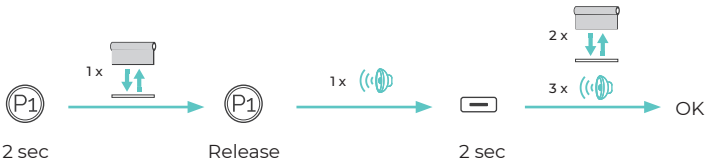

Always choose the right channel before pairing or copying a remote/channel.

Attention! Pair the remote within 10 sec after operating P1.

3 Check rotational direction




Alternative method



4 Set-up upper- and lower limit


4.1 Upper limit

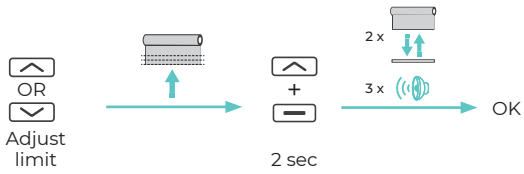

Warning!
Risk of damage.
Stop the blind in time.

Always leave a gap of +/- 1 cm between the first slat and the headrail for venetian blinds in alu and wood. The cords must certainly not be under tension, as this can cause rapid wear and tear resulting in cord breakage.

4.2 Lower limit

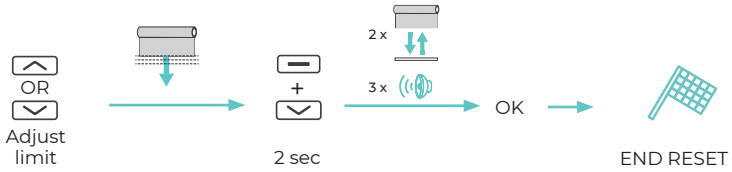

Diaz remote controlled internal B.I. battery motor | DIA25LEU/S DIA35LEU/S
V. 23-02