
Manual

DIAZ | SUNPROTECTION

Eve Motion battery motor programmation via app

Scan for more info on border routers


Introduction

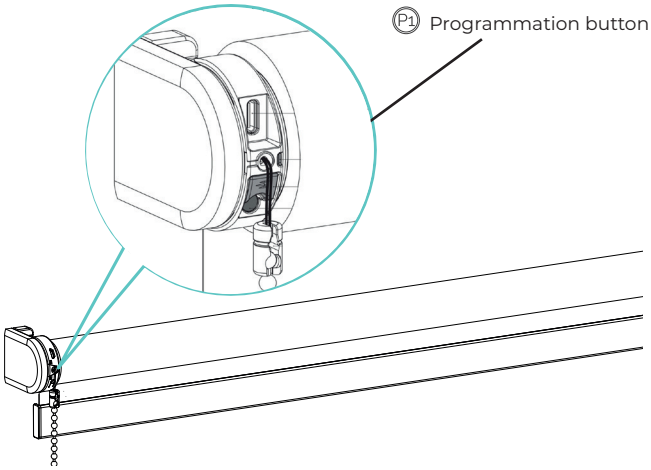



If your motor doesn't respond as described in this manual, please proceed to troubleshooting (pg 2).


Before installation, ask your client to verify if he has the latest Android/IOS version on his smartphone.

To install and operate the Eve Motion motors, you will need a border router with Matter over Thread from the platform of your choice, and your devices must meet certain specific requirements. Do you need more information about the available border routers? Scan the QR code at the top of this page.

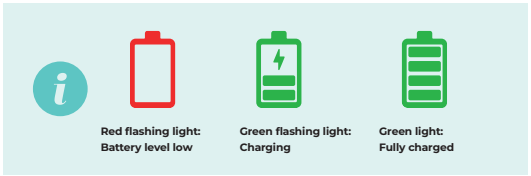

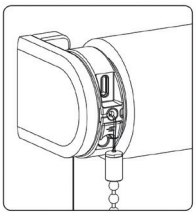

Roller blinds

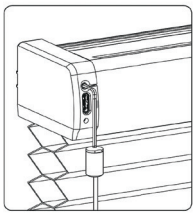
Pleated blinds

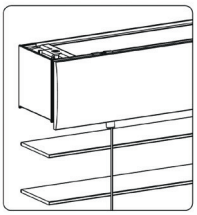
Venetians

Quick start guide


1 Remove motor from transport mode

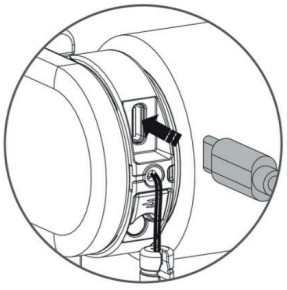


Led = OK
Led = transport mode

Activate the motor by charging it with a USB-C cable.

Alternative method (remove motor from transport mode)

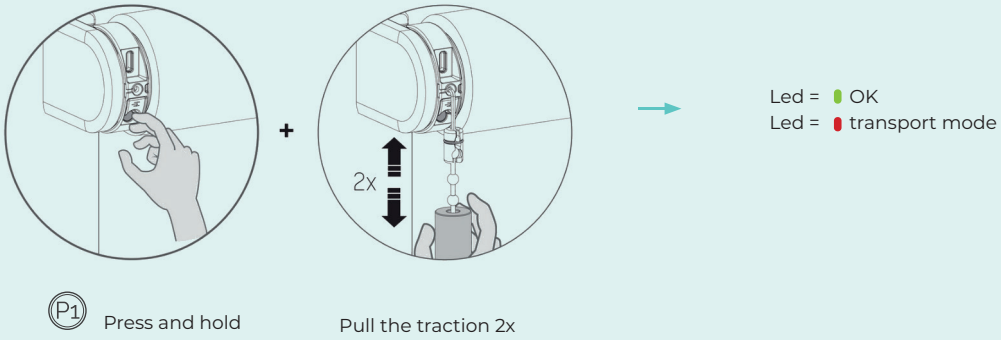

2 Scan the Matter Setup Code, that you find in the tassel, via the app of the smart home platform of your choice to add Eve Motionblinds to your prefered platform.

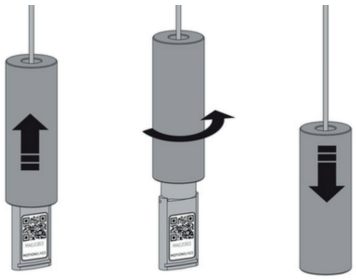


3 Pull the traction and let go to check if the blind automatically moves to the end positions. If not, the end positions aren't programmed and you need to reinstall the end positions via the remote control. See manual "programmation with remote control".

Troubleshooting

1 Delete the product from the app.

2 Factory reset

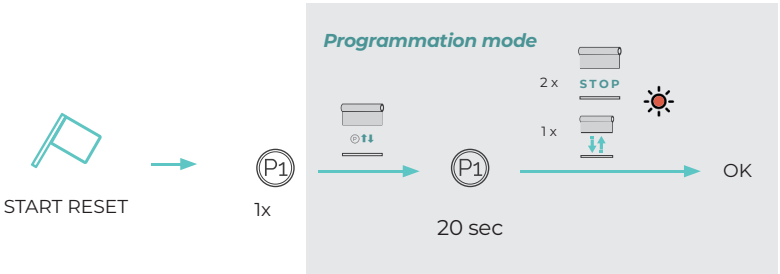


Programmation mode


Push the programmation button 1x to (de)activate the programmation mode



3 Pair a remote

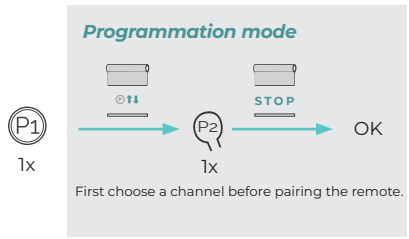


4 Check rotational direction

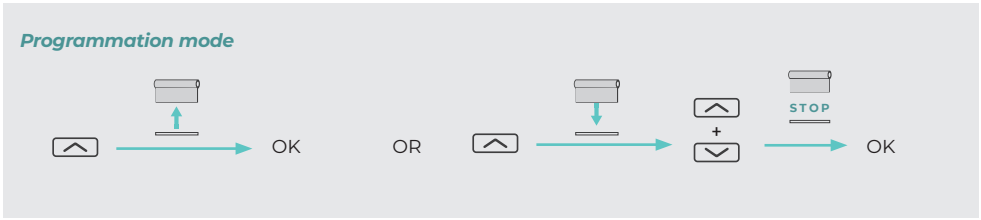

5 Set-up lower and upper limit


5.1 Lower limit

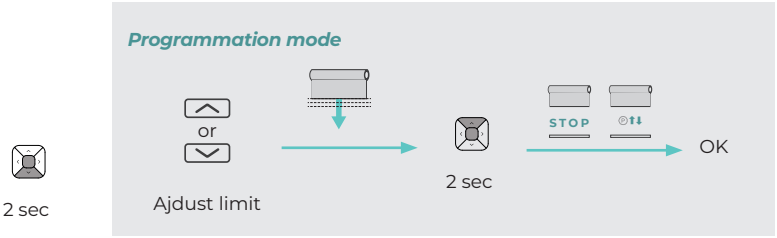

Warning! Risk of damage. Stop the blind in time.

Always leave a gap of +/- 1 cm between the first slat and the headrail for venetian blinds in alu and wood. The cords must certainly not be under tension, as this can cause rapid wear and tear resulting in cord breakage.

5.2 Upper limit

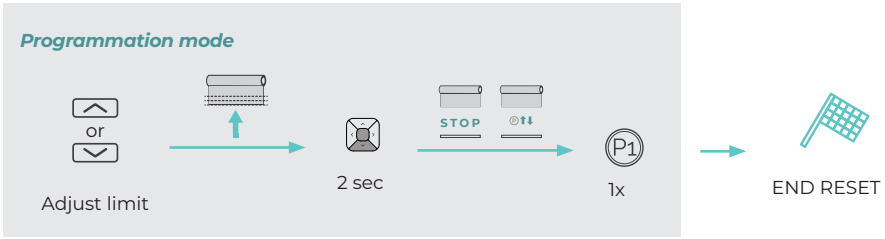

If you have any further questions about the programming of this type of motor, scan the QR code and ask your question.

https://support.motionblinds.com/