
Manual


Atlas

DIAZ | SUNPROTECTION

Description of the parts

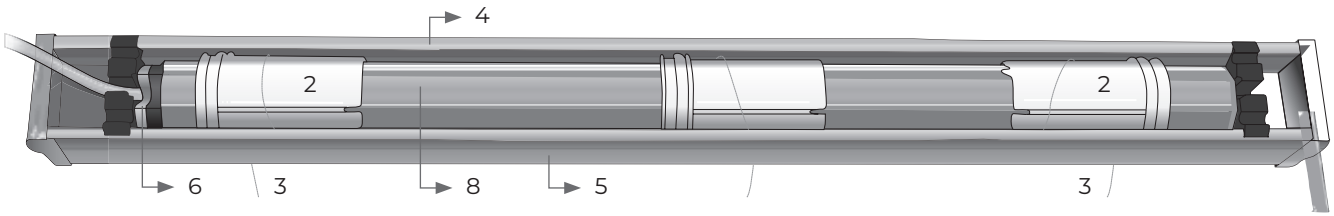



1. Universal brackets
2. Conuses
3. Cords
4. Headrail
5. Velcro (hard)
6. Motor
7. Octobuis

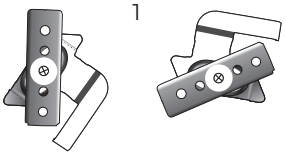


Installation

1 Fix the outer 2 brackets as shown on the picture below. Fix the other brackets at equal distance between the 2 outer brackets.

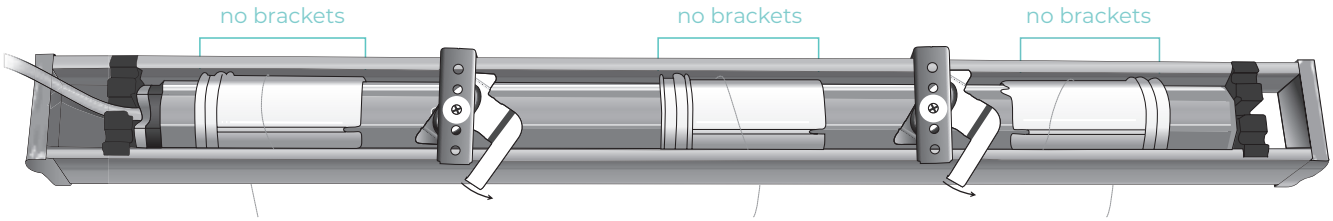

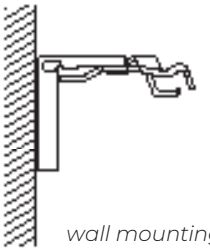


wall mounting

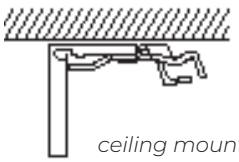


ceiling mounting

Please ensure that no brackets are placed on top of the spools inside the headrail. The clearance between the bracket and the spool is minimal. It is therefore important that the brackets are perfectly aligned. This will prevent annoying noise, f riction and the motor from tripping.

2 Open all brackets.

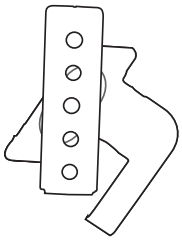

3 Slide the headrail till the top of the brackets and close them one by one, by turning the brackets against the headrail.

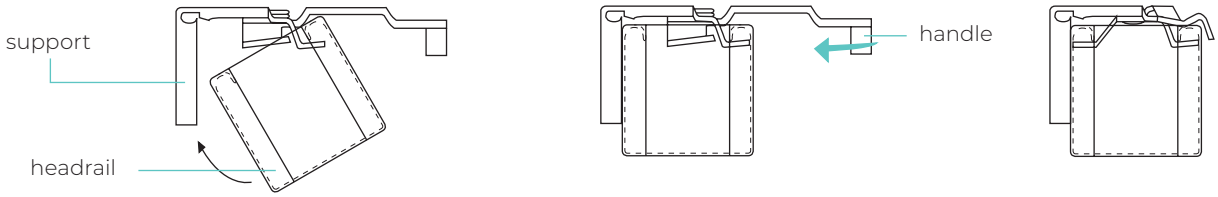

Make sure that the borders of the brackets are fix under the edge of the headrail.

Fitting of the fabric

Now you can fit the fabric on the system. Therefore you need to attach the soft velcro on the top of your fabric to the hard velcro on the system. You need to put the cords through the rings on the back of the fabric and fix the cords through the cord ends.