

Manual

DIAZ | SUNPROTECTION

Extrema

Discription of the parts

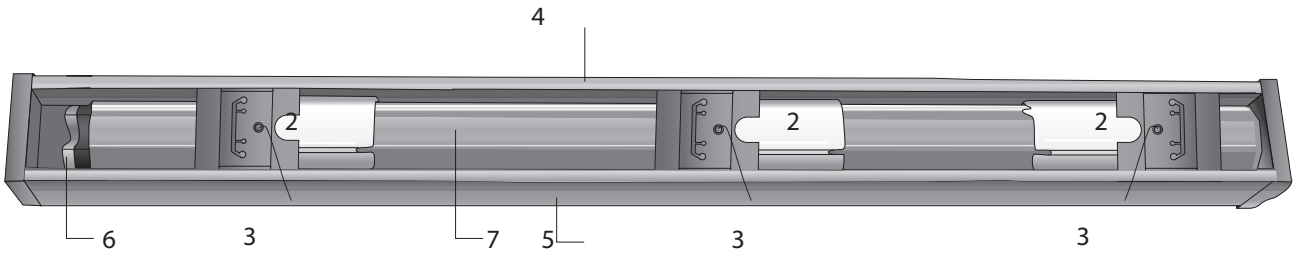

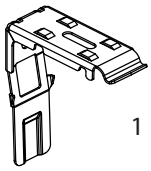


1. Universal brackets
2. Cones
3. Cords
4. Aluminium headrail
5. Velcro (rigid)
6. Motor
7. Octogonal tube

Installing the system


1 Fitting the brackets

The universal brackets can be used for both wall and ceiling mounting.

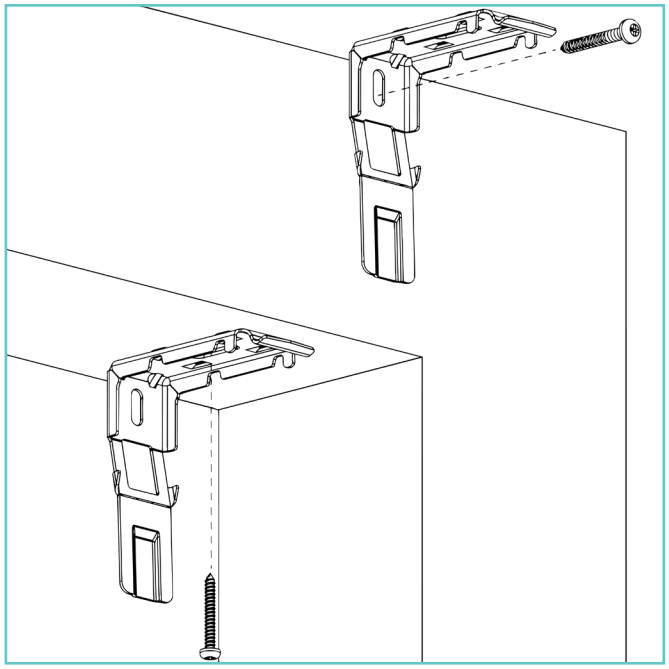

2 Fitting the system to the brackets

1. Hook the front of the headrail behind the edge of the brackets
2. Press the headrail until it clicks into the brackets

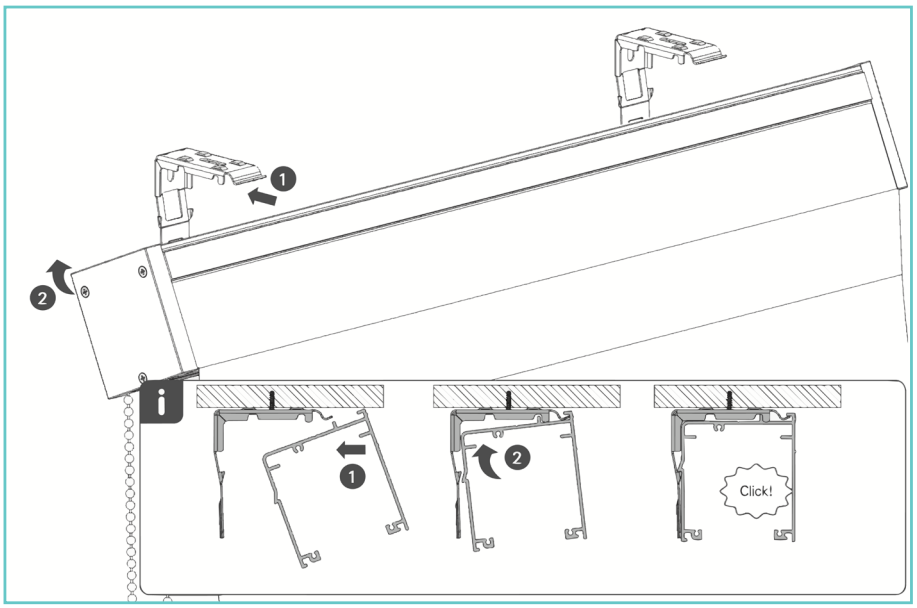

3 Fitting the fabric

You can now attach the fabric to the system. To do this, simply attach the soft Velcro side at the top of the fabric to the stiff Velcro side of the system. Thread the cords through the rings at the back of the fabric, then secure them using the spring-loaded end caps provided.

4 Disassembly the system

