
Manual

DIAZ | SUNPROTECTION


Horizontale blind Megaview 25 mm

Description of the parts

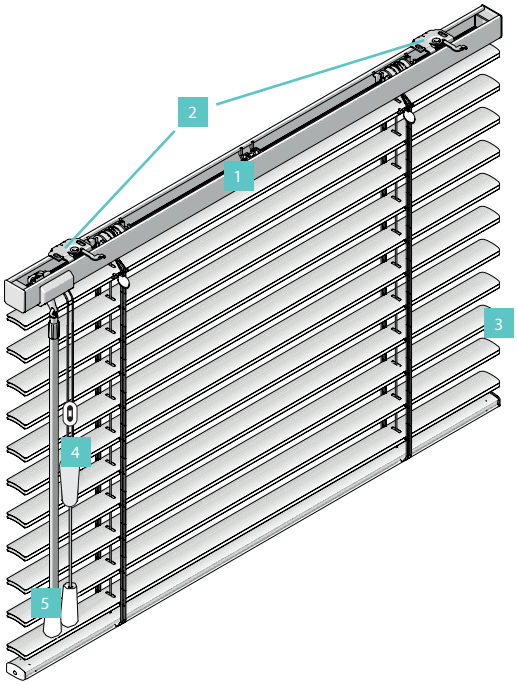

1. Headrail
2. Universal brackets
3. Aluminium slats
4. Operation cords
5. Orientation cords


Check the cylindres

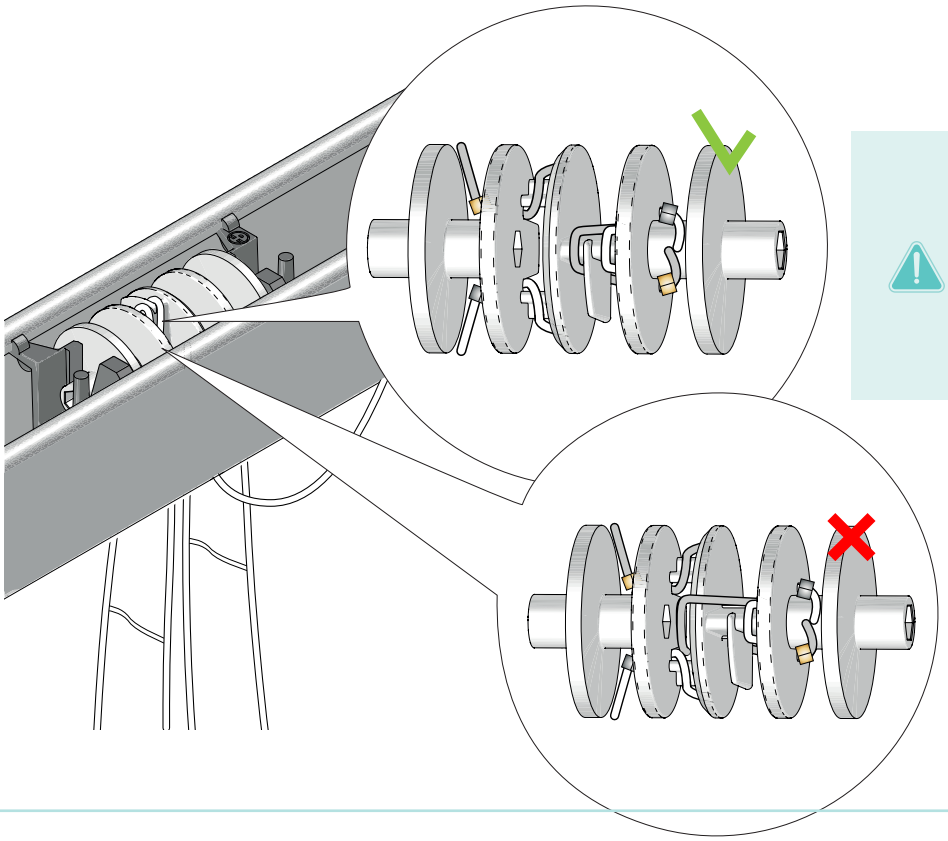


A check of the cords on the cylindres before installation is important in order to gaurantee the correct fonction of the Megaview system.

Installation


1 Fix the outer 2 brackets as shown on the picture below.
Fix the other brackets at equal distance between the 2 outer brackets.

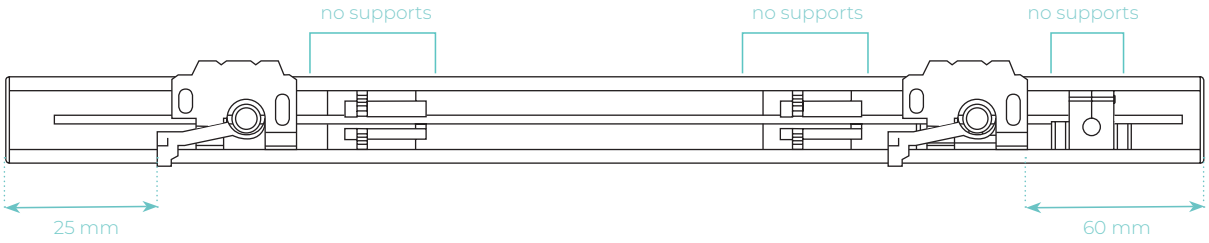

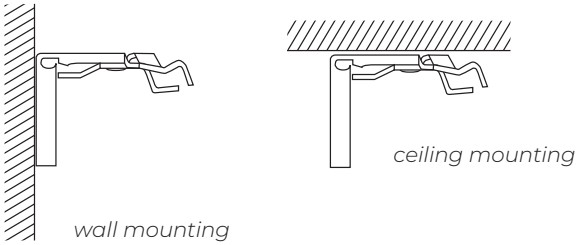


Make sure the brackets
are not fixed on top
of the spools in the headrail.

2 Open all brackets.

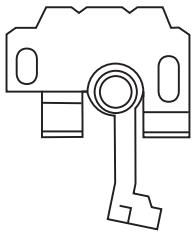

3 Slide the headrail till the top of the brackets and close them one by one,
by turning the brackets against the headrail.

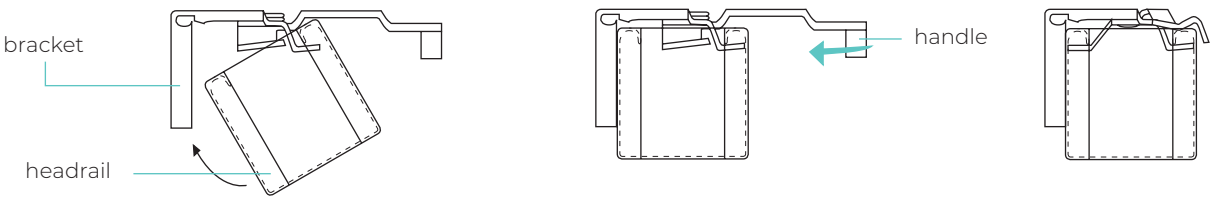


Make sure that the borders of the brackets
are fix under the edge of the headrail.

Mounting of the side guidance

1 Fix the brackets parallel, so that the cables run straight down.

2 Put the fixation ring on both sides over the cable. Put tension on the cable and fix the ring at the height of the bracket. Repeat on the other cable.
Inside window mounting: Slide the fixation ring into the bracket to fix it.
Outside window mounting: Put the cable with the fixation ring through the biggest back hole in the bracket, and pull it to the front so that it's fix in one of the front holes.

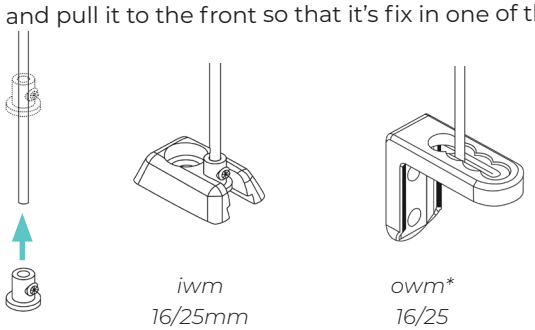

iwm
16/25mm

*owm**
16/25

** Side guidance bracket OWM can also be installed with the back to the top.*

Child safety

