
Manual

DIAZ | SUNPROTECTION

Horizontal blind with side guidance


Description of the parts

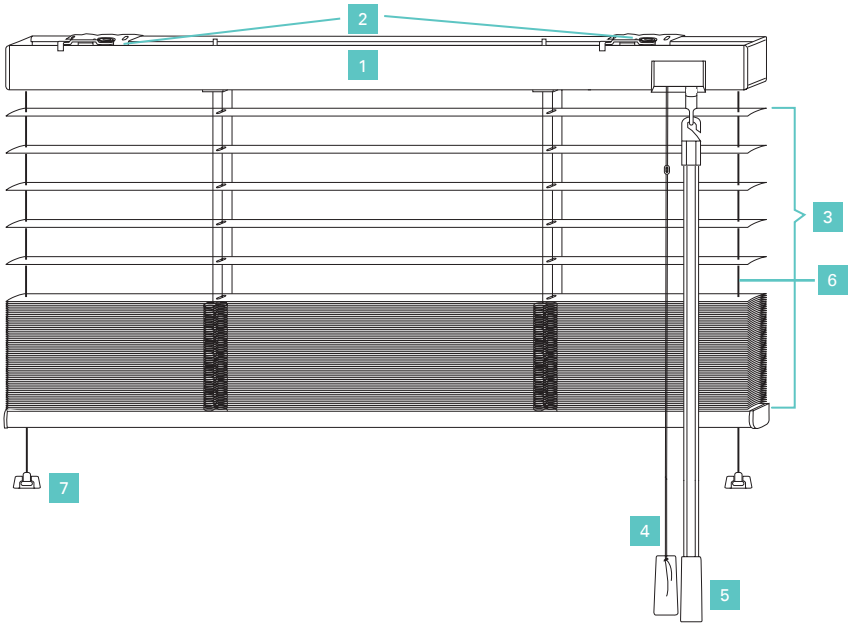


1. Headrail
2. Universal brackeets
3. Aluminium slats
4. Operation cords
5. Orientation rod
6. Side guidance
7. Brackets for side guidance


Installation

1 Fix the outer 2 brackets as shown on the picture below.
Fix the other brackets at equal distance between the 2 outer brackets.

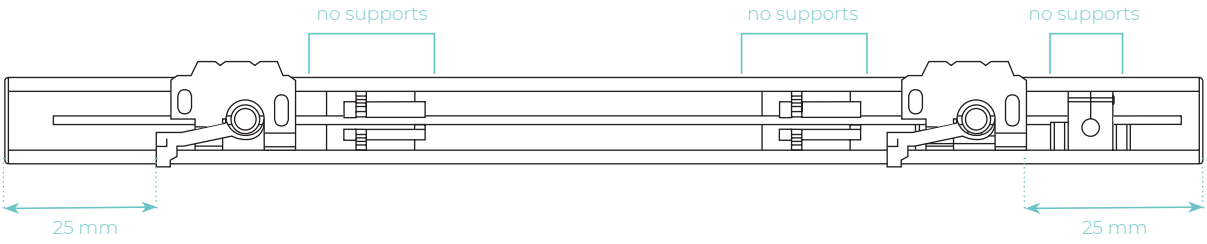

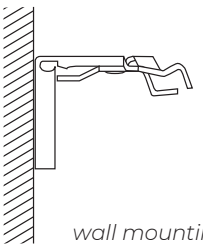


wall mounting

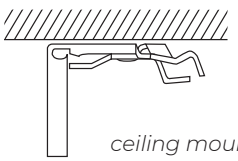


ceiling mounting


Make sure the brackets
are not fixed on top
of the spools in the headrail.

2 Open all brackets.

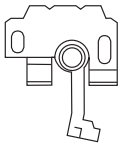

3 Slide the headrail till the top of the brackets and close them one by one, by turning the brackets against the headrail.

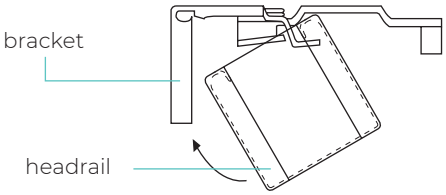

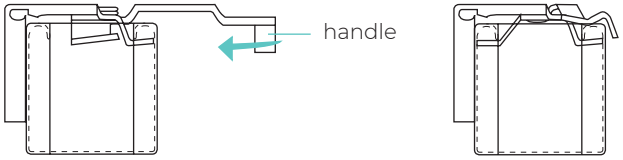


Make sure that the borders of the brackets are fix under the edge of the headrail.


Installation of the side guidance

1 Fix the brackets parallel, so that the cables run straight down.

2 Put the fixation ring on both sides over the cable.
Put equal tension on both cables and fix the fixation ring at the height of the bracket.
Inside the window mounting: Slide the fixation ring in the bracket to fix it.
Outside the window mounting: Put the cable with the fixation ring through the biggest hole in the back of the bracket and pull it forward to fix the fixation ring in one of the smaller holes.

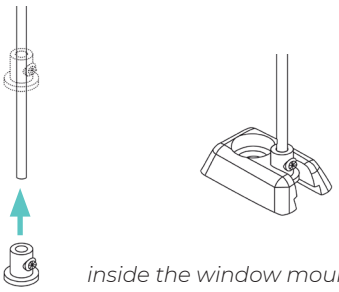


inside the window mounting

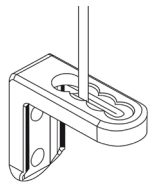

*outside the window mounting**

** Side guide rail OWM can also be placed upside down with the return side up*

Attention !
Put equal tension on both cables in order to keep the spring at the right position in the headrail. When the spring is pulled too much to one side, it can get tangled with other parts in
the headrail and thereby preventing proper fonctioning of the blind.

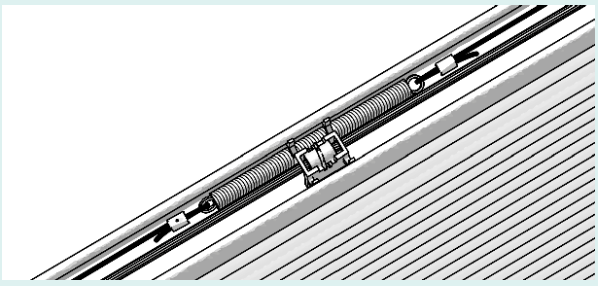

Child safety

