
Manual


DV1-P

DIAZ | SUNPROTECTION

Content & general information

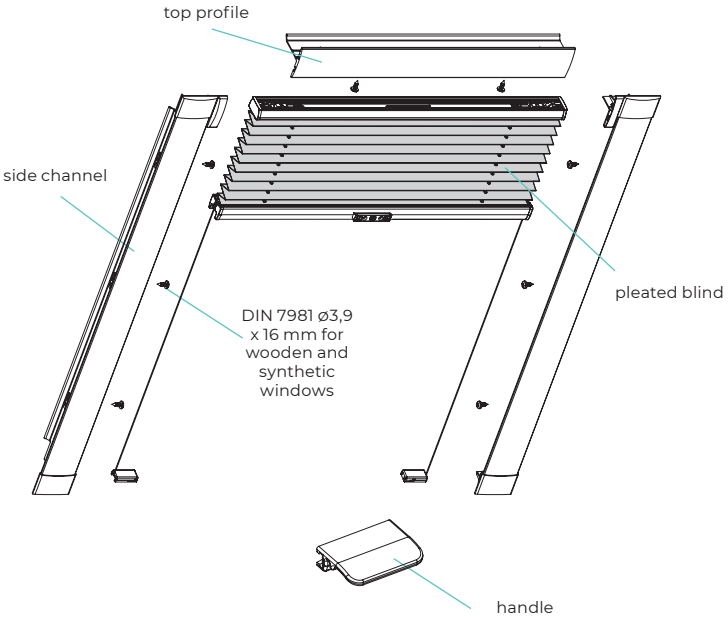


The older window model GGU with 105° mortise requires the spacers supplied to be inserted into the running rail. Place the spacers near the screw.

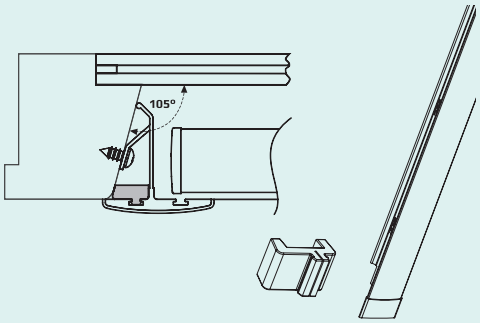


Mounting of the pleated blind


1 Join the 2 side channels and the top profile.

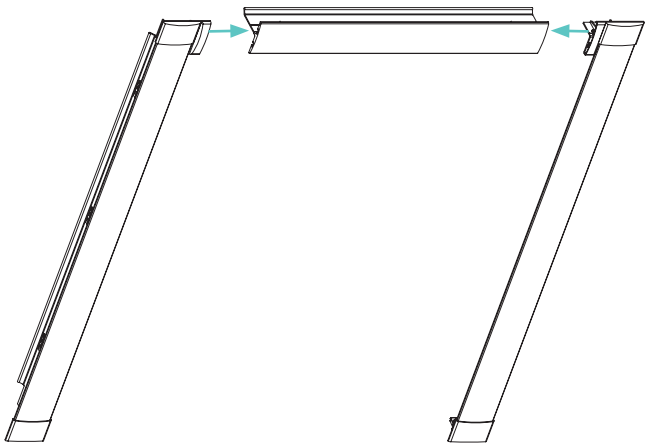


2 Put the profiles into the window frame. The top profile must fit tightly at the top.

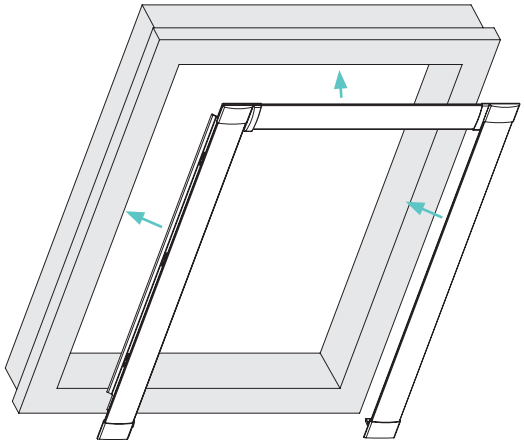


3 Straighten the end caps at the bottom. Loosen the screws and push the end caps to the edge of the window. Tighten the screws again.

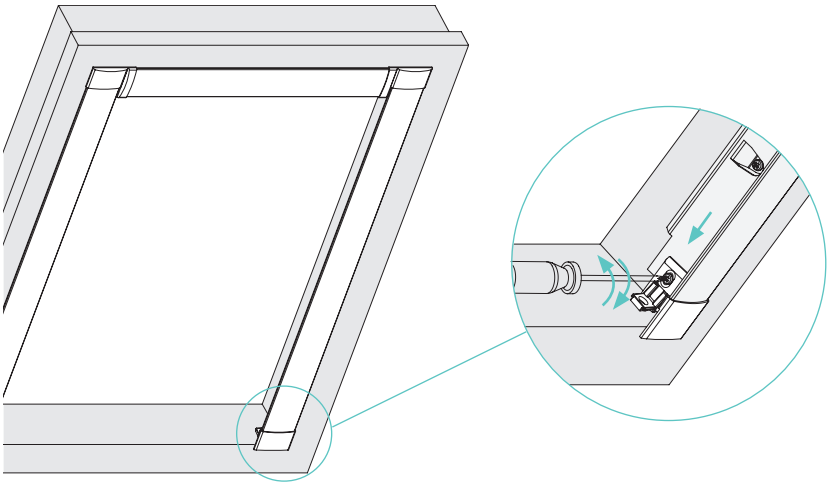


4 Mount the operation handle. Slide the handles onto the adapter.

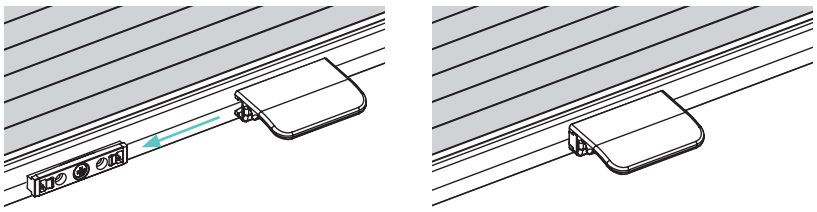


5 Remove rubber band and unwind the cord incl. the tensions cord bracket.

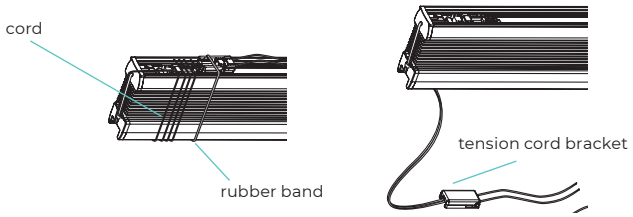


6 Lead the pleated blind behind the channels and press upwards into the brackets.

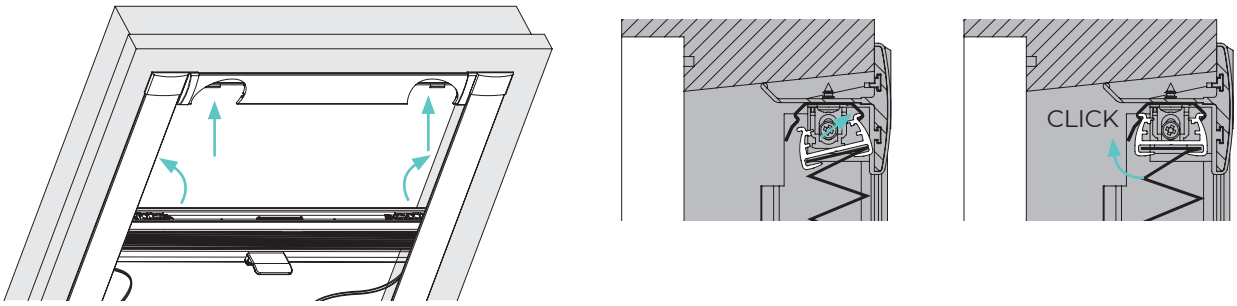

7 Push the tension cord brackets over the fixing plates at the bottom until they lock.

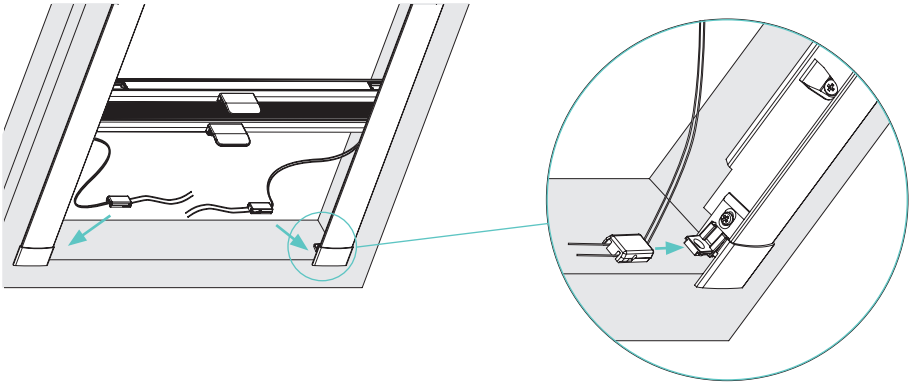

8 Cut off the excess cord ends

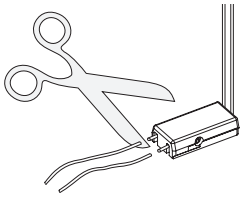

Adjustment of the cord tension must be uniform and can only be done by a professional.

Operation of the pleated blind

The DV1-P is opened and closed by moving the operation handle, using the control rod if necessary

