
Manual

DV1 / DV3

DIAZ | SUNPROTECTION

Placement of the clips on the profile and in the window

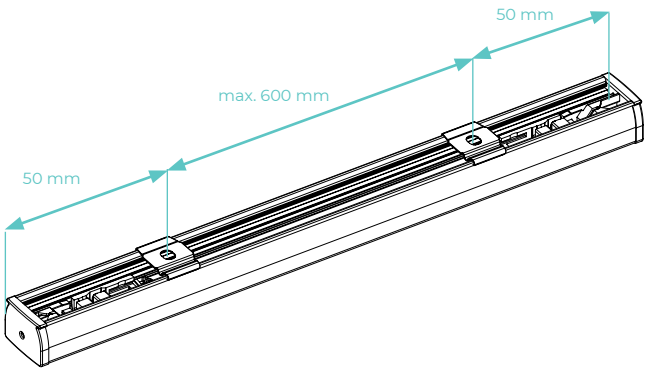


Mount the clips 50 mm from the end of the headrail, and with an intermediate distance of max. 600 mm.


1 Mount of the clips on the top of the window.

Depending on the window type and brand the distance to the front edge of the window is determined.

The profile distance from the front edge of the window must be 3 mm (hole distance 14 mm). Place the mounting template marked “+3” at the front edge.

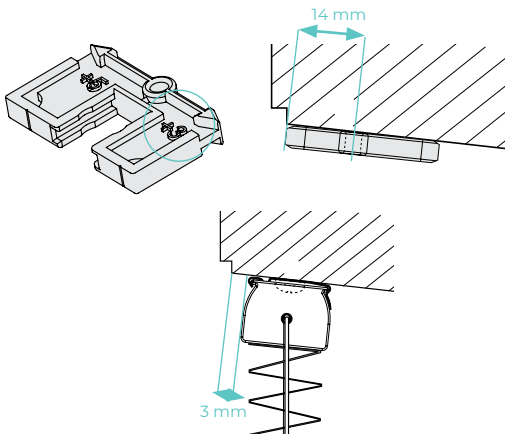


The window brand FAKRO and VELUX type GGU/GPU or an older generation with rounded front edge:
The profie distance from the front edge of the window must be 5 mm.

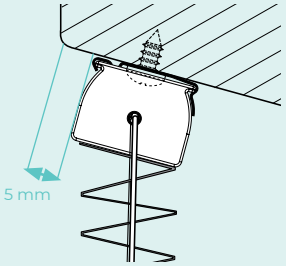


2 Mount the fixing plates at the bottom of the window.


2a Place the pleated blind in the middle of the window and mark the ends on the left and on the right.

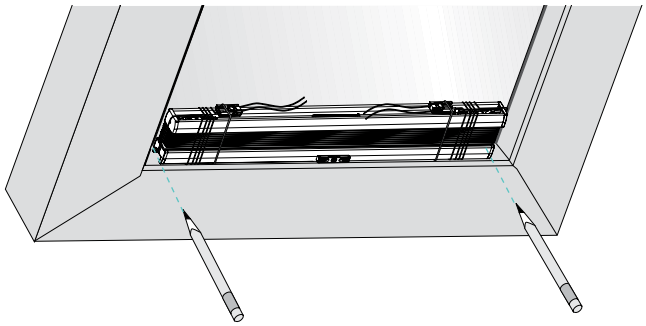

2b Push the fixing plate into the mounting template.

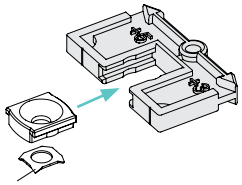


2c Place the mounting template (depending on the window type, as already described) with "+5" or "+3" at the front edge of the window and on the marking of the pleated width.
Fix the fixing plates with screws.

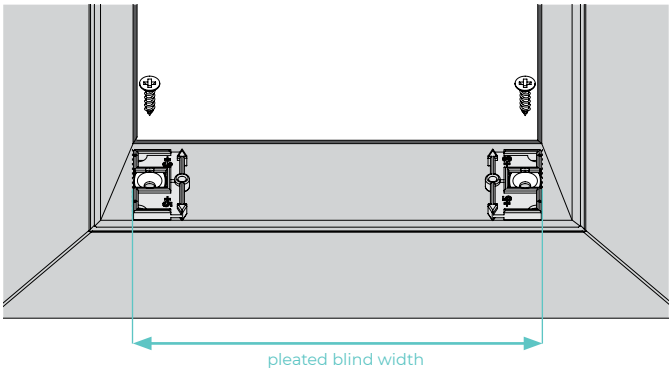


Mounting of the pleated blind


1 Remove rubber band and unwind the cord incl. tension cord bracket.

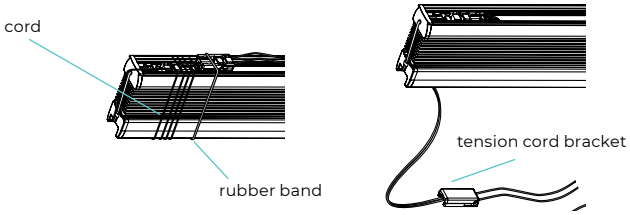


2 Insert the profile in the upper edge of the clip and press it upwards (until it clicks).

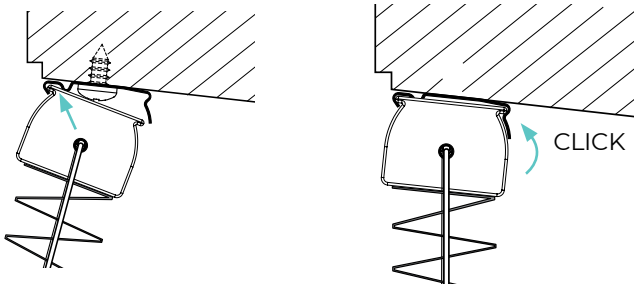


3 Push the tension cord brackets over the fixing plates until they lock

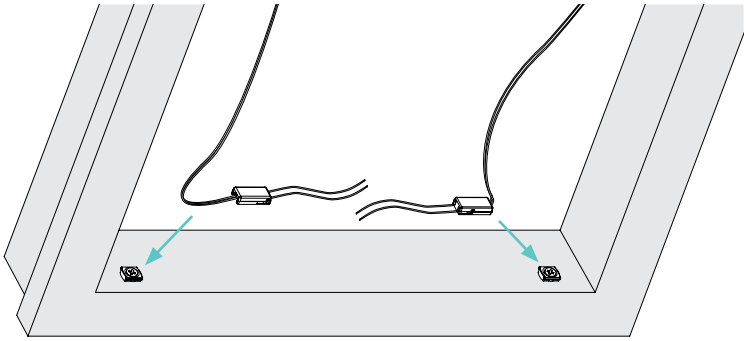

4 Mount the operating handle: slide the handle onto the profile

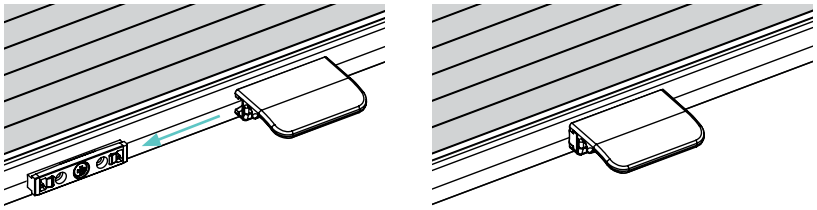

5 Cut off the excess cord ends

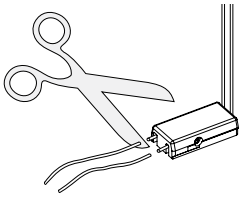

Adjustment of the cord tension must be uniform and can only be done by a professional.