
Manual


DV2-P

DIAZ | SUNPROTECTION

Content

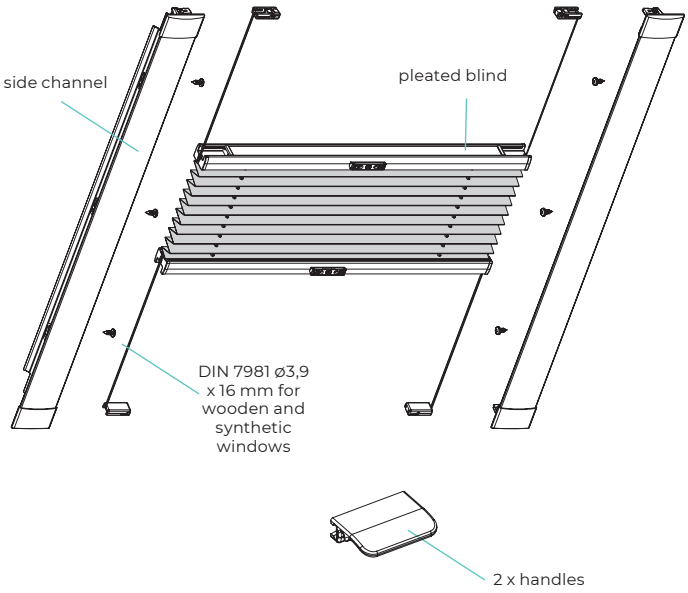


The older window model GGU with 105° mortise requires the spacers supplied to be inserted into the running rail. Place the spacers near the screw.

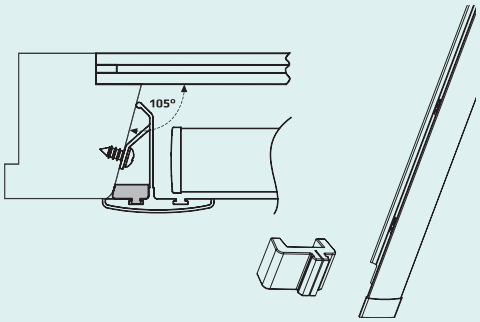


Mounting of the pleated blind


1 Place the side channels so that the distance is the same at the top and at the bottom. Fix the channels in the window frame.

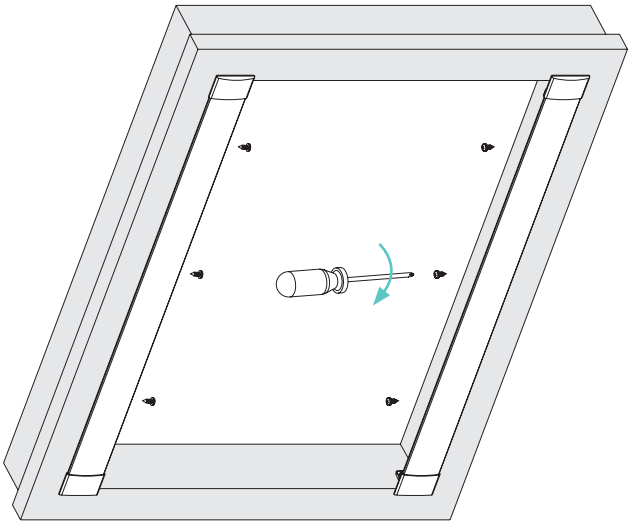


2 Straighten the end caps at the top and at the bottom. Loosen the screws and push the end caps to the edge of the window. Tighten the screws again.

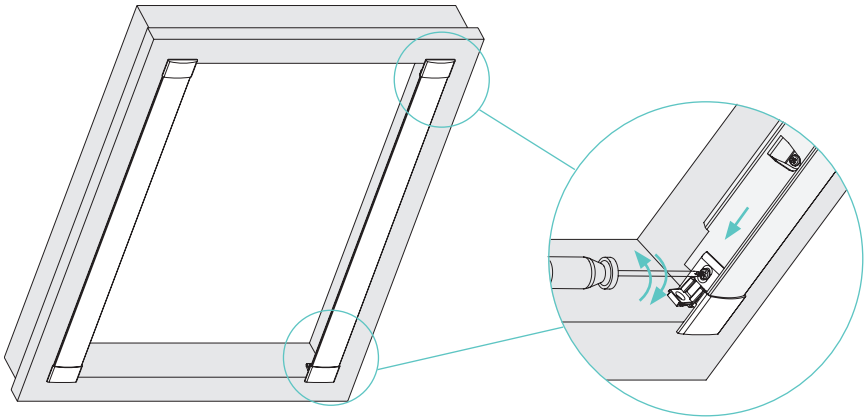


3 Mount the operation handles. Slide both handles onto the adapter.

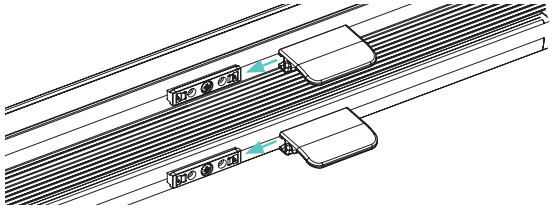


4 Remove rubber band and unwind the cord incl. the tensions cord bracket.

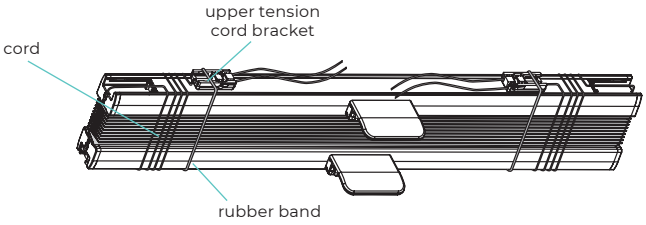


5 Push the upper tension cord brackets in the fixing plates until they lock.

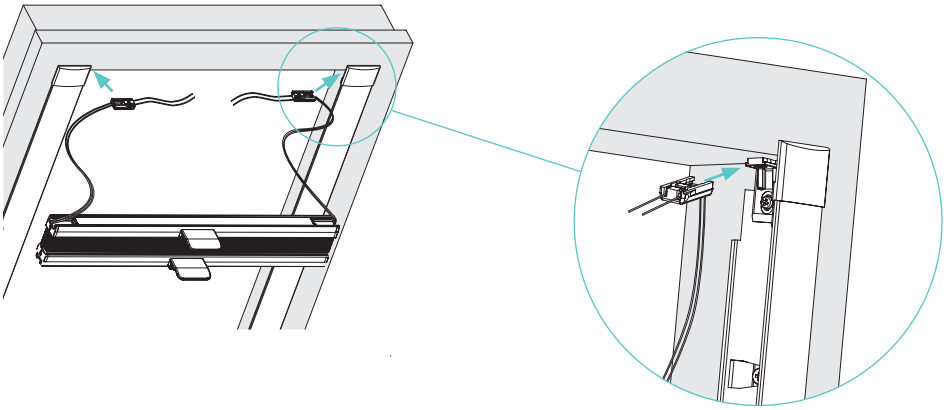


6 Take the lower tension cord brackets out of the rail.

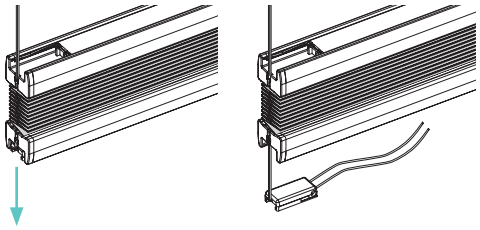

7 Lead the pleated blind behind the channels.
Push the tension cord brackets over the fixing plates at the bottom.

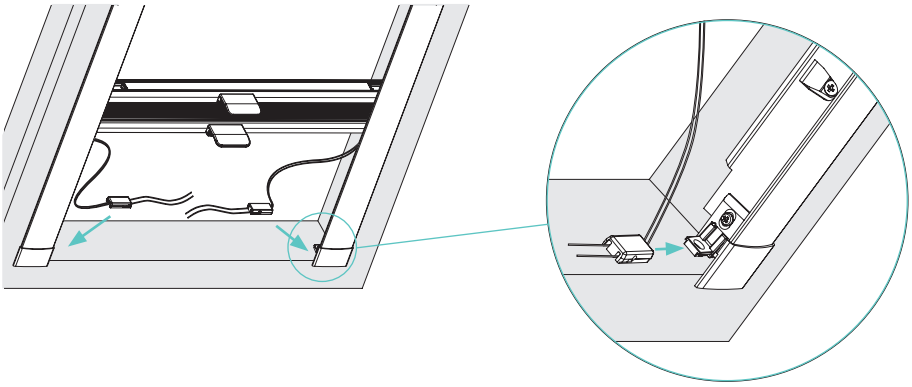

8 Cut off the excess cord ends

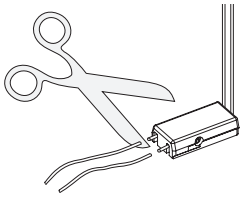

Adjustment of the cord tension must be uniform and may only be made by a professional.

Operation of the pleated blind

The DV2_P is opened and closed by moving the operation handle, using the control rod if necessary

