
Manual

DV2


DIAZ | SUNPROTECTION

Placement of the fixing plates in the window

1 Place the pleated blind in the middle of the window and mark the ends on the left and on the right. Do this both on the top and at the bottom.

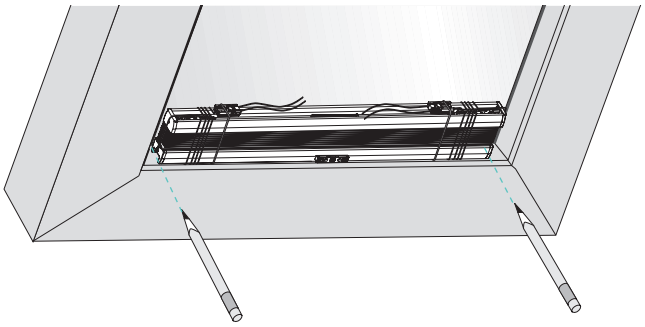


2 Push the fixing plate into the mounting template.

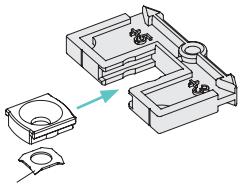


3 Place the mounting template on the window. Depending on the window type and brand the distance to the front edge of the window is determined.


The profile distance from the front edge of the window must be 3 mm (hole distance 14 mm). Place the mounting template marked “+3” at the front edge.

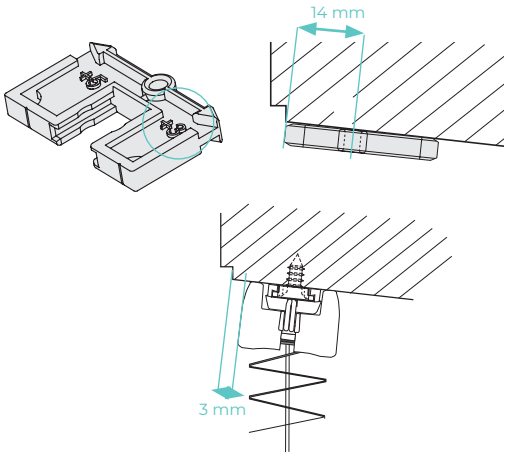

The window brand FAKRO and VELUX type GGU/GPU or an older generation with rounded front edge:
The profile distance from the front edge of the window must be 5 mm.

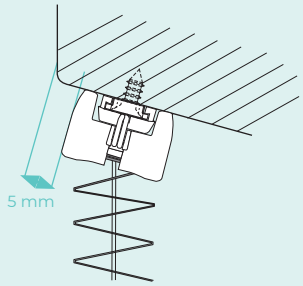


4 Fix the fixing plates with screws.

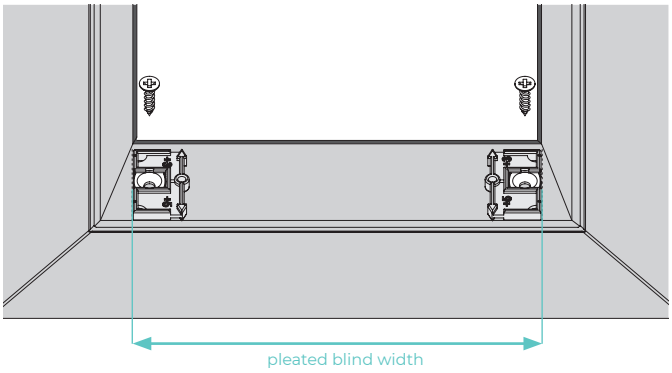


Mounting of the pleated blind


1 Remove rubber band and unwind the cord incl. tension cord bracket.
Mount the operating handles: slide both handles onto the profile.

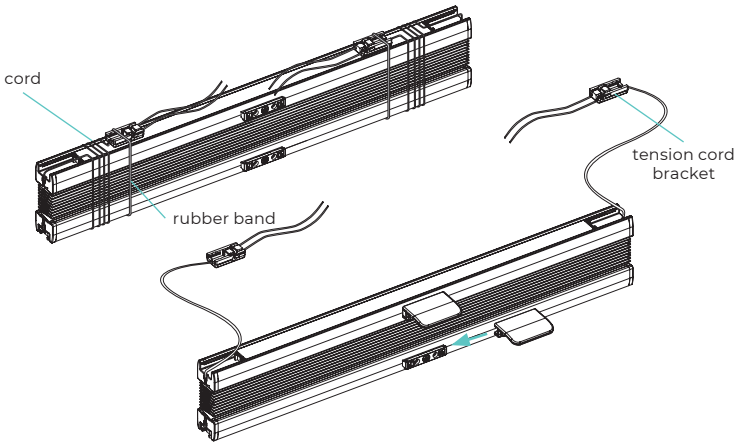


2 Push the upper tension cord brackets over the fixing plates until they lock.

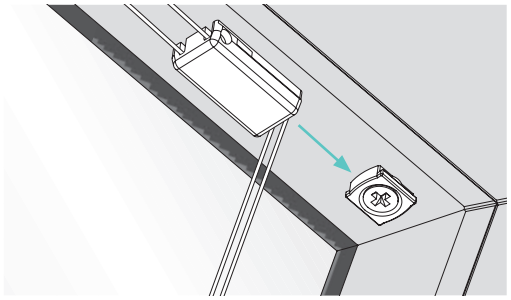

3 Take the lower tension cord brackets out of the rail and push tem over the fixing plates until they lock.

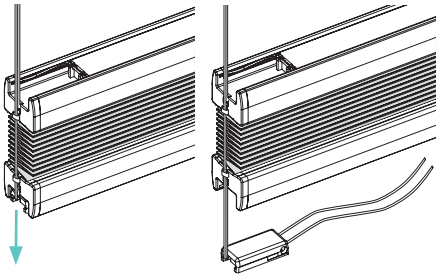

4 Cut off the excess cord ends

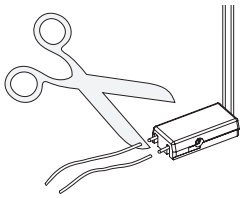

Adjustment of the cord tension must be uniform and can only be done by a professional.