
Manual

GS1/GS3

DIAZ | SUNPROTECTION

Placement of the clips on the profile

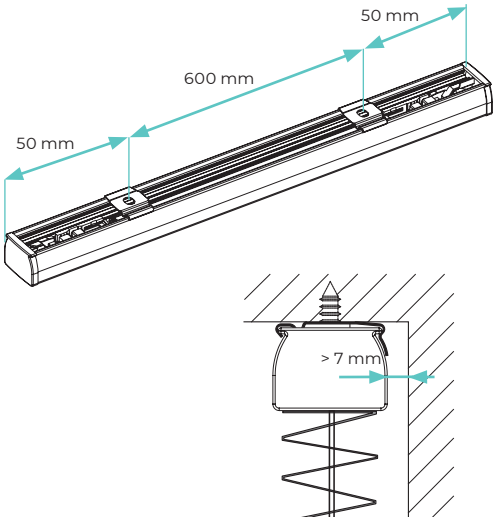



Mount the clips 50 mm from the end of the headrail, and with an intermediate distance of max. 600 mm.

It is recommended to mount the clip with the flap forward (into the room). The clip can only be mounted with the flap toward the window if the distance to the rail is min. 7mm.


Mounting of the pleated blind on the ceiling

1 Mount the clips on the ceiling with a screw

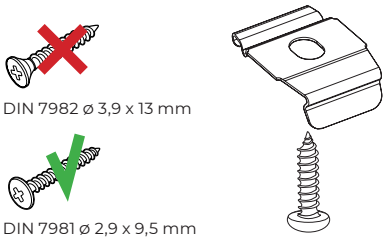

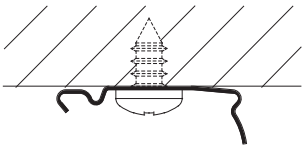

2 Place the profile in the back edge of the clip and push the front of the profile upwards (untill it clicks).

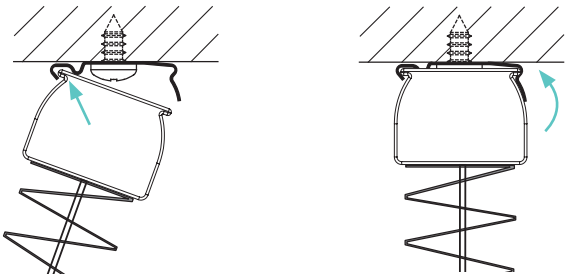

Mounting of the pleated blind on the wall


1 Mount the bracket on the wall and attach the clip.



DIN 7982 ø 3,9 x 13 mm




DIN 7981 ø 2,9 x 9,5 mm

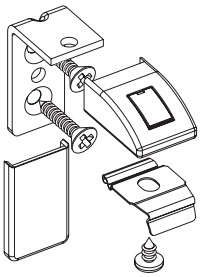





Alternative mounting

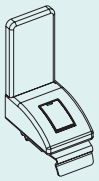

2 Place the profile in the back edge of the clip and push the front of the profile upwards (untill it clicks).

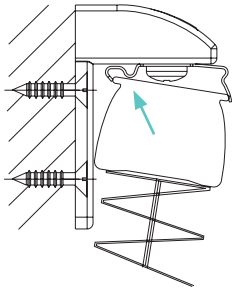

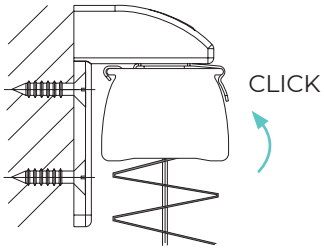

Mounting of the pleated blind with glazing bead support


1 Install the glazing bead support with moulding locking strip and attach the clip.




DIN 7982 ø 3,9 x 13 mm





DIN 7981 ø 2,9 x 9,5 mm

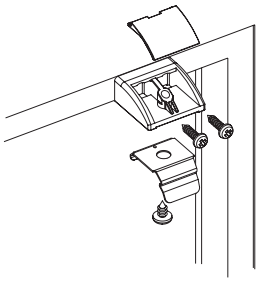

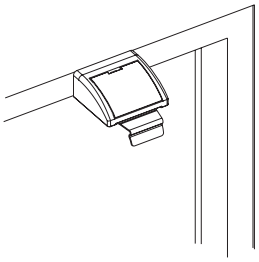


2 Place the profile in the back edge of the clip and push the front of the profile upwards (untill it clicks).

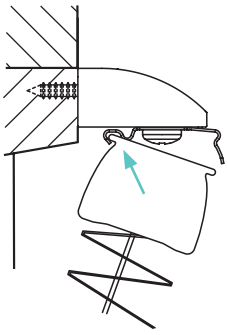

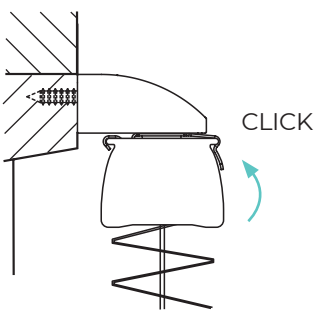


Mounting the pleated blind with block holder

1 Install the block holder and attach the clip.

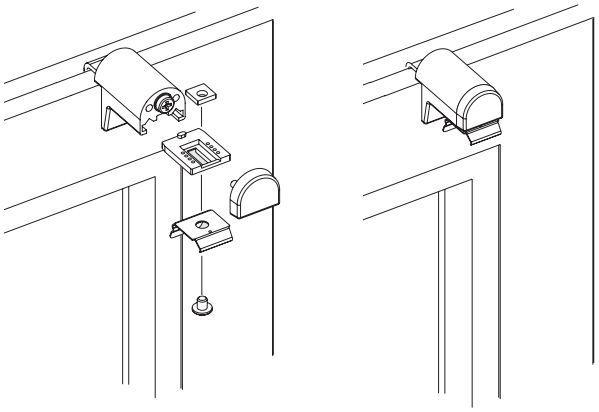


2 Place the profile in the back edge of the clip and push the front of the profile upwards (untill it clicks).

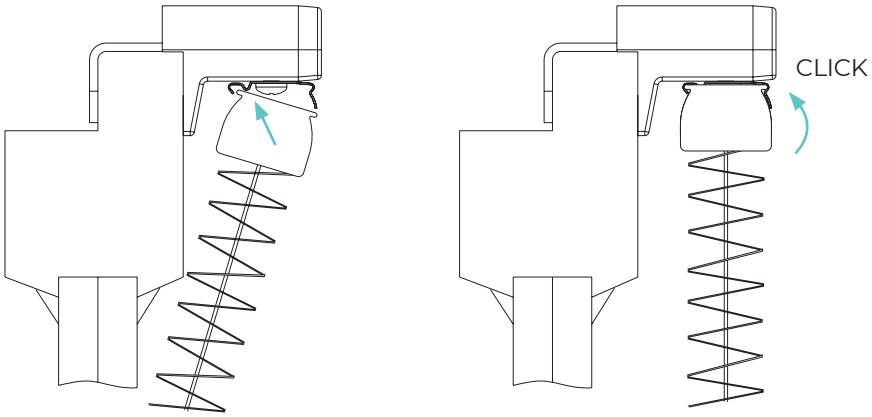


Mounting of tension cord bracket


1 Shut the blind and mark the position for the clamping shoe.

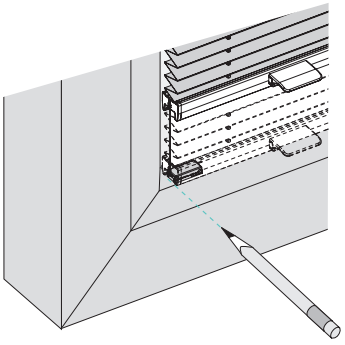

You can also use the fixing template (green) to mark the position.

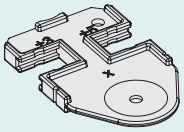


2 Screw on holding brackets, mounting bracket, glazing bead brackets or block holder.

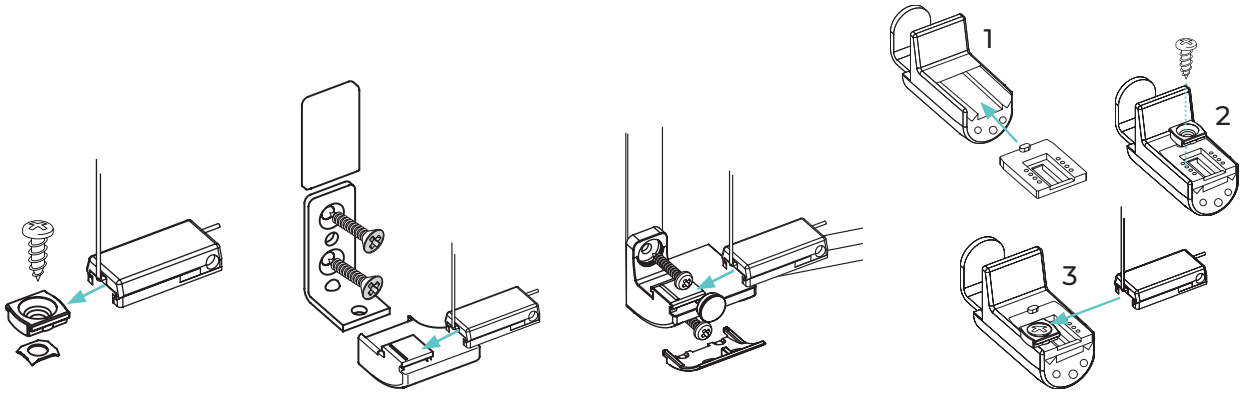


holding brackets **wall support** **glazing bead support** **block holder**

3 Mount handles: slide both handles sideways.

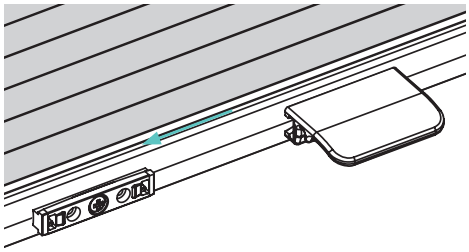


4 Click the operation profile over the tension cord bracket.

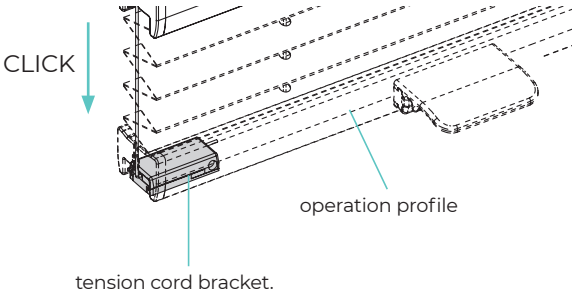

5 Check the tension on the cords by manipulating the blind. (Only for GS1)


a Rigid operation

- Loosen the tension on the cords.
- Mark the amount of tension you want to loose on to the cord. Repeat this identical on the other side.
- Loosen the bracket by using a hexagonal key (b).
- Loosen cord till the mark (c) on the cord. Then reattach bracket (b).

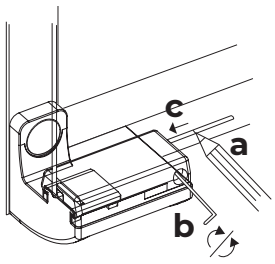


b Pleated blind lowers by itself

- Tighten the tension on the cords.
- Mark the amount of tension you want to tighten on to the cord (a). Repeat this identical on the other side.
- Loosen the bracket by using a hexagonal key (b).
- Tighten cord till the mark (c) on the cord. Then reattach bracket.

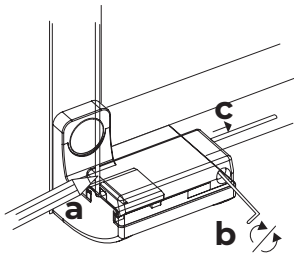

6 Cut off the excess cord ends

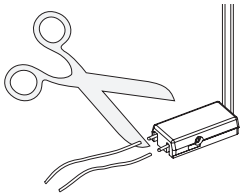

Adjustment of the cord tension must be uniform and can only be done by a professional.