
Manual

GS2-P


DIAZ | SUNPROTECTION

Content

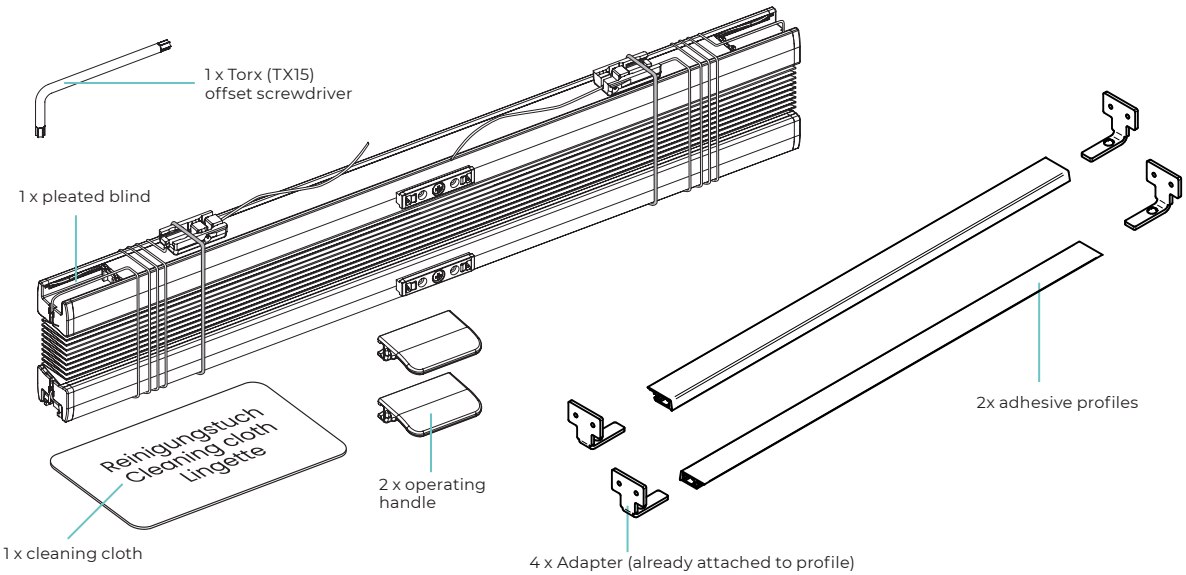


Preparing the window

1 Degrease the window and glass with the **provided wipes***.
Let the surface dry during 5 minutes after degreasing it.

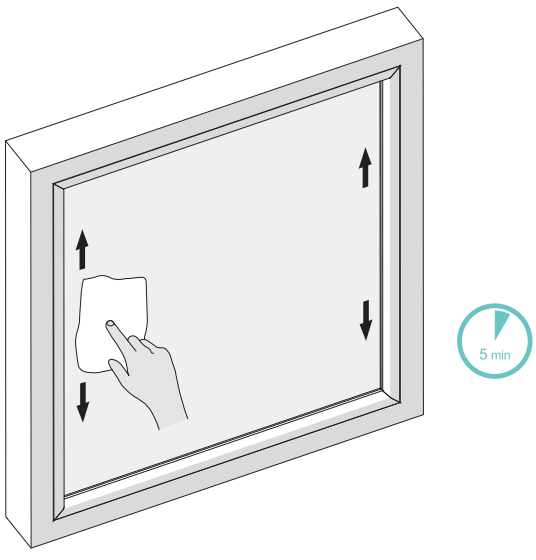

* Do not use detergent or other cleaning products.


2 Slowly pull off the protective films from the adhesive profiles.

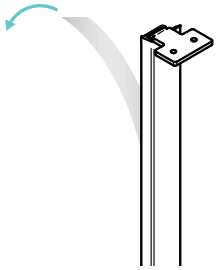

Do not touch the adhesive surfaces

3 Fix adhesive profiles to the window pane.


Place adhesive profile first on the front edge of the glazing bead **(A)** and then push it parallel to the glazing bead towards the glass pane. Press adhesive profile firmly to the fixing substrate **(B)**!

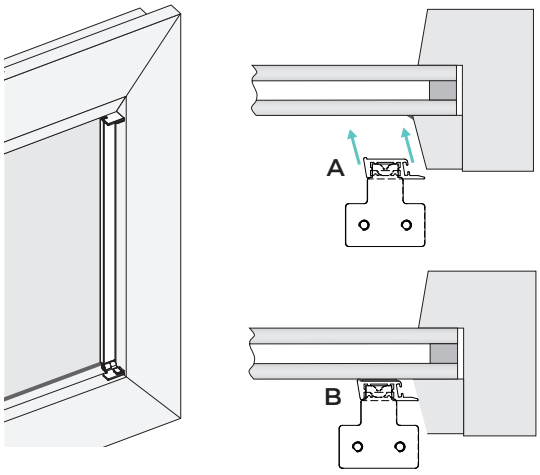


This contact pressure is essential for establishing the best possible adhesive bond, and it prevents the formation of air bubbles


Mounting of the pleated blind

1 Remove rubber band. Unroll cord (with tension cord bracket on top) and remove the tension cord brackets on the bottom from the adaptor.

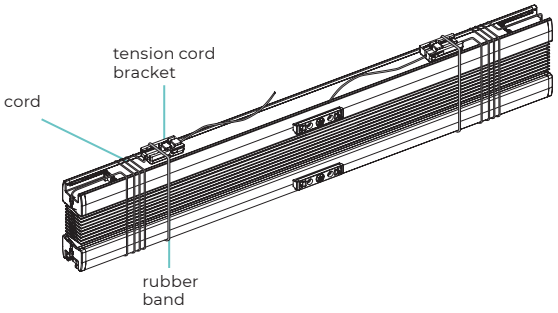


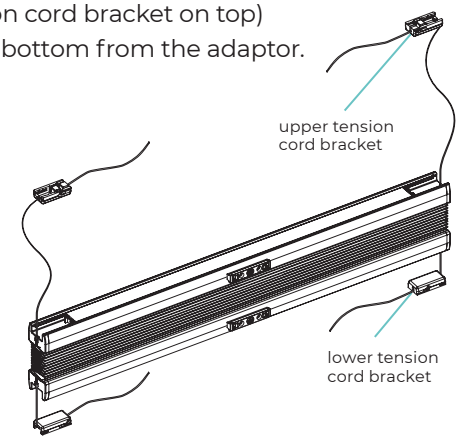


2 Slide the tension cord brackets onto the adapter.

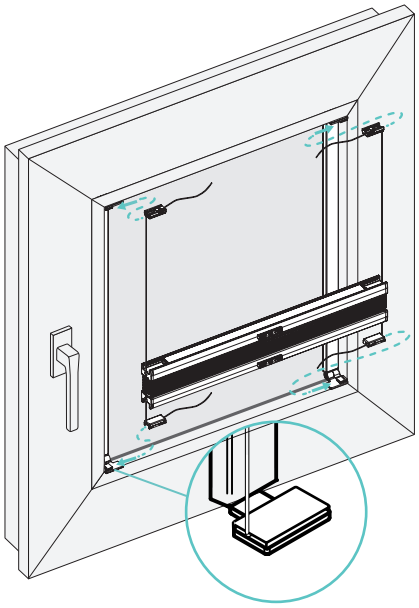

3 Mount handles: slide both handles sideways

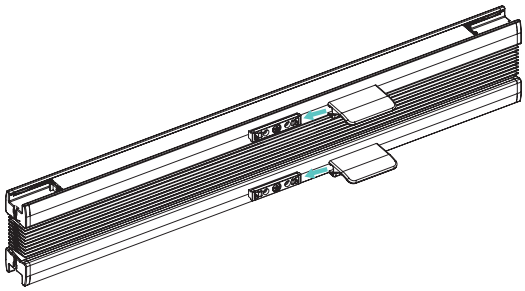


4 Check if the pleated blind functions as prescribed
You can operate by moving the profiles on the operating handle

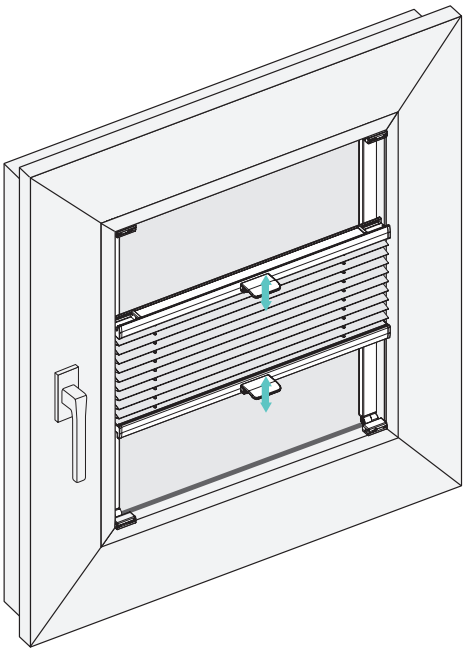

When the profile and the tension cord bracket engage, you will hear a click

5 Cut off the excess cord ends

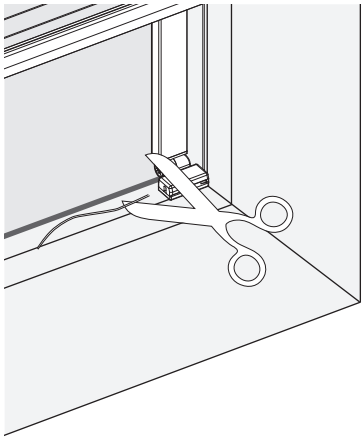

Adjustment of the cord tension must be uniform can only be done by a professional.

Please do not use the blind within the first 6 hours after mounting.
The glue gets stronger during the first 24 hours after mounting.