
Manual

GS2


DIAZ | SUNPROTECTION

General information

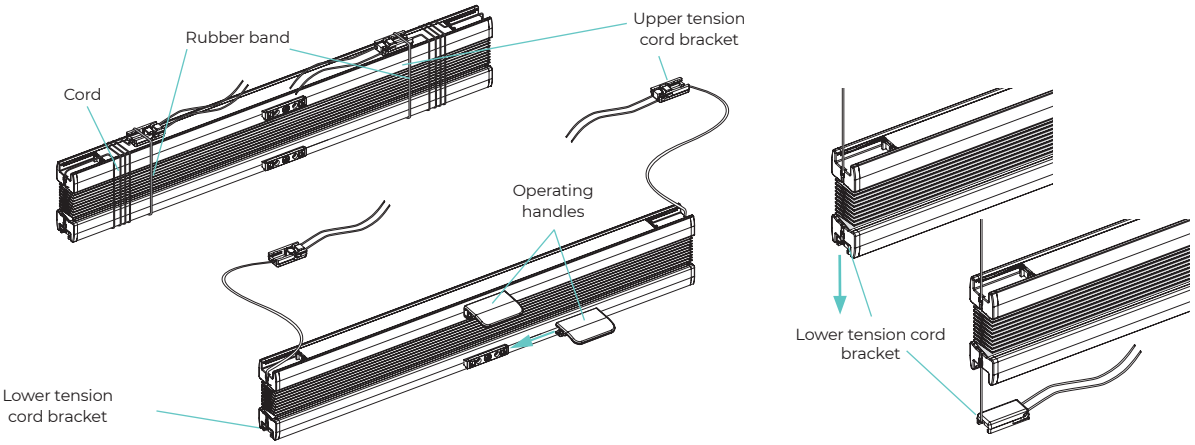


Mounting of the pleated blind in the glazing bead

1 Determine the position of the tension cord bracket and mark it on the window frame.

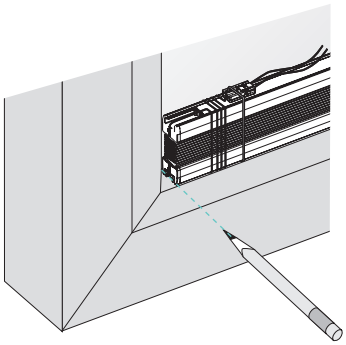

You can also use the fixing template (green) to mark the position. (see separate sheet)

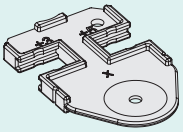

outer edge of the blind = ordered width


2 Screw the fixing plates to the marked position.




DIN 7982 ø 3,9 x 13 mm




DIN 7981 ø 2,9 x 9,5 mm

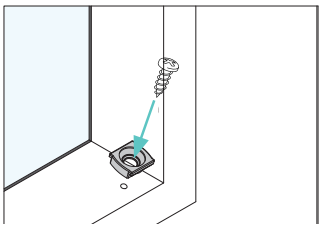


3 Push the upper tension cord brackets over the fixing plates until they lock.

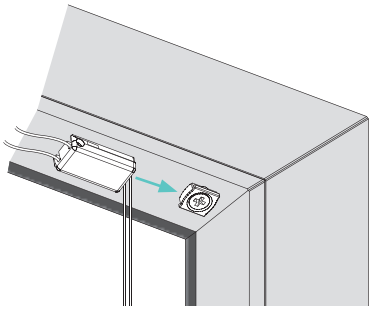

4 Take the lower tension cord brackets out of the rail and push them over the fixing plates until they lock.

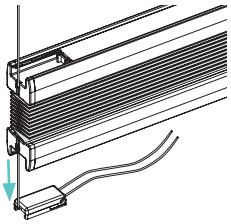

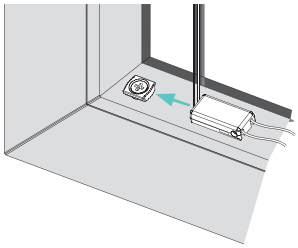

Mounting of the pleated blind with mounting bracket


1 Mount the top brackets and push the tension cord brackets over it.




DIN 7982 ø 3,9 x 13 mm




DIN 7981 ø 2,9 x 9,5 mm

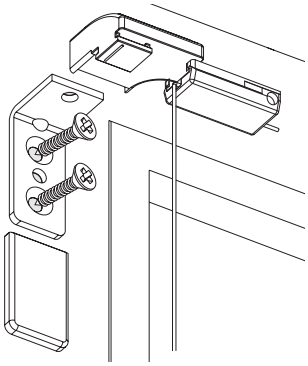

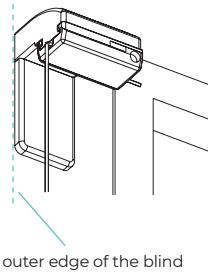

outer edge of the blind

i Alternative mounting

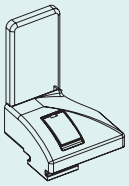


2 Mount the bottom brackets and push the tension cord brackets over it.




DIN 7982 ø 3,9 x 13 mm




DIN 7981 ø 2,9 x 9,5 mm

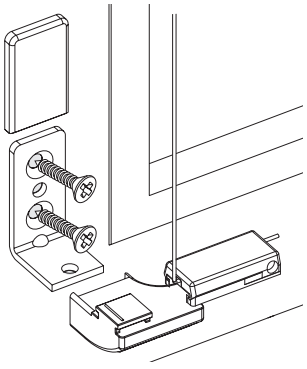

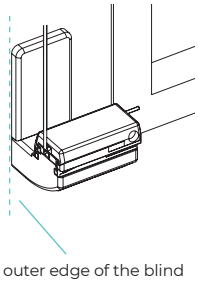

outer edge of the blind

i Alternative mounting

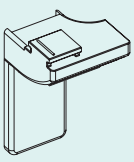

Mounting of the pleated blind with glazing bead support


1 Install the supports at the top with moulding locking strip and push the tension cord brackets over it.




DIN 7982 ø 3,9 x 13 mm



DIN 7981 ø 2,9 x 9,5 mm

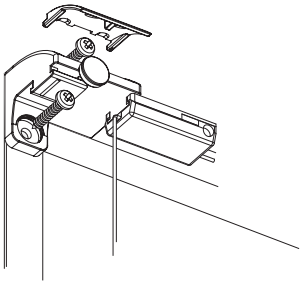

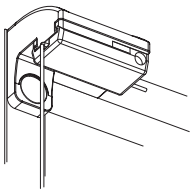


2 Install the supports at the bottom with moulding locking strip and push the tension cord brackets over it.




DIN 7982 ø 3,9 x 13 mm




DIN 7981 ø 2,9 x 9,5 mm

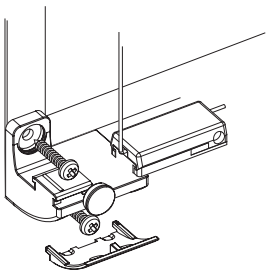

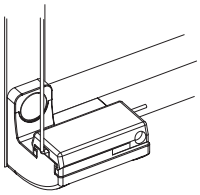


Mounting of the pleated blind with mounting bracket.

1 Mount the mounting brackets at the bottom and push the clamps over them.

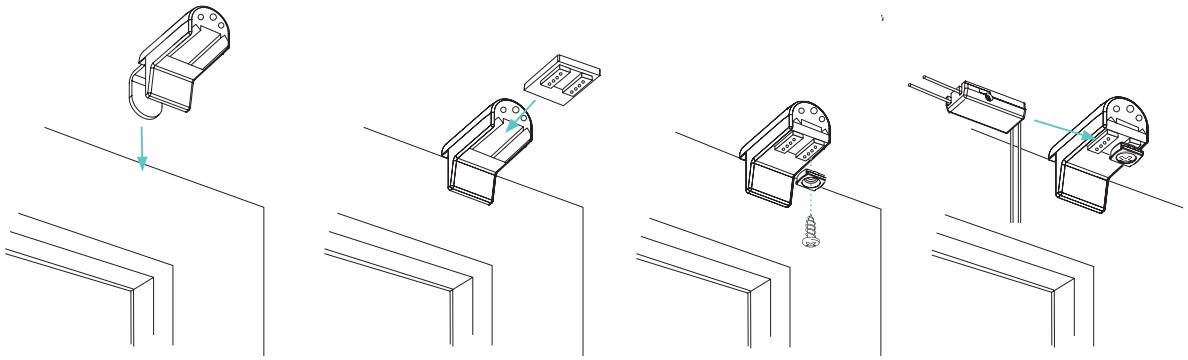


2 Mount the mounting brackets at the top and push the clamps over them.

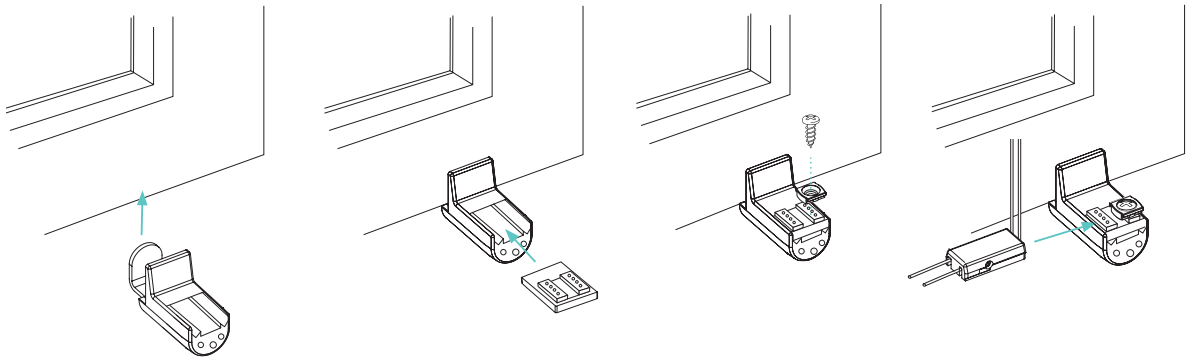


Finishing of the blind

1 Mount handles: slide both handles sideways.

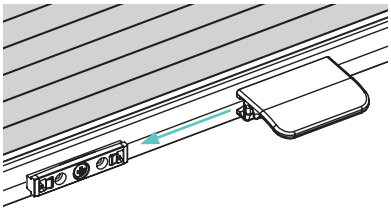


2 Click the operation profile over the tension cord bracket.

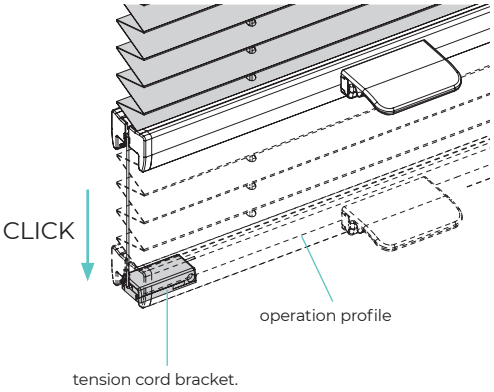

3 Check the tension on the cords by manipulating the blind.


a Rigid operation

- Loosen the tension on the cords.
- Mark the amount of tension you want to loose on to the cord. Repeat this identical on the other side.
- Loosen the bracket by using a hexagonal key (b).
- Loosen cord till the mark (c) on the cord. Then reattach bracket (b).

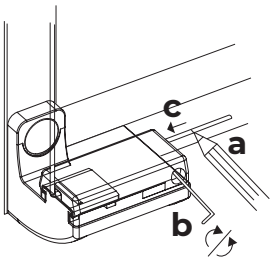


b Pleated blind lowers by itself

- Tighten the tension on the cords.
- Mark the amount of tension you want to tighten on to the cord (a). Repeat this identical on the other side.
- Loosen the bracket by using a hexagonal key (b).
- Tighten cord till the mark (c) on the cord. Then reattach bracket.

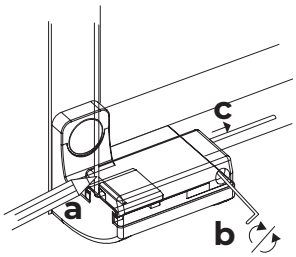

5 Cut off the excess cord ends.

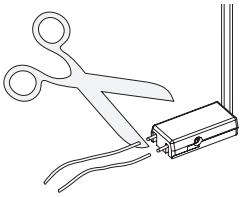

Adjustment of the cord tension must be uniform and can only be done by a professional.