
Manual

GS2 with special clamping carrier

DIAZ | SUNPROTECTION


Content

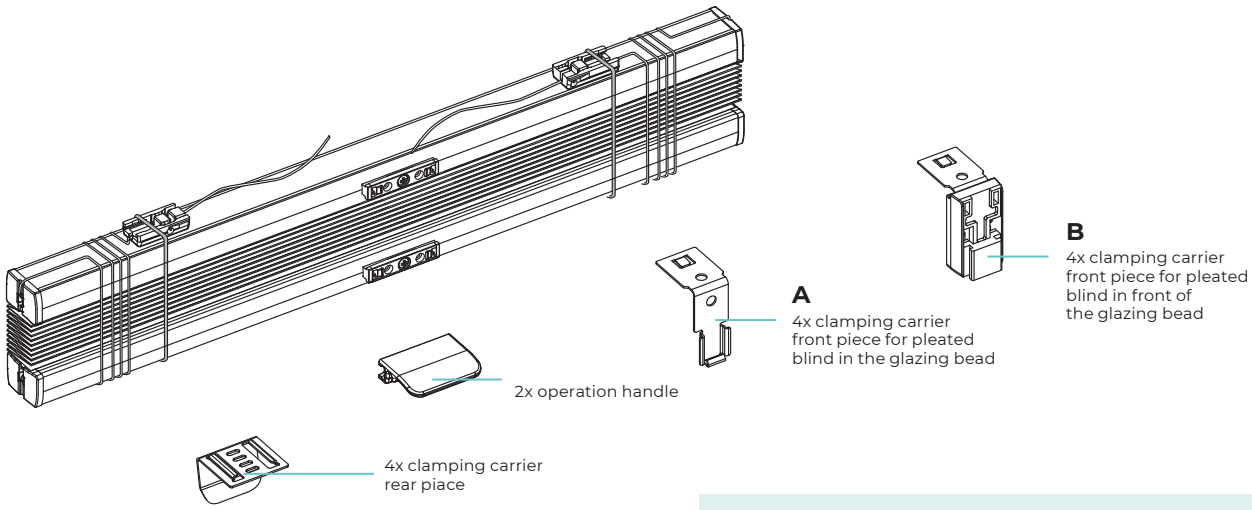

Depending on the mounting in the glazing bead **(A)** or in front of the glazing bead **(B)**, you receive different clamping carrier front pieces.


Mounting the pleated blind

1 Mount handles: slide both handles sideways

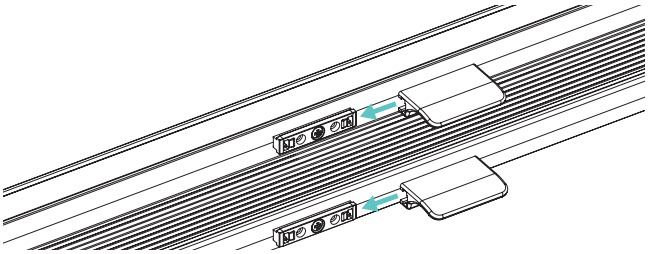


2 Determine the position of the clamping carrier and mark the setting on the window frame.

in the glazing bead

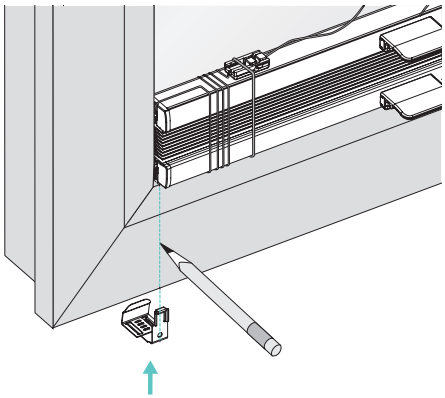

in front of the glazing bead

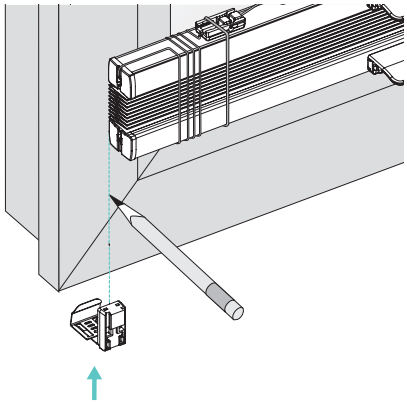


outer edge of pleated blind
= centre of clamping carrier


The setting width can be easily determined by laying the blind on the window, and marking the outer edge of the pleat.

3 Fit the clamping carrier to the marked position on the window frame and press together until it clicks.

in the glazing bead

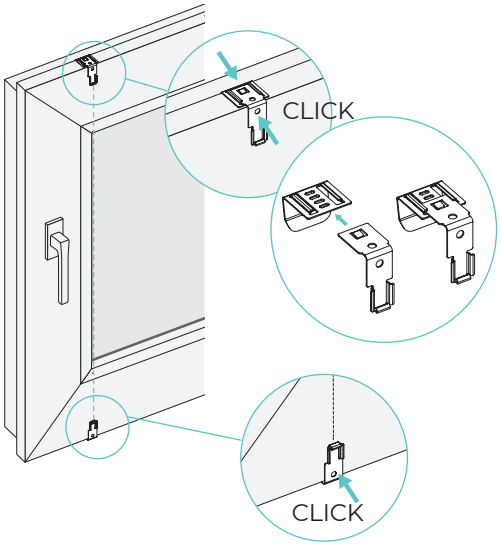


in front of the glazing bead

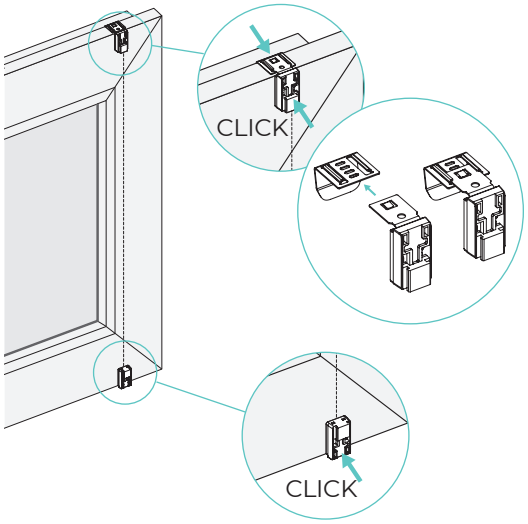


Once the 2 parts of the clamping carrier have been clicked together, they can no longer be detached.

4 Remove the rubber band and unwind the cord incl. tension cord bracket

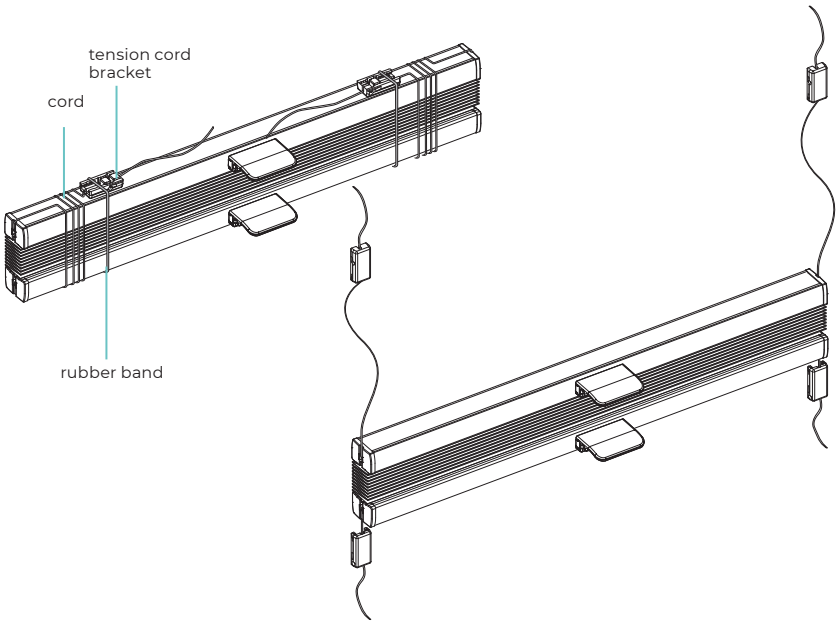


5 Slide the tension cord bracket onto the clamping carrier

in the glazing bead

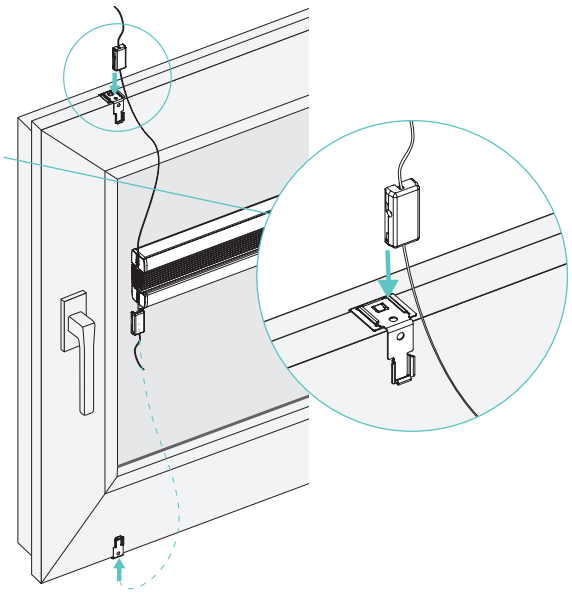


in front of the glazing bead

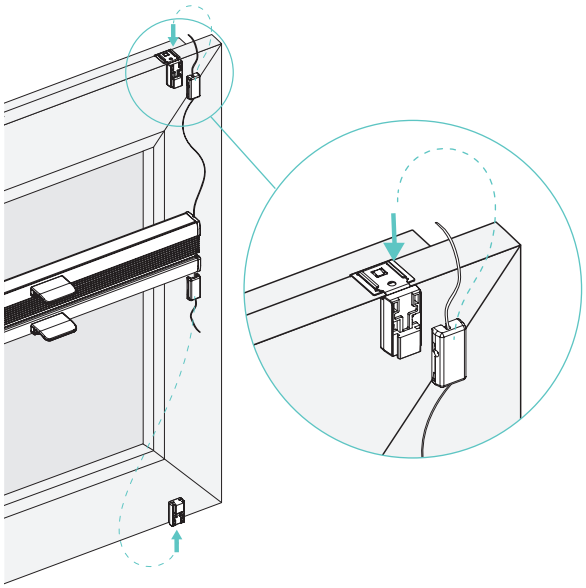


6 Check if the pleated blind functions as prescribed
You can operate by moving the profiles with the operating handle


in the glazing bead

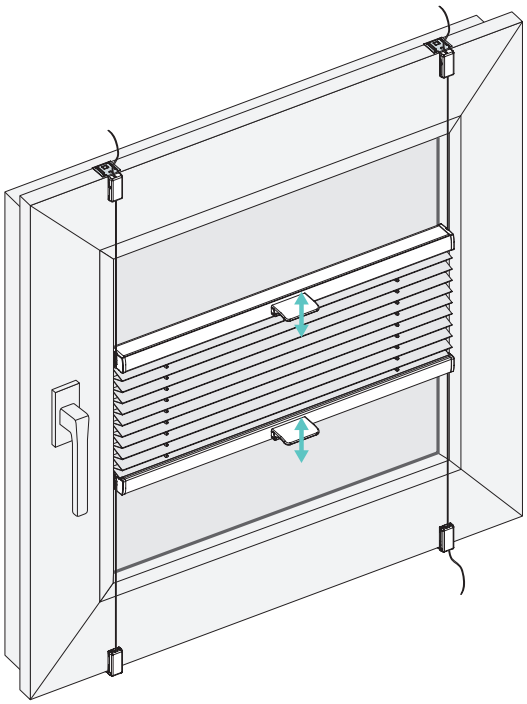

in front of the glazing bead

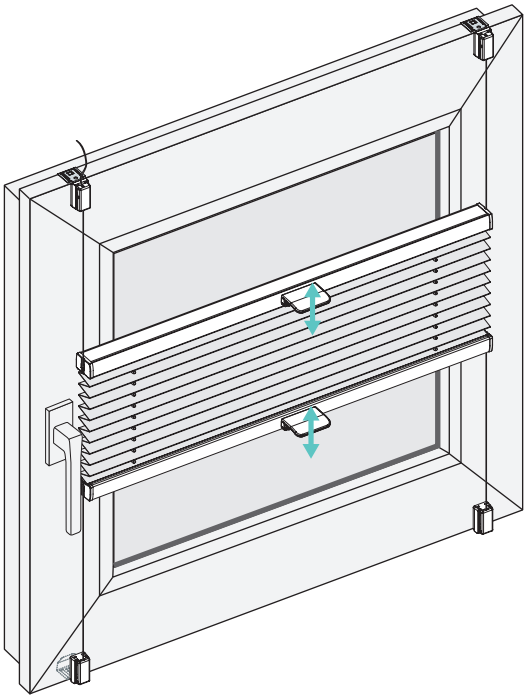

7 Cut off the excess cord ends

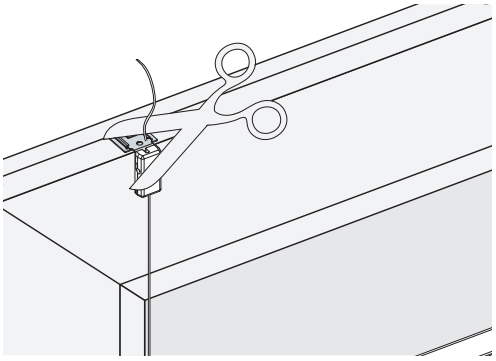

Adjustment of the cord tension must be uniform and can only be done by a professional.