
Manual

PK1/PK2/PK3/PK2-E/PK3-E

DIAZ | SUNPROTECTION


Content

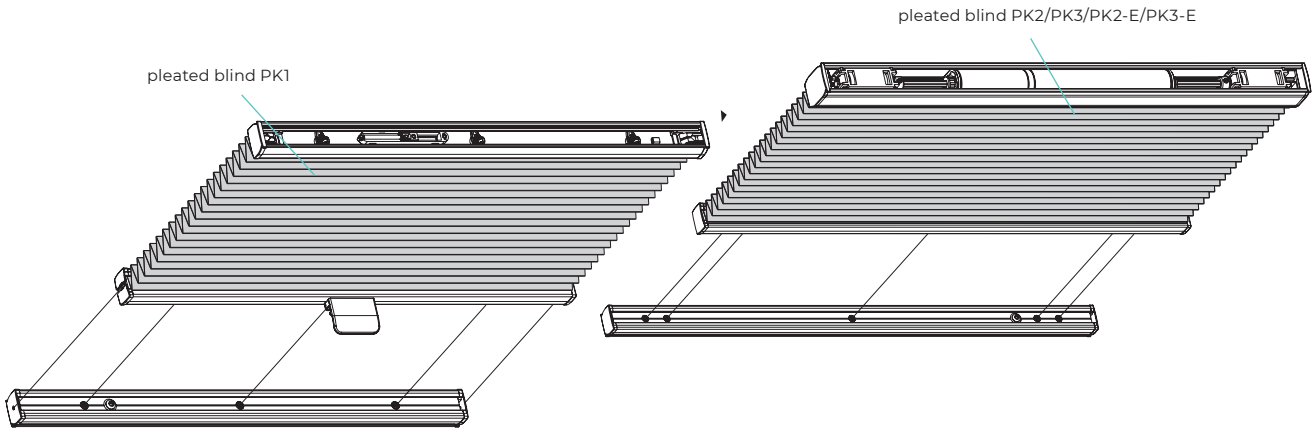


Placement of the clips on the profile

Make sure that the distance between the clip and the end of the pleated blinds is 50 or 65 mm.

bottom profile PK1/PK2/PK3/PK2-E/PK3-E + top profile PK1

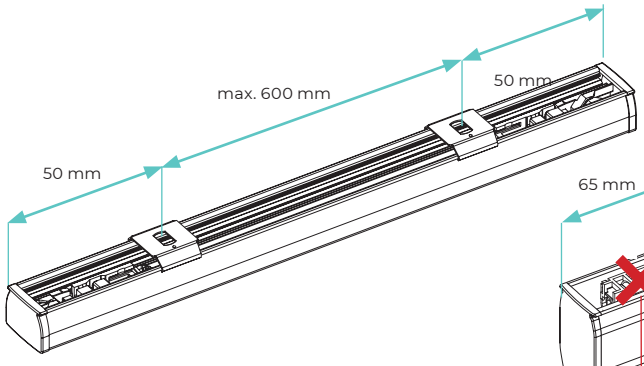


top profile PK2/PK3/PK2-E/PK3-E

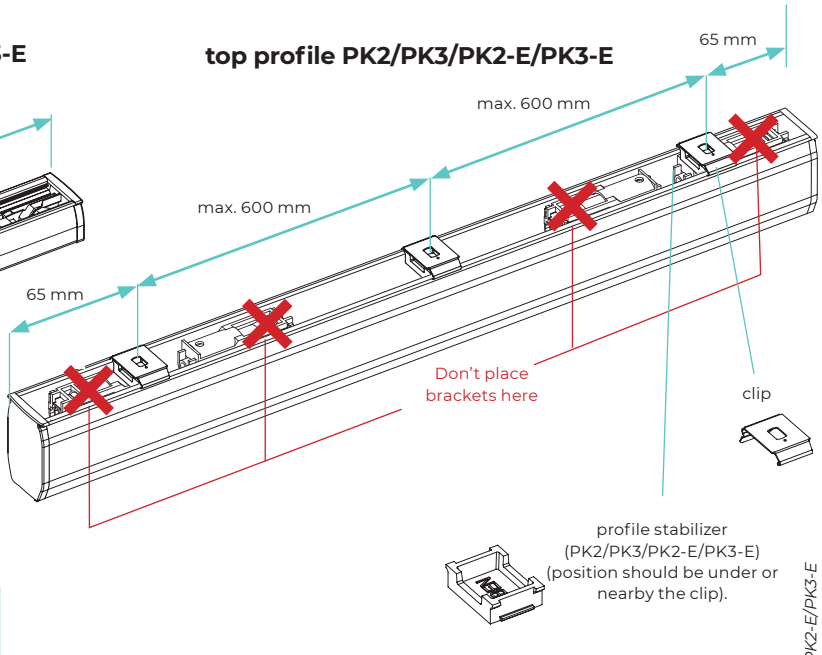


Attention! Make sure the brackets are not fixed on top of the spools in the headrail.


Mounting of the pleated blind

1 Mount the clips with a screw

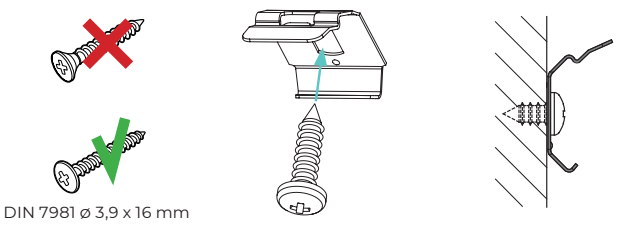


2 Insert the profile in the bottom edge of the clip and press it upwards (until it clicks).

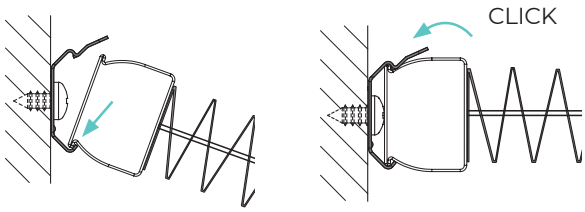

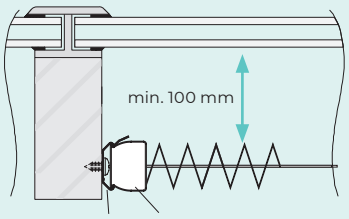


Please ensure that there is a gap of at least 100 mm between the pleated blind and the glass pane to ensure sufficient ventilation. Furthermore, allowance should be made for ventilation gaps. If the air circulation is inadequate, this may lead to heat accumulation and the formation of condensation. We cannot accept any liability for damage to fabric caused by drip water or insect excrement.

Alternative mounting:
Mounting of the pleated blind with mounting profile.
See separate manual for the mounting of the mounting profile.

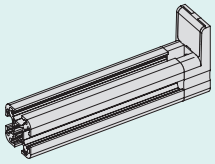

Tension the wire

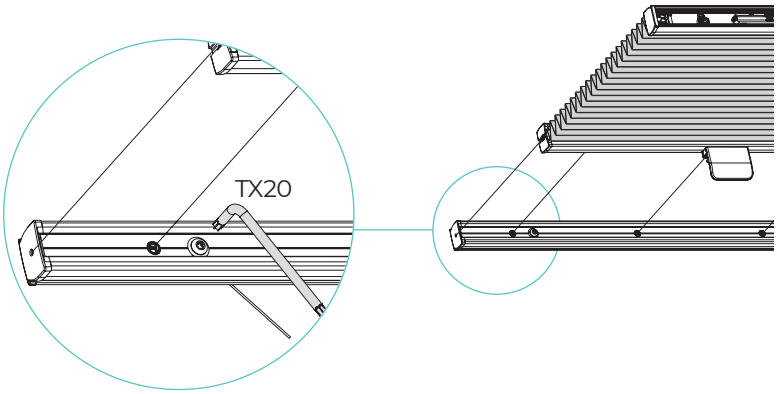

1 Secure the end of the wire by hand or using pliers.

2 Release the screw (TX20) slightly (turn anti-clockwise).

3 Tension the wire (by hand or use pliers).


4 Tighten the screw (turn clockwise).

5 Cut off the excess wire ends.

For pleated blinds with more than 1 wire, repeat steps 1 to 4. Do this before starting step 5.


Operation PK1

The PK1 system is opened and closed by moving the operating handle, using the control rod if necessary.

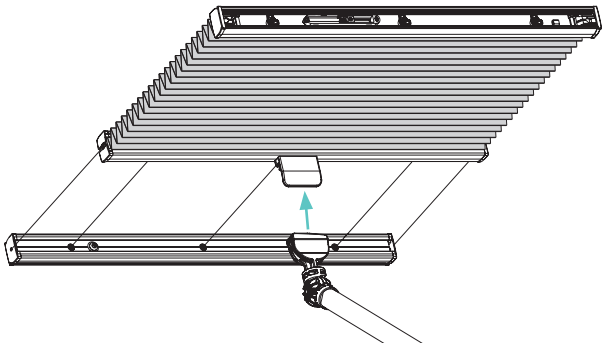

Operation PK2/PK3

The PK2 and PK3 system is opened or closed by turning the crank handle.
Attach the crank handle to the crank gear box.

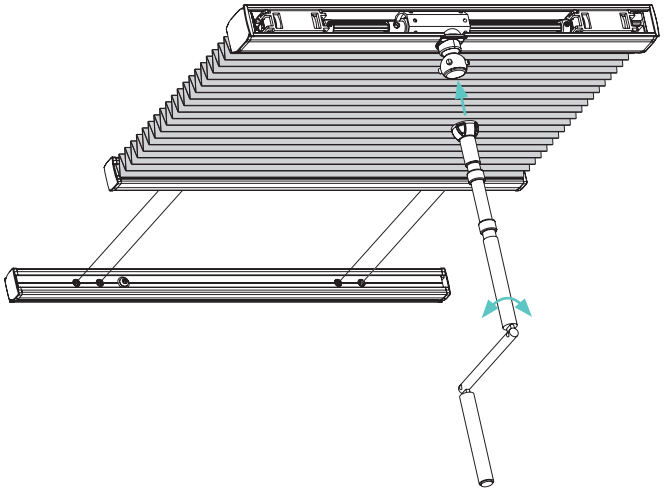

Operation PK2-E/PK3-E

The PK2-E and PK3-E system is a motorised system.
Consult the electric installation instruction for a correct installation.

