

Manual

VH XL TDBU

DIAZ | SUNPROTECTION


Content

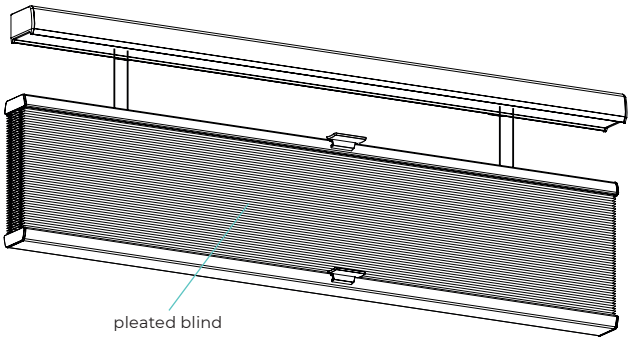


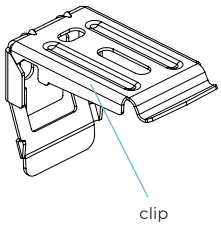

Mounting of the pleated blind

1 Mount the clips max. 75 mm from the end of the headrail and with an intermediate distance of max. 750 mm.

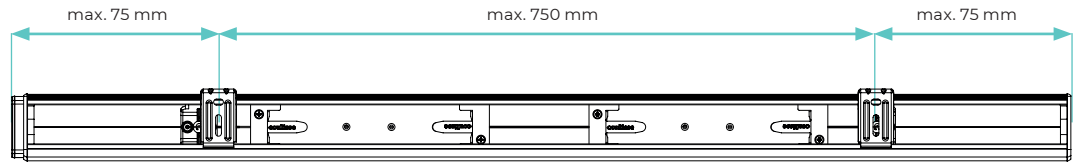

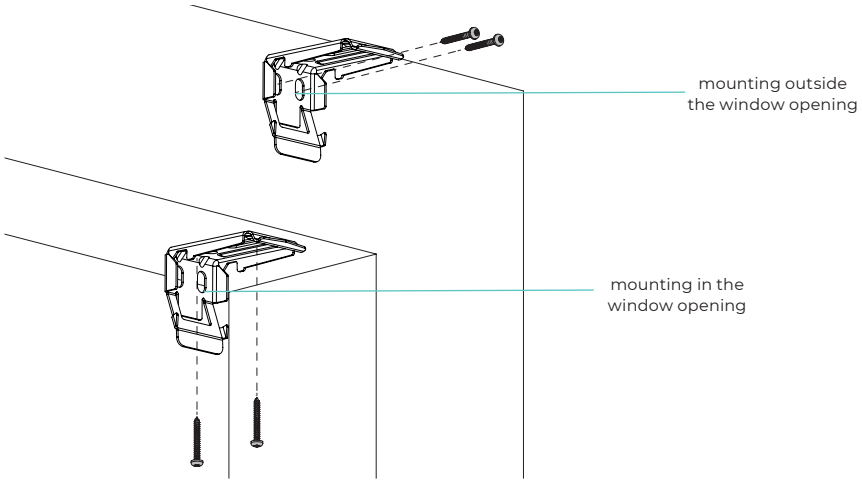

2 Place the profile in the front edge of the clip and push the back of the profile upwards (until it clicks).

