
Manual

Measuring the Clickfix

DIAZ | SUNPROTECTION

Scan code for video manual

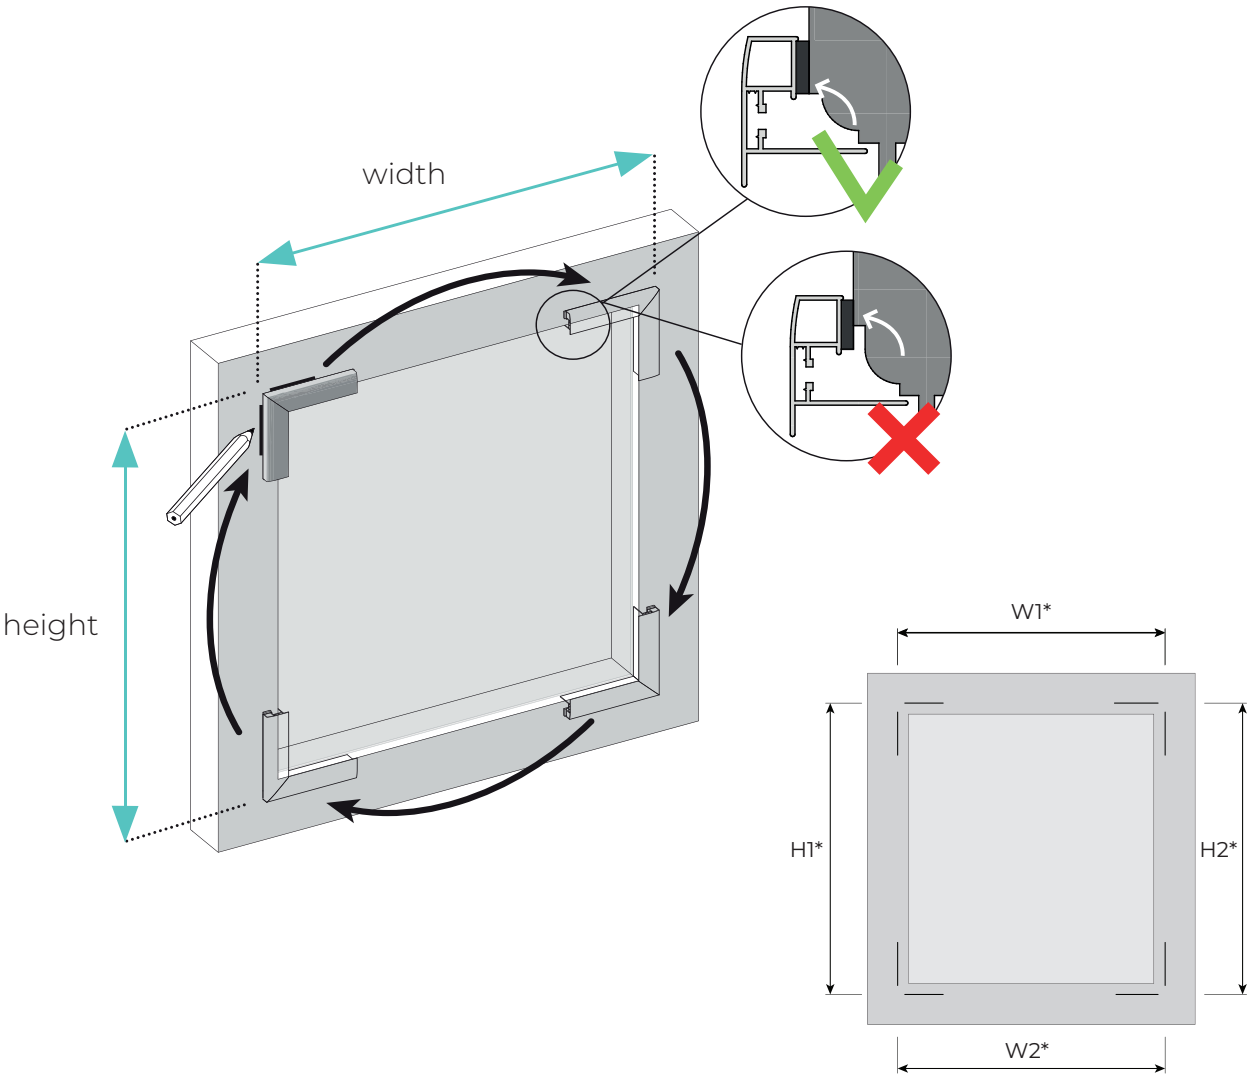

1 Use our measuring tool to measure a window for Clickfix. Make sure the magnetic tape covers the window frame completely. If this isn't the case, the window isn't appropriate for the Clickfix.

2 Put the measuring tool in all four corners and mark the outsides.
Measure the window from line to line. Order these measures as finished measures.

Attention: we deduct 5 mm in width and height for the production of the mounting frame, so do not deduct anything from the measurements you have mesured.