Manual


DIAZ | SUNPROTECTION

Installation Clickfix

This manual only contains information on the installation of the mounting frame.
For the installation instructions for the pleated or horizontal blind, please refer to the respective manuals.

Prepare the window


1 It is important to degrease the surface on which you will mount with the towels that were sent.
Let the surface dry during 5 minutes after degreasing it.

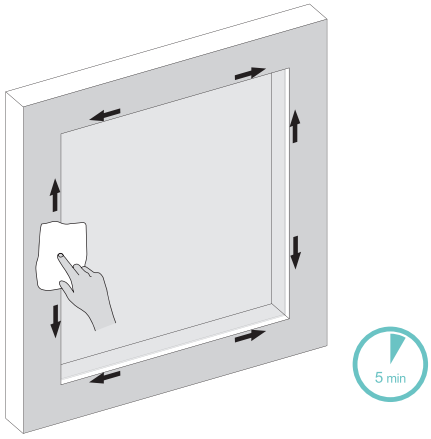


***** Isopropanol can also be used for degreasing. Do not use detergent or commercial degreasers.

After degreasing and applying the primer, do not touch the surface, as this reduces adhesion.

2 Put primer on the surface. The primer contains a capsule which you should break by pressing the black circle. Then, the primer coating can be applied.
Let the surface dry another 5 minutes.

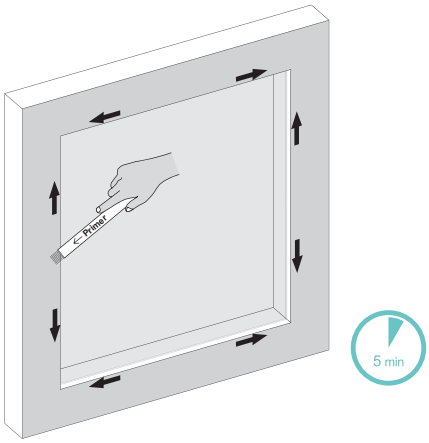


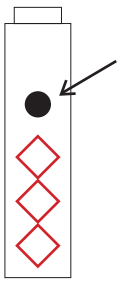

Press the black circle to break the capsule before appliying the primer.


Prepare the Clickfix

1 Ensure that the top magnetic strip hangs on the already adhered strip with the protective film facing upwards. Do NOT remove the green coloured protection foil of the upper magnetic strip!

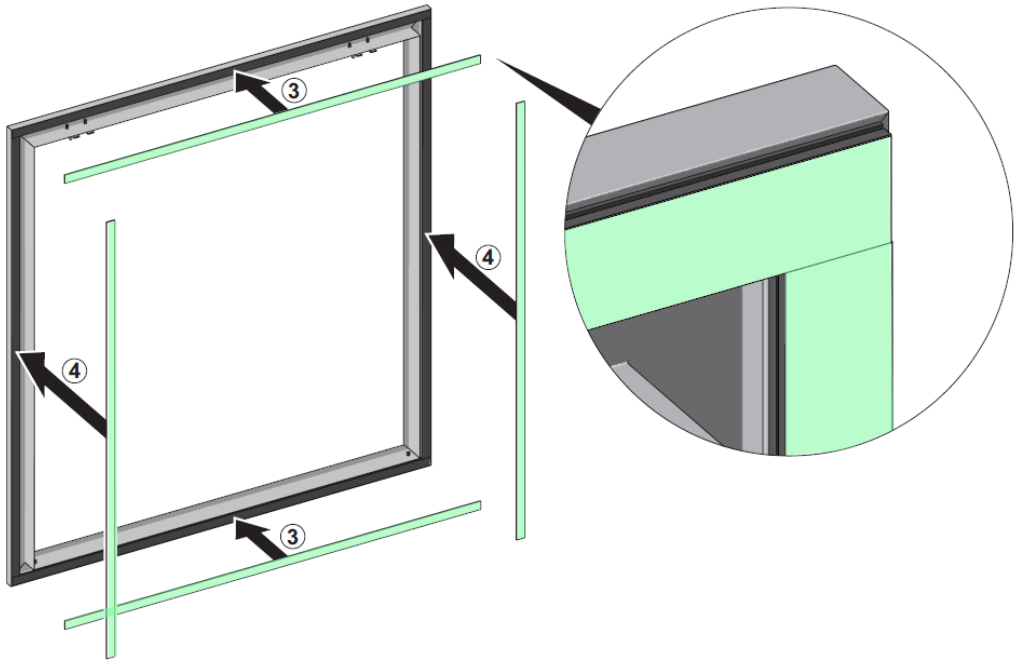


Preparing for installation.

1 First pose your frame on the window before removing the protective film.

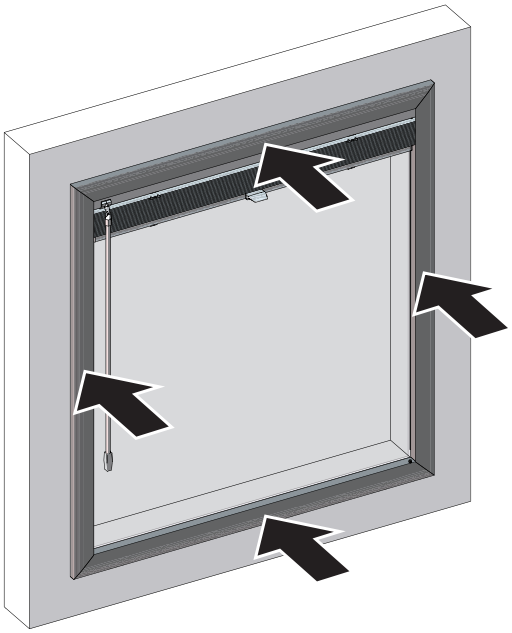


Install the Clickfix


1 Remove the protection foil of the magnetic strip

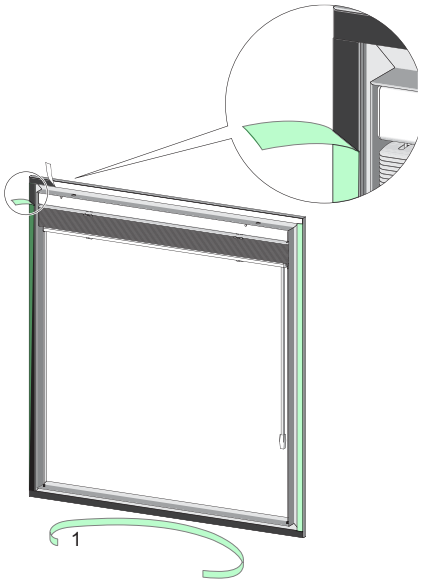

During and after removing the protective film, do not touch the magnetic strip, as this reduces adhesion.

1 Put the frame onto the window frame. Start at the bottom, and work your way up. Fix the frame by pushing the entire frame evenly.

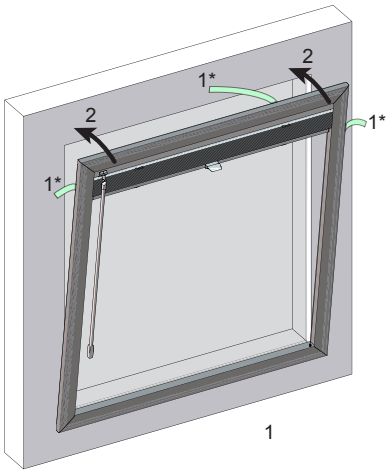

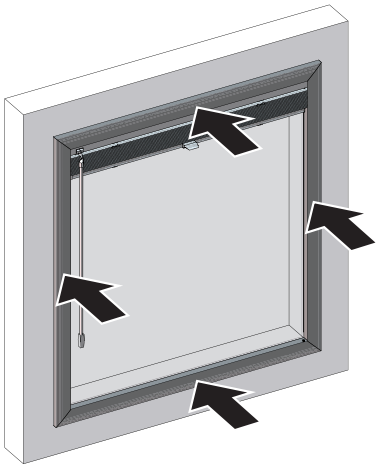

ATTENTION! Fix your frame only onto a dry & dust-free surface.

Please do not use the blind within the first 6 hours after mounting.
The glue in the magnetic tape gets stronger during the first 24 hours after mounting.