
Installation manual

Illusion

DIAZ | SUNPROTECTION


Placement of the Illusion

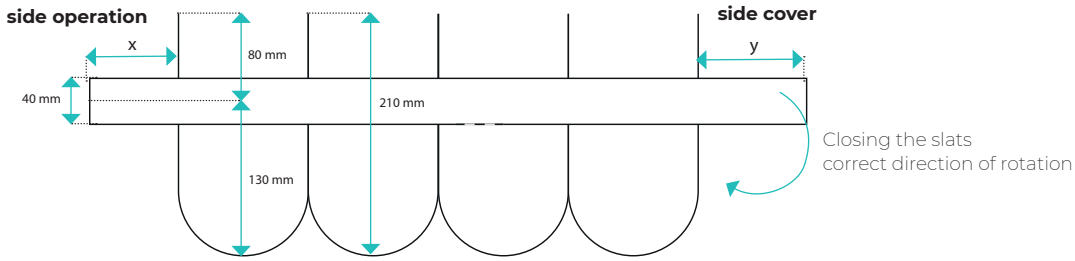

	side operation x	side cover y
operation with cord and chain / monocommand	75 mm	75 mm
operation with rod / electric operation	65 mm	75 mm

Unpack slats

1 All slats are delivered on one roll. Unpack the slats by rolling out the slats onto a flat surface.

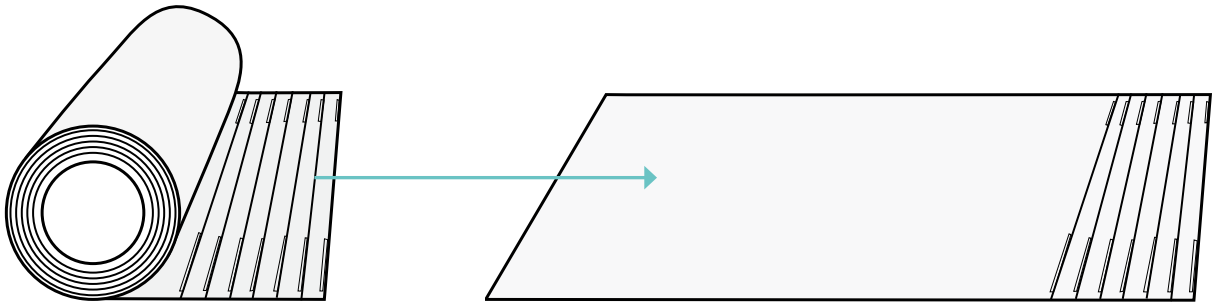


Attach slats

1 Make sure that all the hooks are in front of the window and the opening of the hooks is pointed towards you, as shown below.




If electrical, first connect the rail to the electricity and do the installation. See manual electrical vertical blind. Once the rail has been connected and installed you can put the hooks in the correct direction.

2 Now take the first slat and click the slat holder into the hook

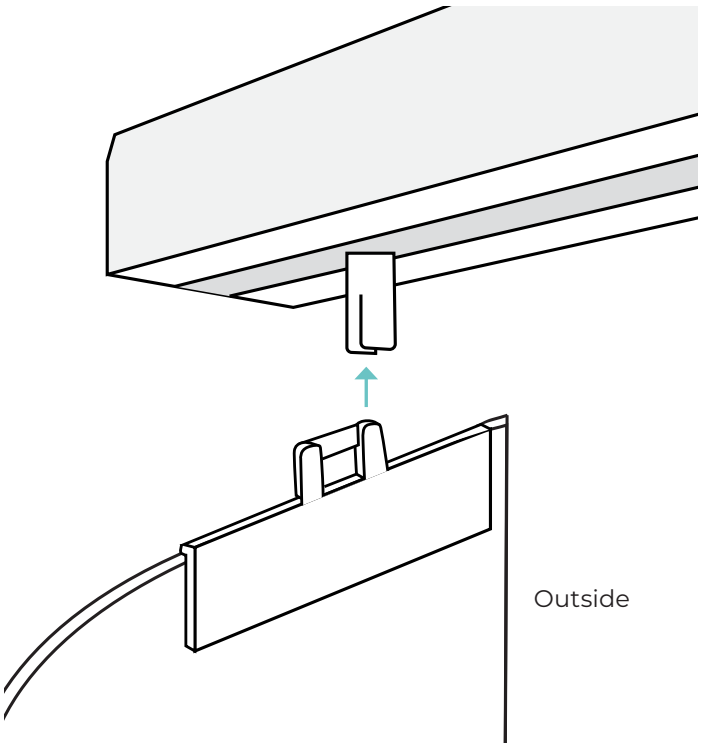

3 Take the second slat and click the slat holder of the first and second slat together in the next hook of your rail.

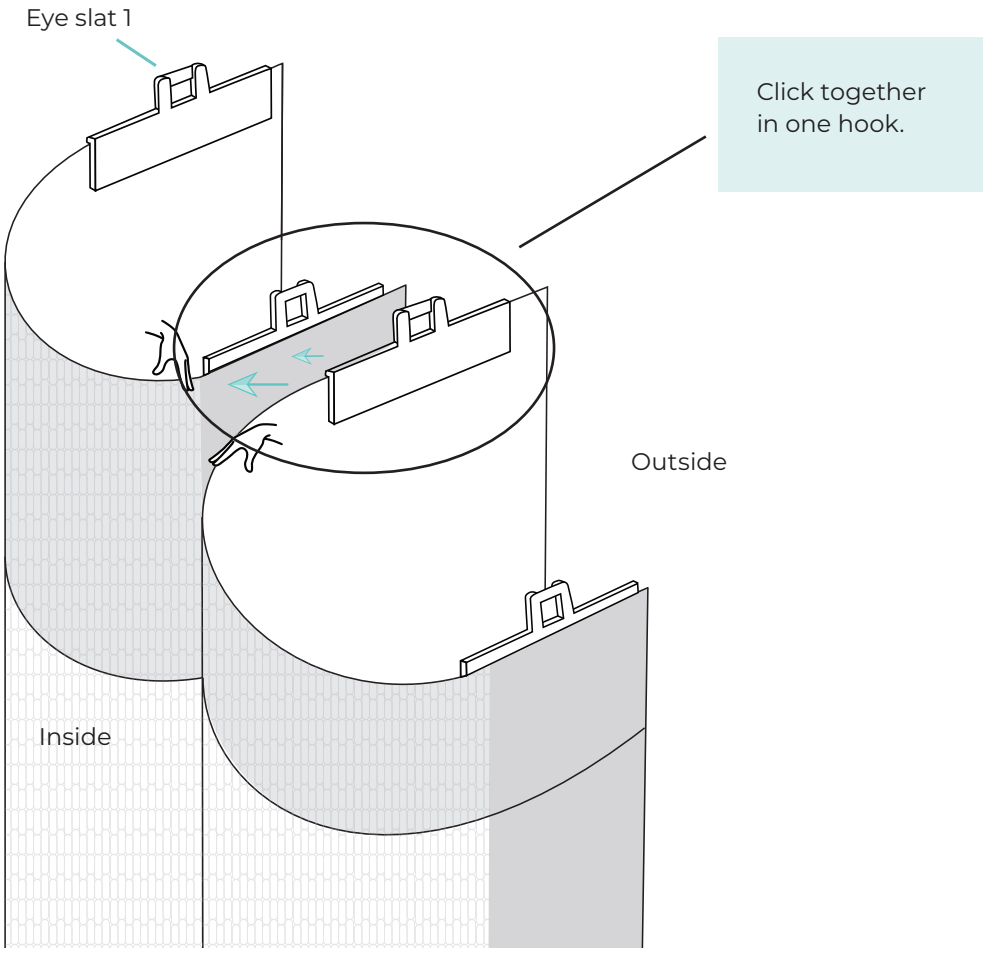

4 Repeat this for all the slats.