
Installation manual

TruFit®

DIAZ | SUNPROTECTION

Installation


1 Degrease the window and glass with the **provided wipes***.
Let the surface dry during 5 minutes after degreasing it.

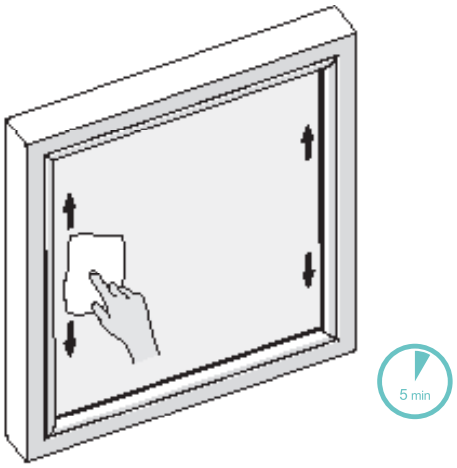


* Do not use detergent or other cleaning products.

Place the adhesive profiles according to the measurement. Do not stick on the seals.


2

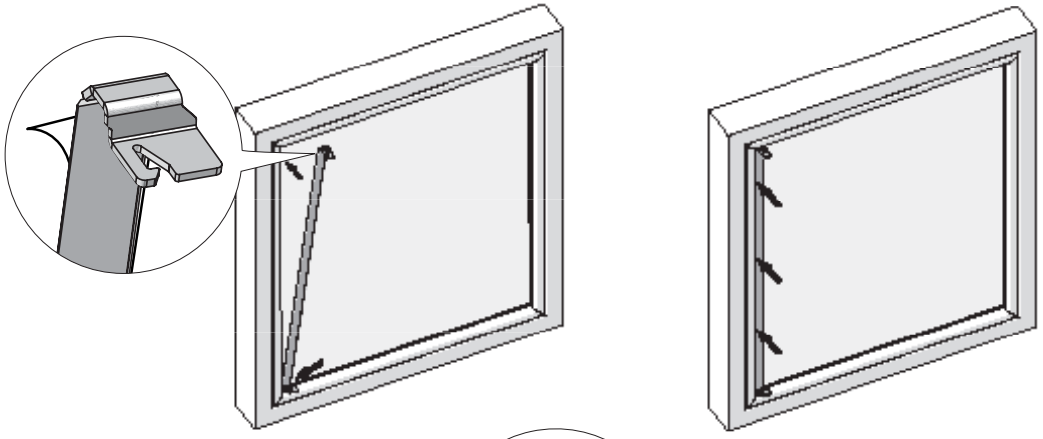

3

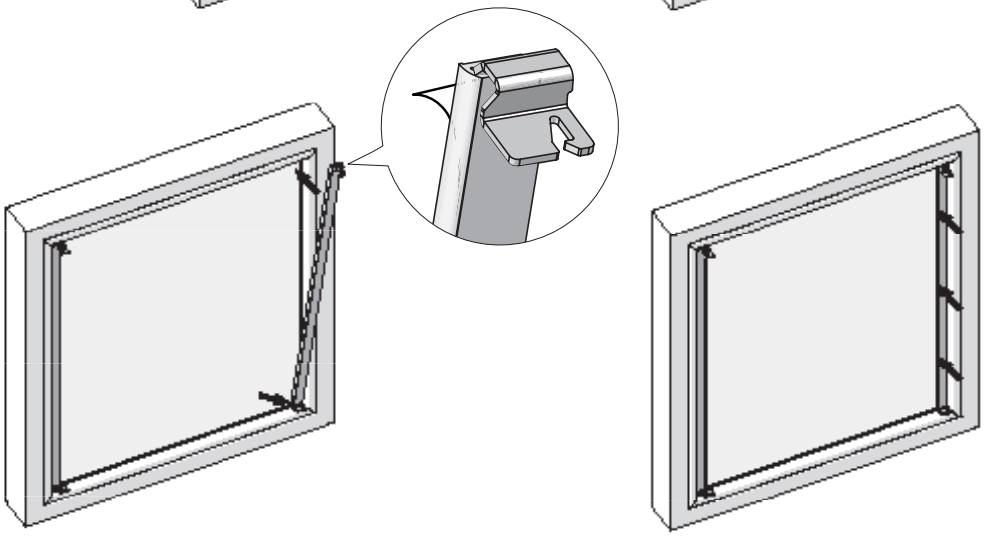


4

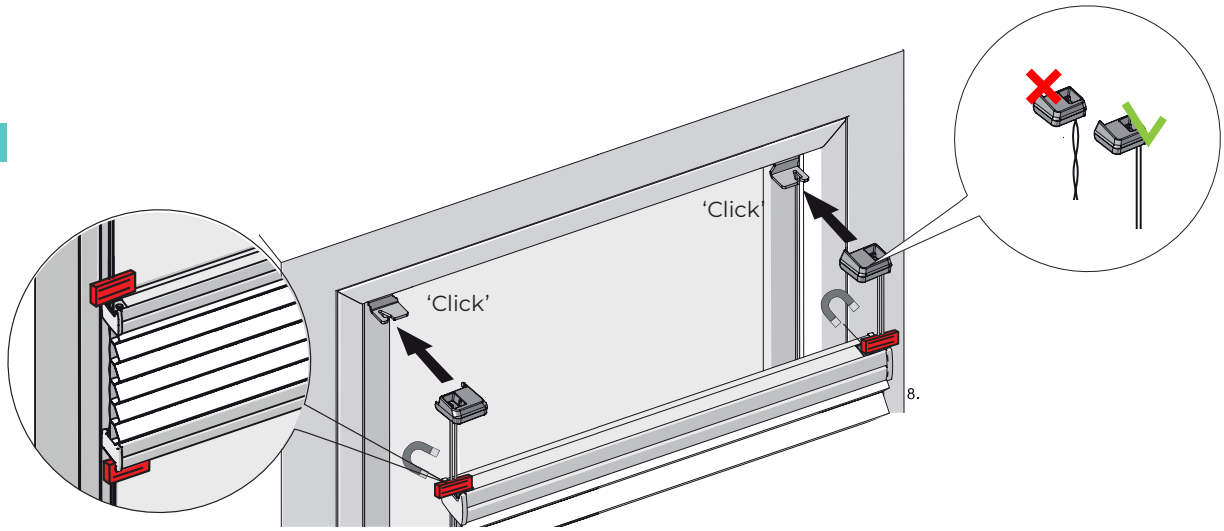


Do not remove the red clamps until after installation.

5

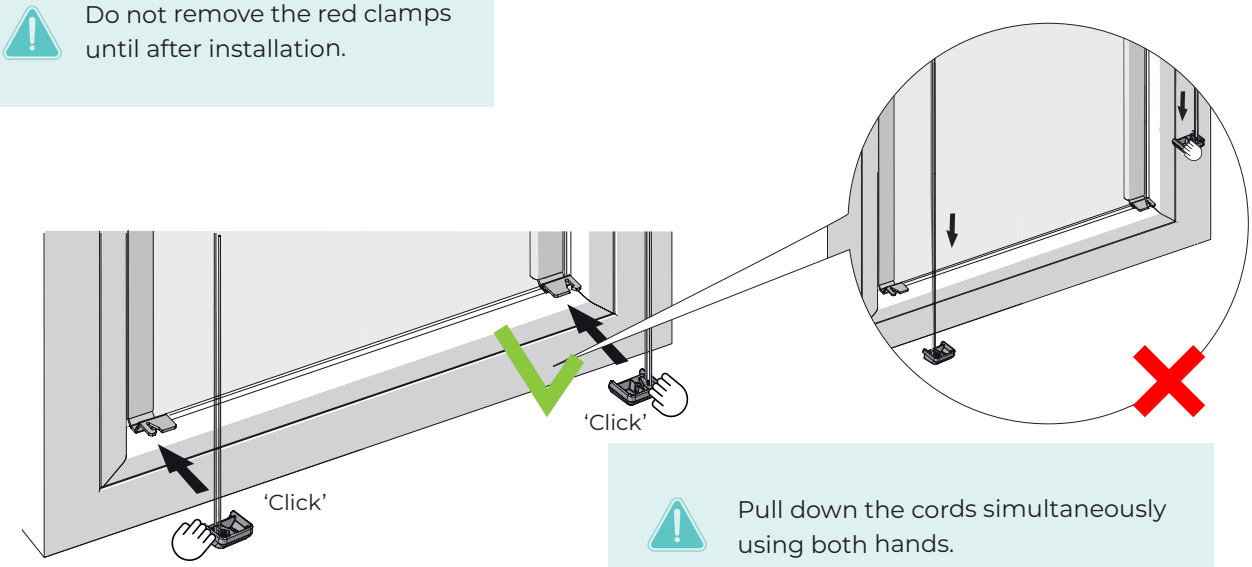


Pull down the cords simultaneously using both hands.

6

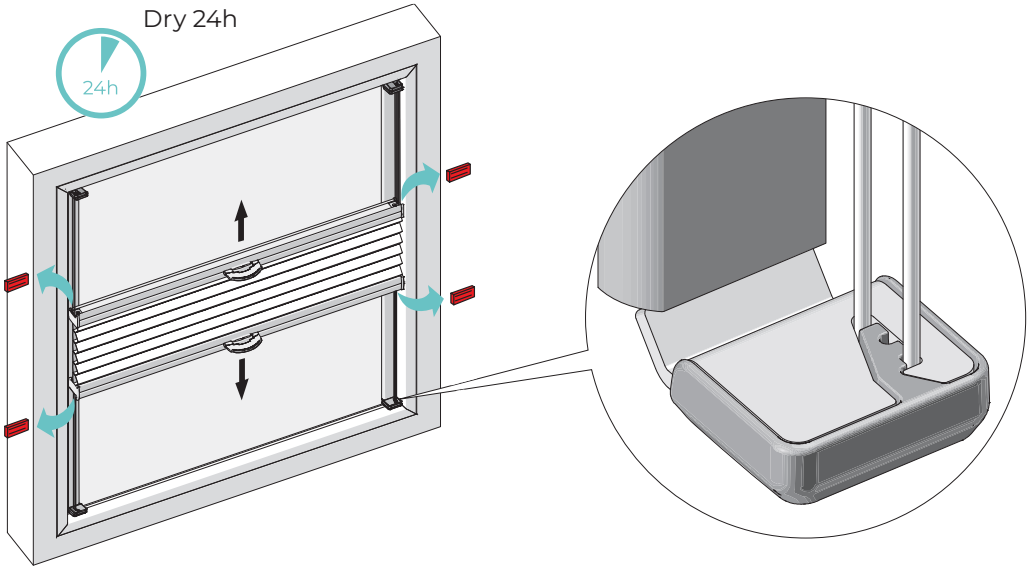


Please do not use the blind within the first 6 hours after mounting.
The glue gets stronger during the first 24 hours after mounting.

9 Level headrail

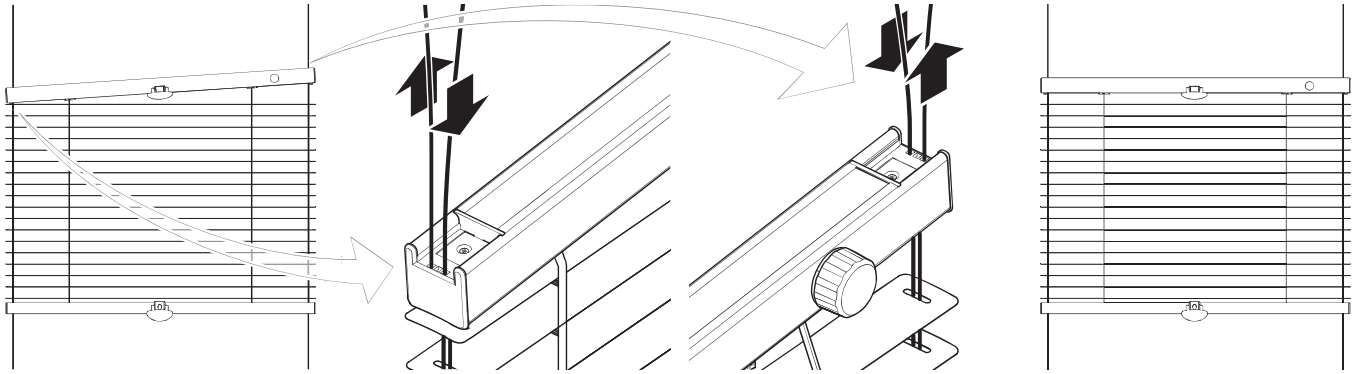

Disassembly

1

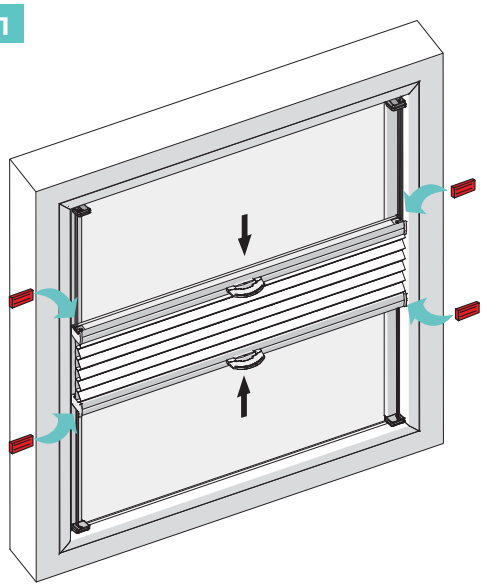

2

