
Manual


Easy deco concept

DIAZ | SUNPROTECTION


Description of the parts

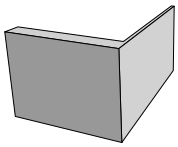

Easy deco wings

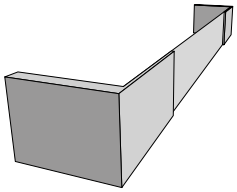

Easy deco profile

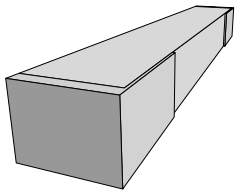

Easy deco cassette





Installation of the brackets

1 First draw the place of the brackets onto the ceiling or the wall. Make sure the brackets are placed at the exact finished width of the roller blind.

2 Screw the brackets to the ceiling or the wall. Always make sure that the brackets are installed in one straight line.

It's very important that the brackets are installed at level, when this isn't the case the fabric will pull up into the brackets.

Installation of the roller blind onto the brackets

1. Slide the plastic covers over the screws of the metal brackets (figure 1).
2. Now hook the roller blind over the edge of the bracket on the command side (figure 2).
3. Push the spiral spring on the non command side (figure 3).
4. Position the roller blind between the brackets till the blind clicks in the whole of the bracket.

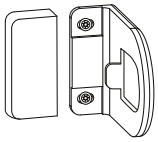


figure 1

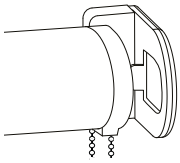


figure 2

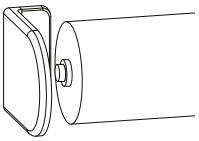


figure 3

Installation of the Easy Deco Concept

Installation of the Easy Deco Wings

1. Slide the Easy Deco Wings from the front over the brackets of the roller blind.

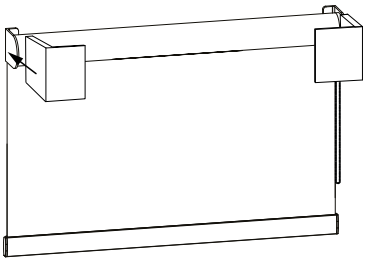


figure 4

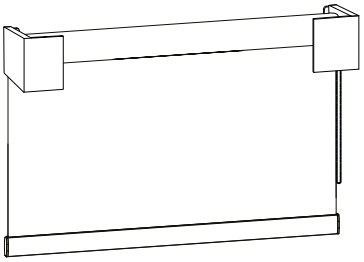


figure 5

Installation of the Easy Deco Profile

1. First install the Easy Deco Wings as explained above.
2. Now slide the Easy Deco Profile from the top into the Wings. Make sure the edge is at the top.

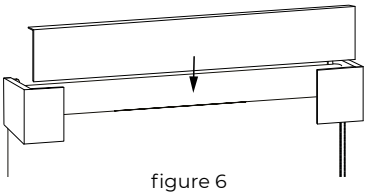


figure 6

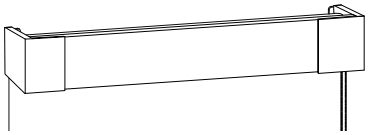


figure 7

If the brackets are attached to the ceiling or at less than 10 cm from the ceiling, you will have to slide the Easy Deco Profile from the front over the brackets. Same installation as the Easy Deco Cassette step C.

Installation of the Easy Deco Cassette

1 Slide the cassette from the front over the brackets of the roller blind.

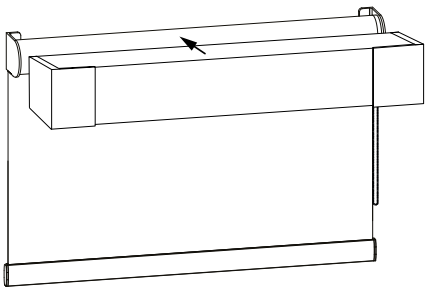


figure 8


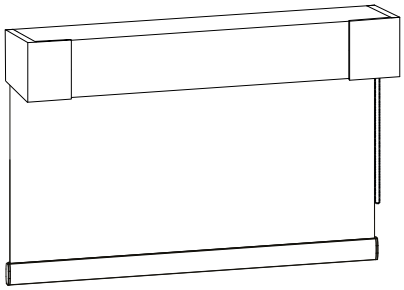


figure 9

Child safety

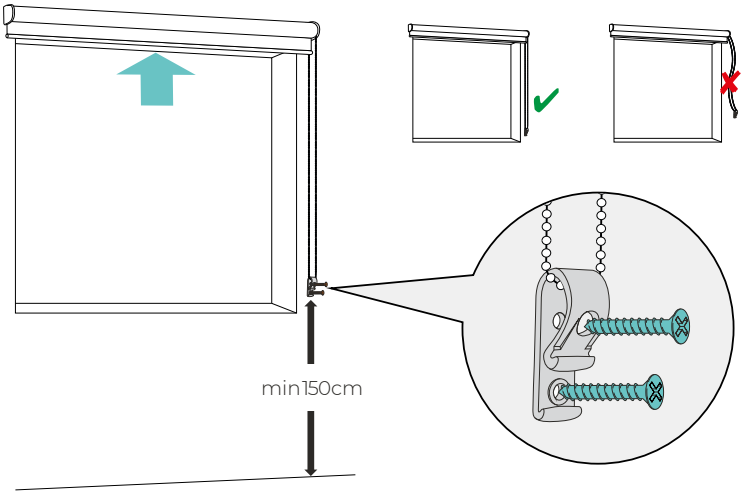

Users manual

By pulling the chain you will pull up and let down the blind. Make sure the fabric isn't pulled down lower then the commanded heights, otherwise the fabric will detach from the tube and will eventually fall off.

Take down the roller blind

1 Use a screw driver to push the spiral spring to the inside of the blind. (figure 10)

2 Slide the roller blind out of the brackets.

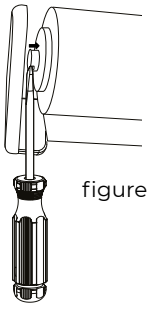


figure 10