
Manual

Horizontal blind 16/25 mm

DIAZ | SUNPROTECTION


Description of the parts

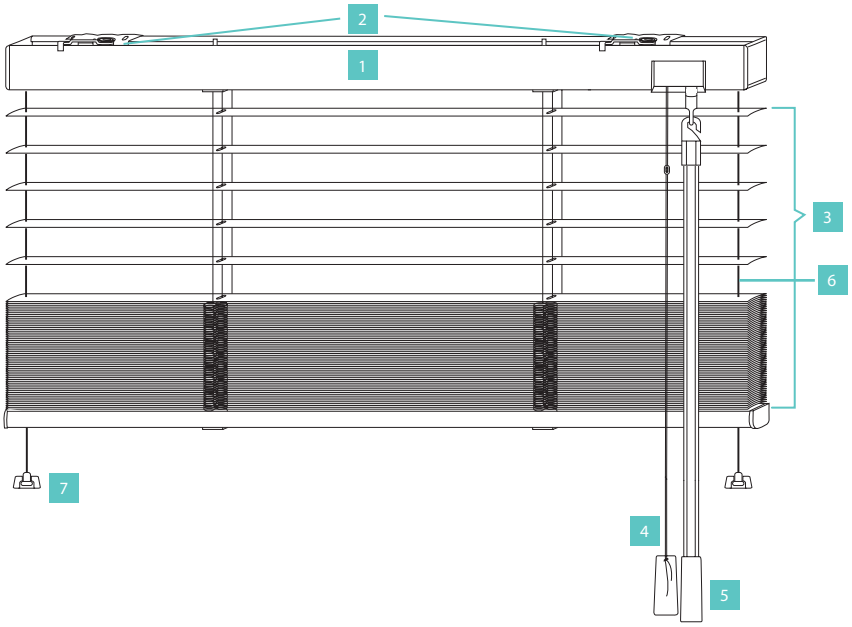


1. Headrail
2. Universal brackets
3. Aluminium slats
4. Operation cords
5. Orientation rod
6. Side guidance (optional)
7. Brackets for side guidance (optional)


Installation

1 Fix the outer 2 brackets as shown on the picture below. Fix the other brackets at equal distance between the outer 2 brackets.

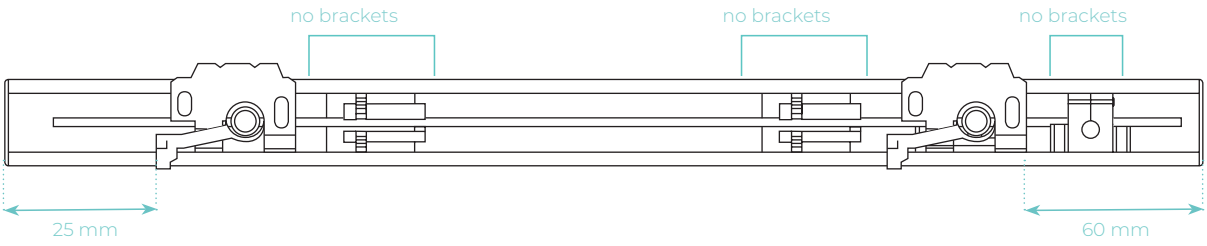

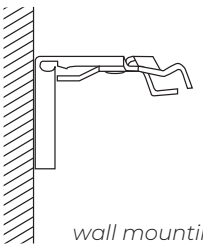


wall mounting

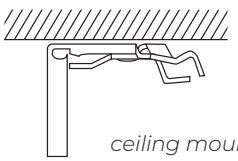


ceiling mounting


Make sure the brackets are not fixed on top of the spools in the headrail.

2 Open all brackets.

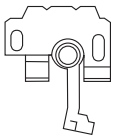

3 Slide the headrail till the top of the brackets and close them one by one, by turning the brackets against the headrail.

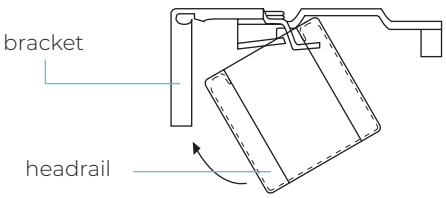

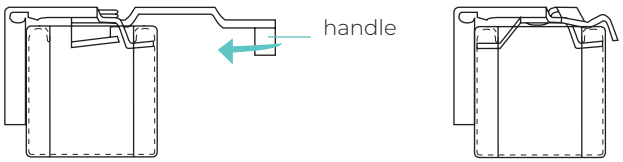

Make sure that the borders of the brackets are fix under the edge of the headrail.


Installation of the side guidance

1 Fix the brackets parallel, so that the cables run straight down.


2 Put the fixation ring on both sides over the cable. Put tension on the cable and fix the fixation ring at the height of the bracket. Repeat on the other side.

Inside the window mounting: Slide the fixation ring in the bracket to fix it.
Outside the window mounting: Put the cable with the fixation ring through the biggest hole in the back of the bracket and pull it forward to fix fhe fixation ring in one of the smaller holes.



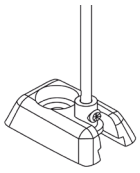

inside window mounting 16/25mm

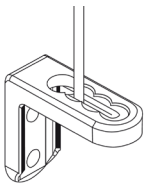


outside window mounting 16/25mm


Installation clamping bracket

1 Fit the clamp brackets at the top of the sash. Open all brackets. Slide the headrail till the top of the brackets and close them one by one, by turning the brackets against the headrail.

> ⚠ Make sure that the borders of the brackets are fix under the edge of the headrail.

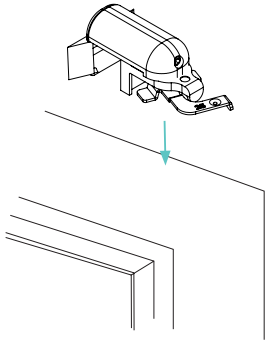

2 If blind with side guidance, mount the clamp brackets at the bottom parallel so that the side guidance cables run straight down. Insert the cables on both sides into the clamping bracket and tighten with an Allen key.

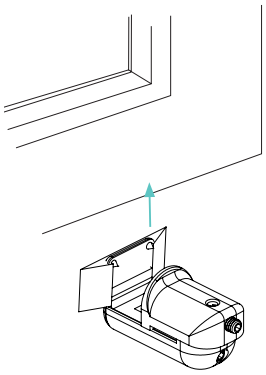

Child safety

