
Manual

DIAZ | SUNPROTECTION

Horizontal blind with monocommand 25 mm


Description of the parts

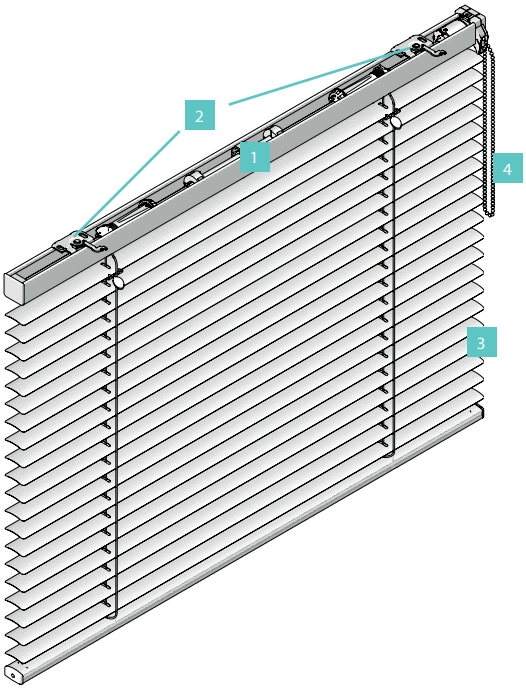


1. Headrail
2. Universal brackets
3. Aluminium slats
4. Chain


Installation

1 Fix the outer 2 brackets as shown on the picture below.
Fix the other brackets at equal distance between the 2 outer brackets. .

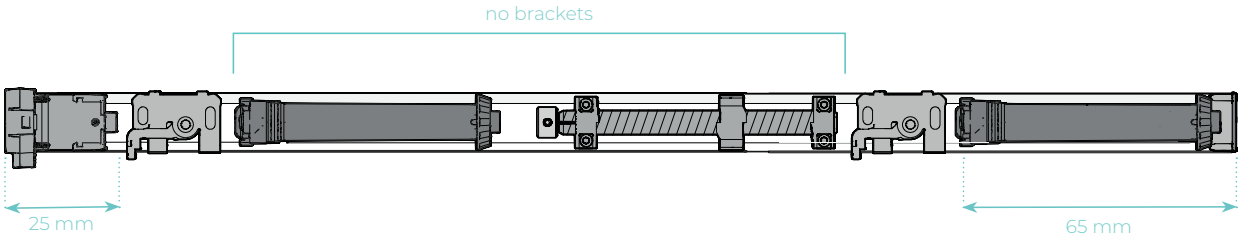

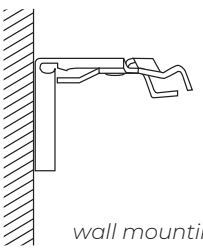


wall mounting

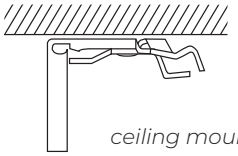


ceiling mounting

Make sure the brackets are not fixed on top of the spools in the headrail.

2 Open all brackets.

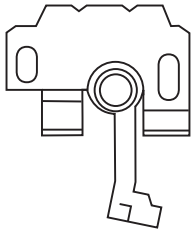

3 Slide the headrail till the top of the brackets and close them one by one, by turning the brackets against the headrail.

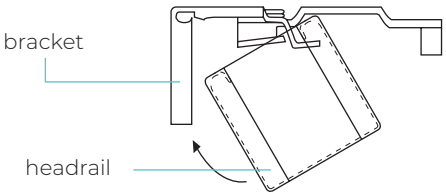




Make sure that the borders of the brackets are fix under the edge of the headrail.

Installation of the side guidance

1 Fix the brackets parallel, so that the cables run straight down.

2 Put the fixation ring on both sides over the cable. Put tension on the cable and fix the fixation ring at the height of the bracket. Repeat on the other side.
Inside the window mounting: slide the fixation ring in the bracket to fix it.
Outside the window mounting: put the cable with the fixation ring through the biggest hole in the back of the bracket and pull it forward to fix the fixation ring in one of the smaller holes.

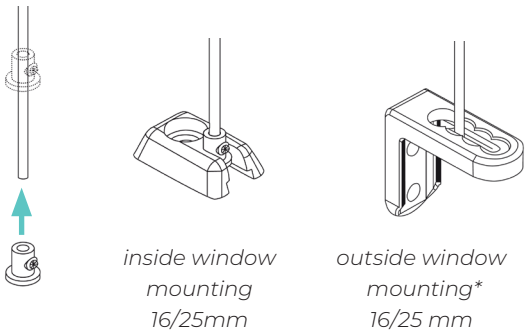


inside window mounting 16/25mm

outside window mounting 16/25 mm*


** Side guidance bracket OWM can also be installed upside down.*

Correcting the slanting

1 Use a fine screw driver to turn the ring in the headrail a few steps forward or backward.

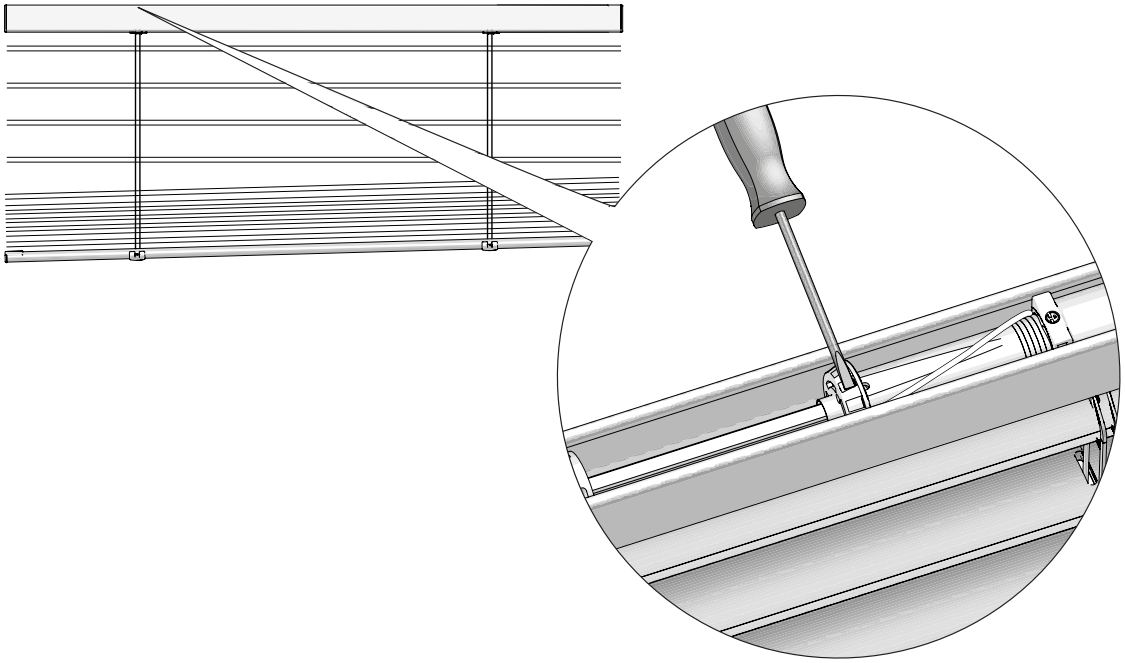

2 Let the blind down completely and then pull back up.

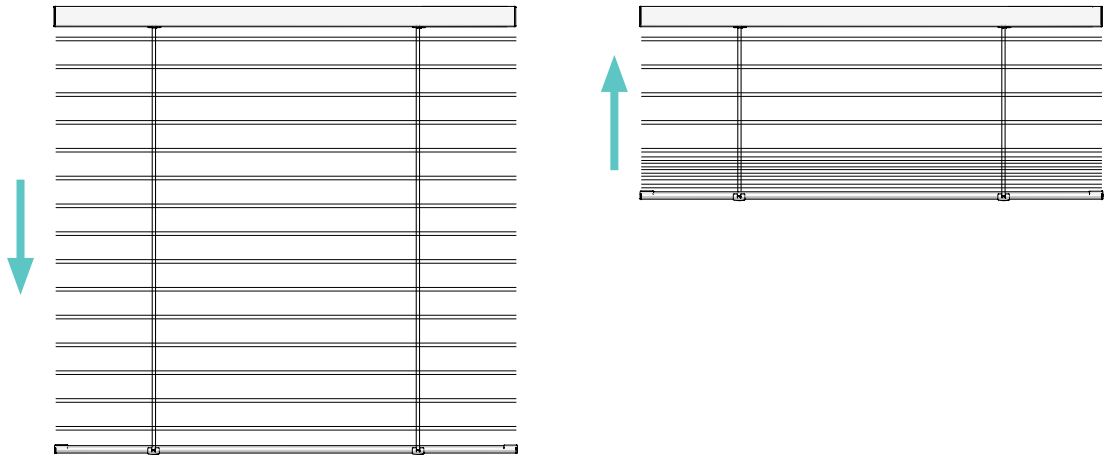


3 Repeat these steps if necessary.

How to command

Make sure the slats are in the right direction while raising and lowering the blind.

- The front of the slats is visible while lowering the blind.
- The back of the slats is visible while raising the blind.

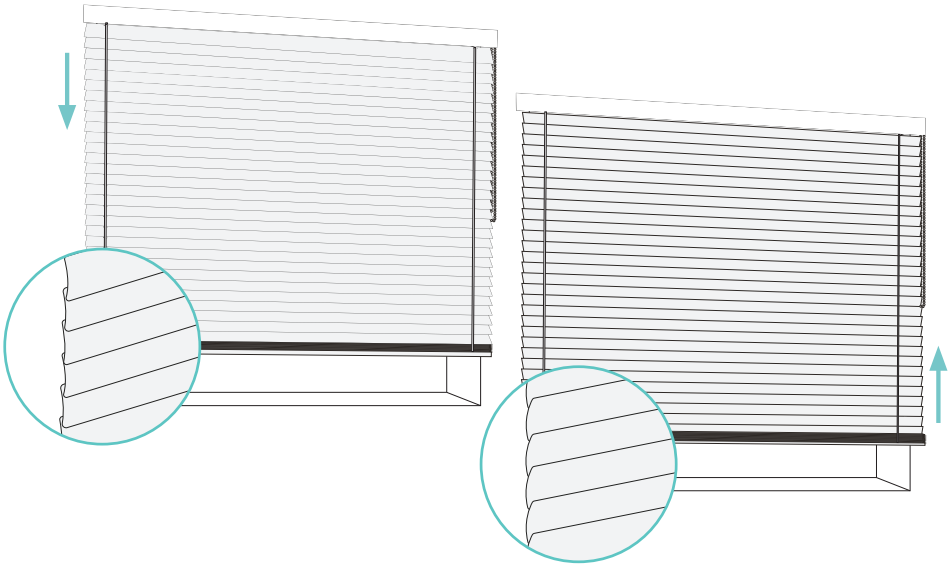

Child safety

