Manual

DIAZ | SUNPROTECTION

Black-out screen Installation


Remove the bottom profile of the cassette of the black-out screen before beginning with the installation.


1 Determine the position of the click blocks on the window frame or on the wall (distance center click block to exterior black-out screen = 15mm) (figure 1).

2 Install the first block at about 20cm from the top (figure 2) and the last block at about 15cm from the bottom. Divide the other blocks between these two with an intermediate distance of about 50cm. Make sure that all blocks are in one perfect line, so that the guide profiles can be installed parallel. The diagonal distances of both guide profiles also need to be identical (figure 2a). This way you will avoid the fabric from dropping.



fig. 1

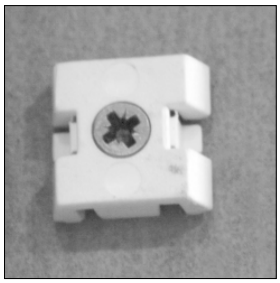
fig. 2

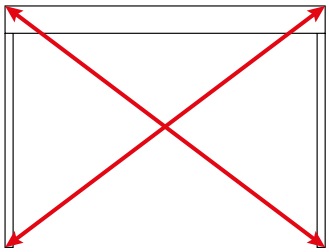
fig. 2a

3 Attach the guide profiles on the floor to the cassette (figure 3).

4 Postion with two people the complete black-out screen in or outside the window mounting and click the entire system on to the click blocks (figure 4).

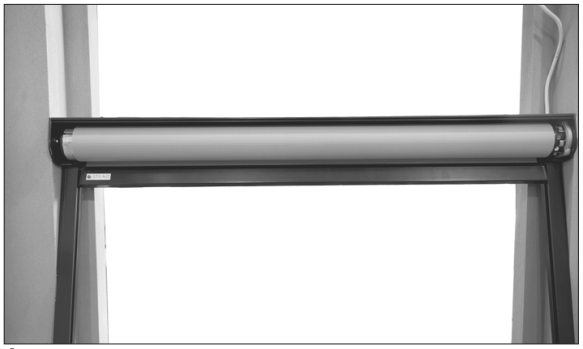
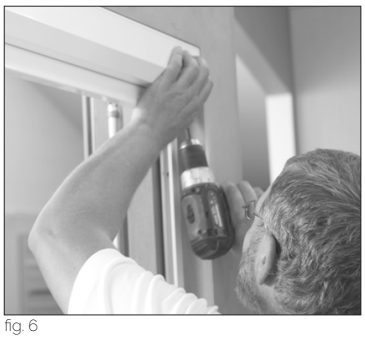

fig. 3


fig. 4

5 If with motor, instal the end positions.

6 Click the bottom profile on to the cassette and fix with screws (figure 5 & 6).


fig. 5


fig. 6