Manual

DIAZ | SUNPROTECTION

Black-out screen with zipper
Installation

Installation

1 Determine the position of the click blocks on the window frame or on the wall (distance center click block to exterior black-out screen = 15mm) (figure 1).

2 Install the first block at about 20cm from the top (figure 2) and the last block at about 15cm from the bottom. Divide the other blocks between these two with an intermediate distance of about 50cm. Make sure that all blocks are in one perfect vertical line, so that the guide profiles can be installed parallel. The diagonal distances of both guide profiles also need to be identical (figure 2a). This way you will avoid the fabric from dropping.



fig. 1

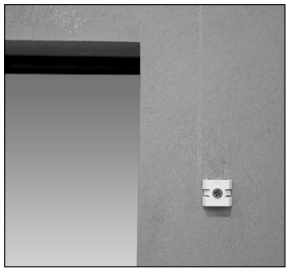


fig. 2

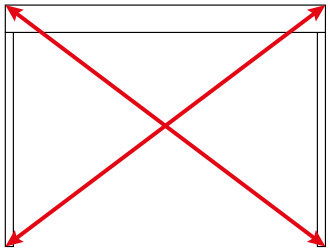


fig. 2a

3 Separate the guide profiles, by loosening the hexagonal screws.

4 Attach the guide profiles to the cassette on the floor (figure 3).

5 Position with two people the complete black-out screen in or outside the mounting (figure 4) and click the entire system onto the click brackets (figure 5).

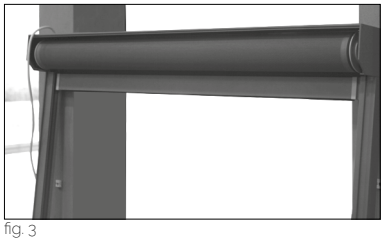


fig. 3



fig. 4



fig. 5

6 Take the PVC strip and slide the zipper of the fabric into the V-shaped piece of the PVC strip (figure 6a + 6b).

7 Now place the plastic guides of the fabric into the aluminium guides and make sure that the black strip is placed behind the edge of the guides. (figure 7)

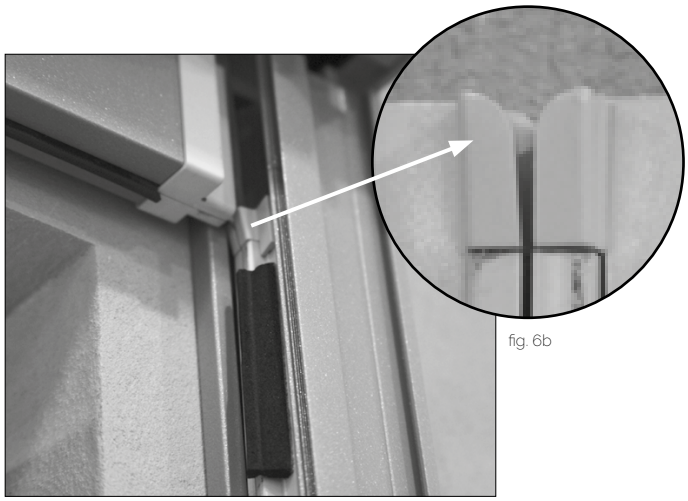


fig. 6a

fig. 6b



fig. 7

8 Click the front profiles of the guides onto the guide profiles (figure 8) and fix them with the hexagonal screws (figure 9).



fig. 8

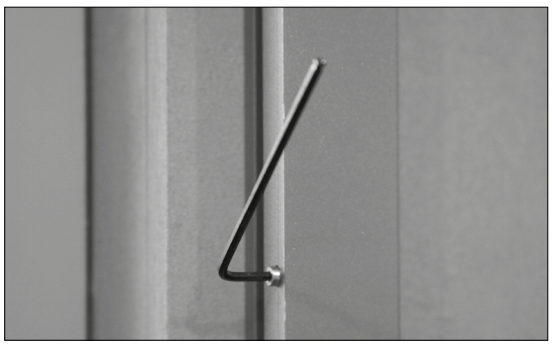


fig. 9

9 Install the end positions of the motor.

10 Click the front profile of the cassette (figure 10) and fix with screws (figure 11).

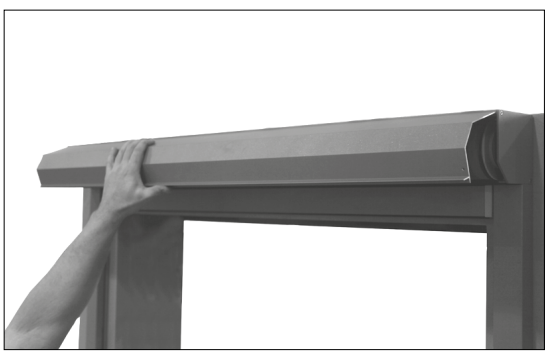


fig. 10



fig. 11