
Installation manual

Top-down-bottom-up


DIAZ | SUNPROTECTION

Installation in the window opening


1

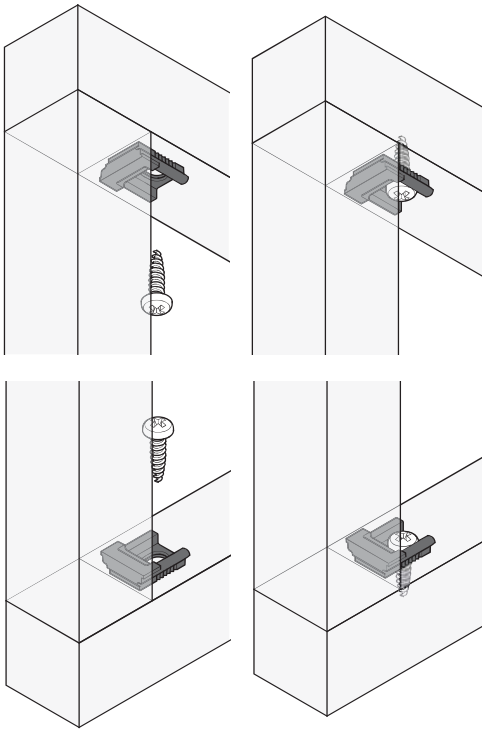

SIDE VIEW

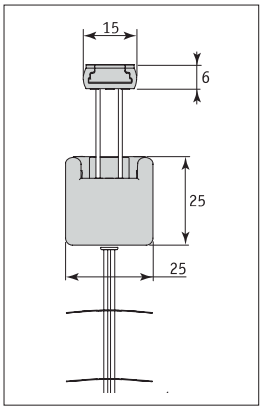


2

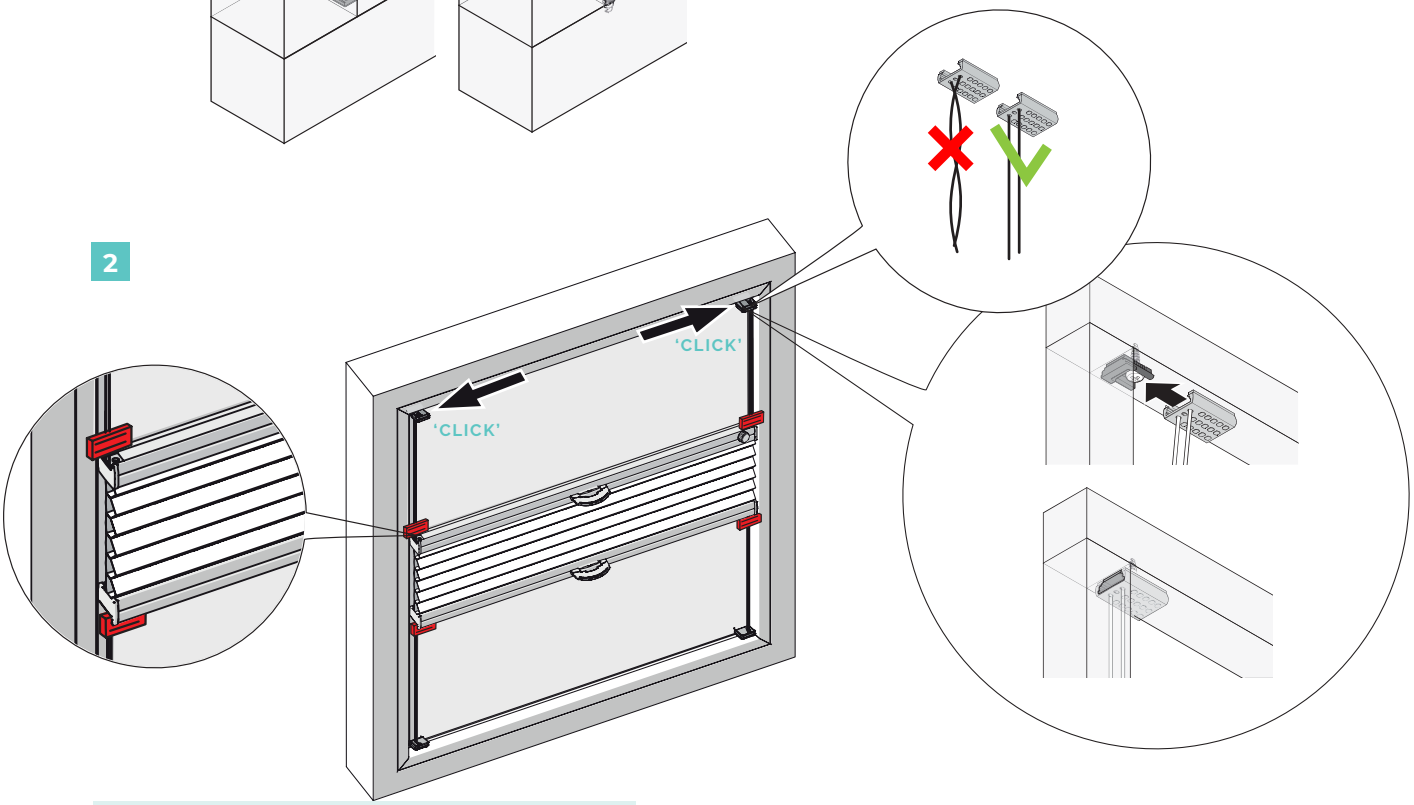


Do not remove the red clamps until after installation.

3

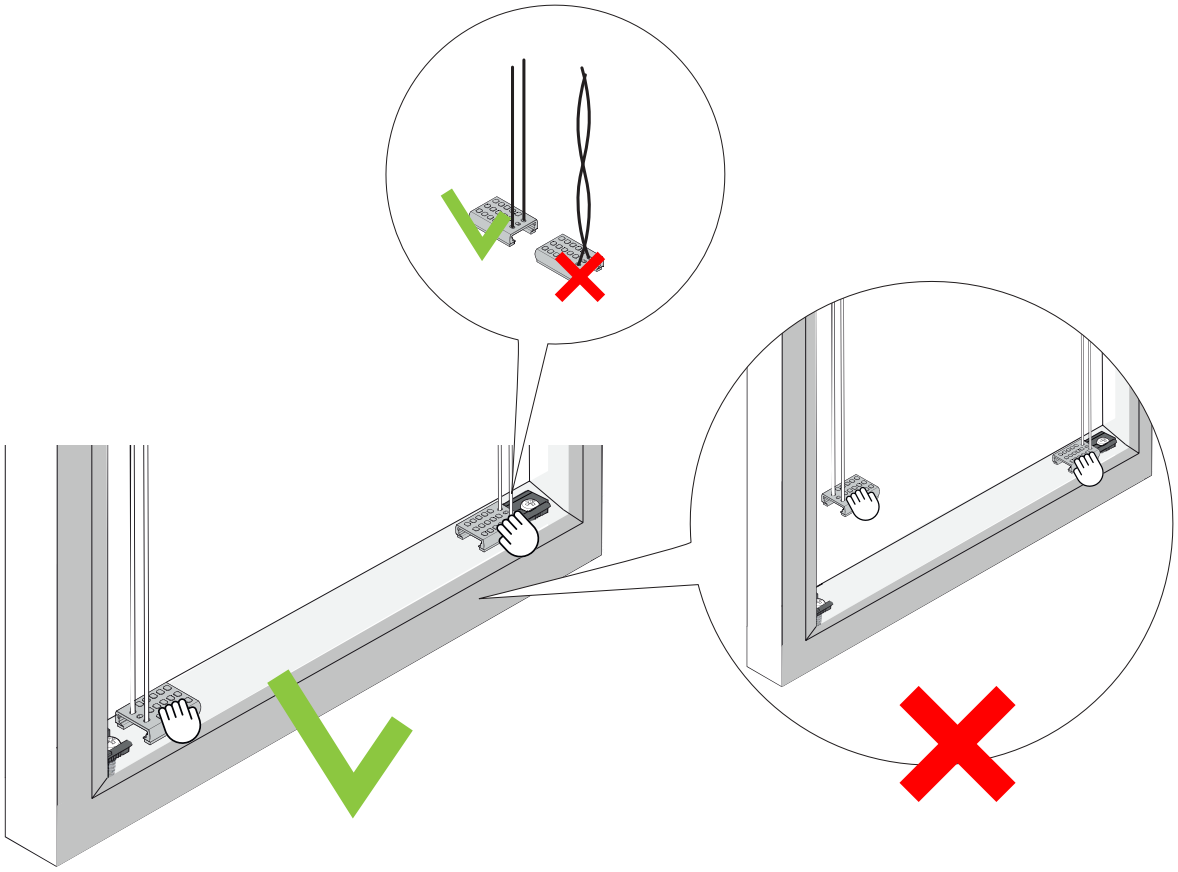


Pull down the cords simultaneously using both hands.

4

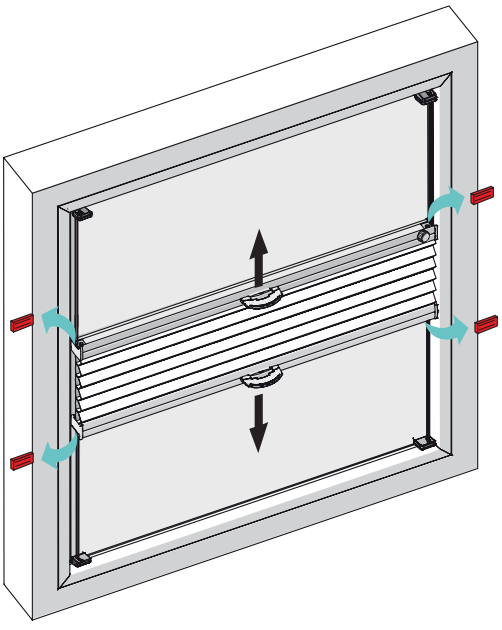



5 Level headrail

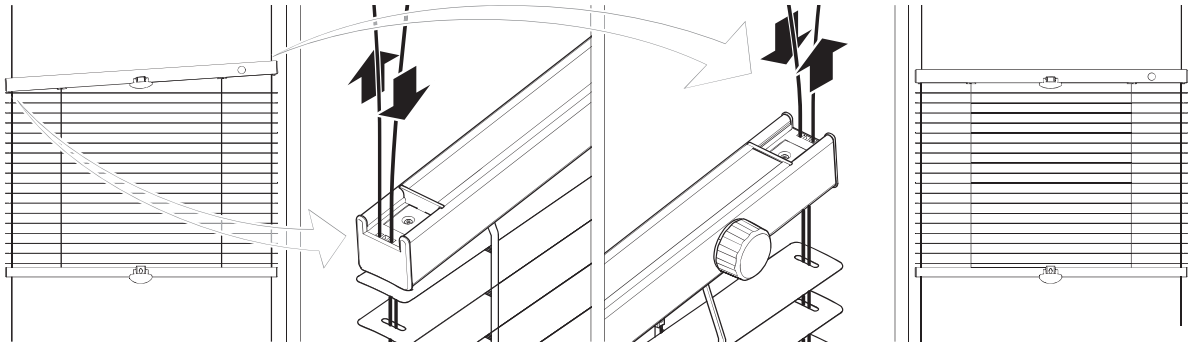



Installation outside the window opening

1

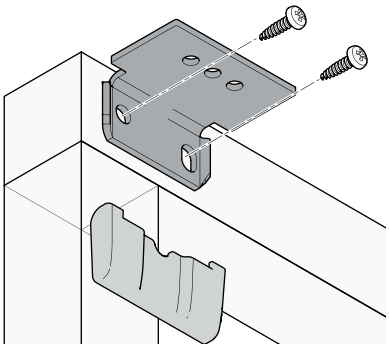


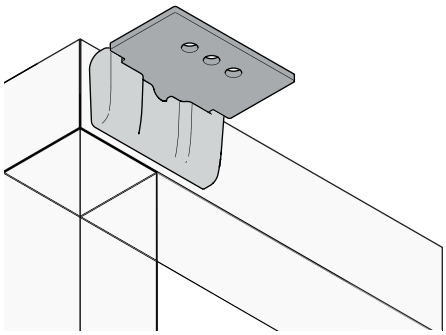

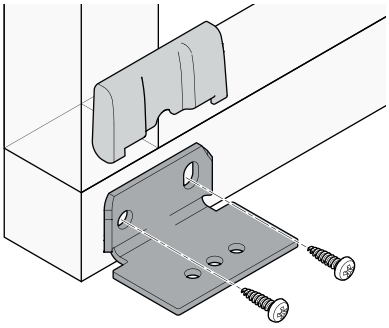


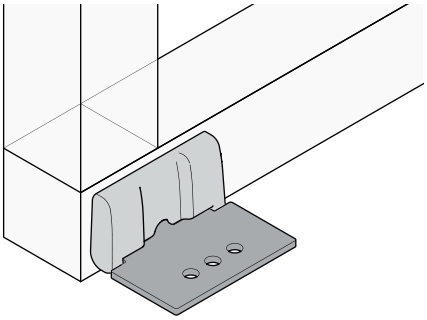

2

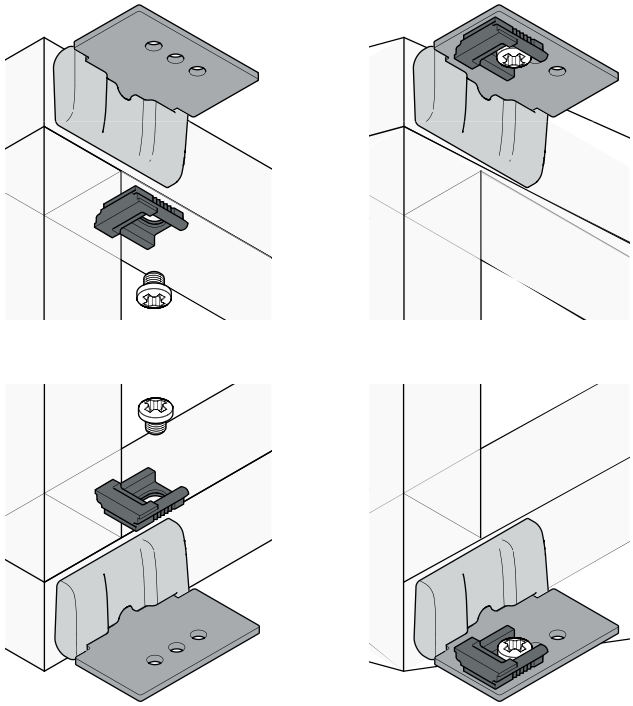


3

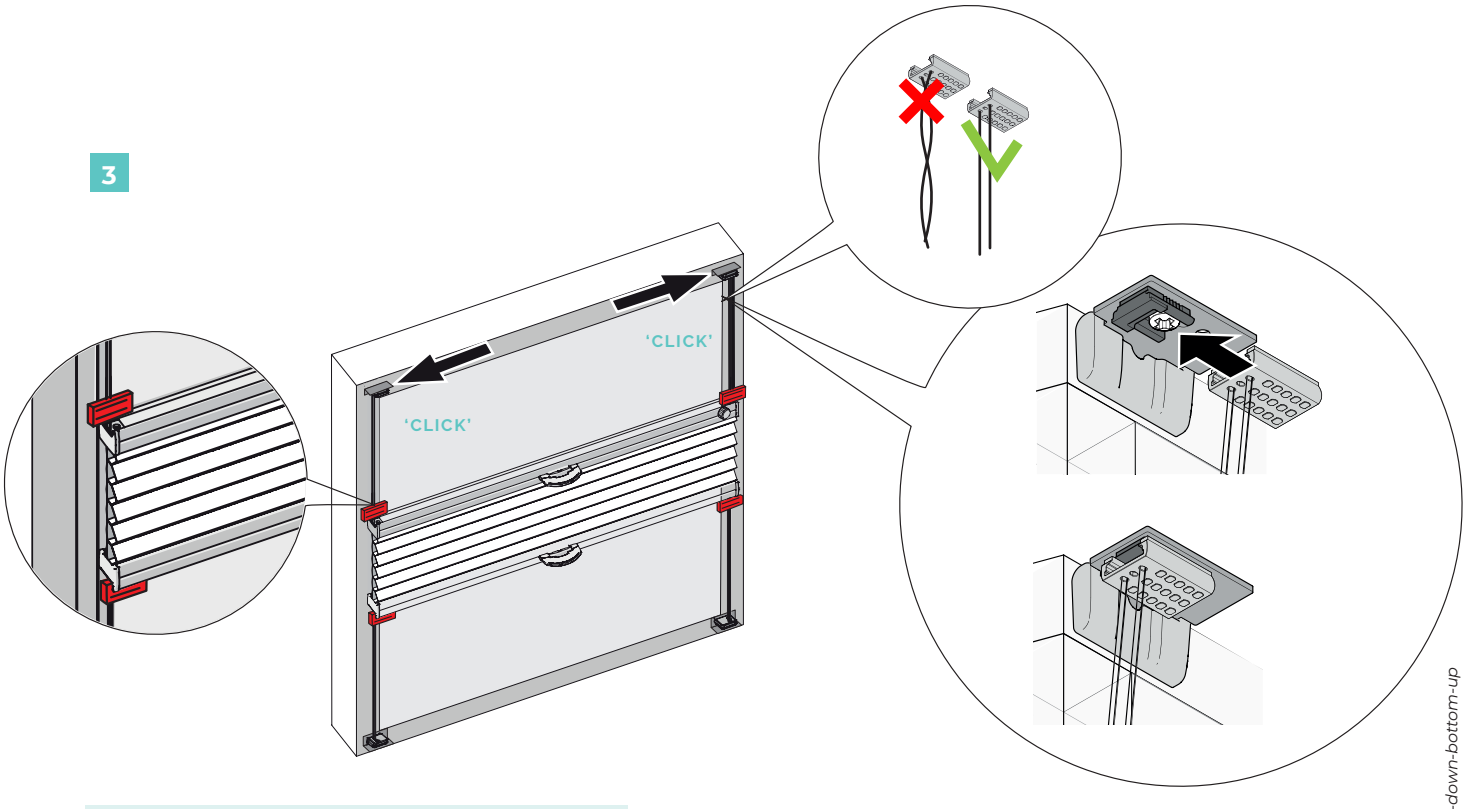

Do not remove the red clamps until after installation.


4

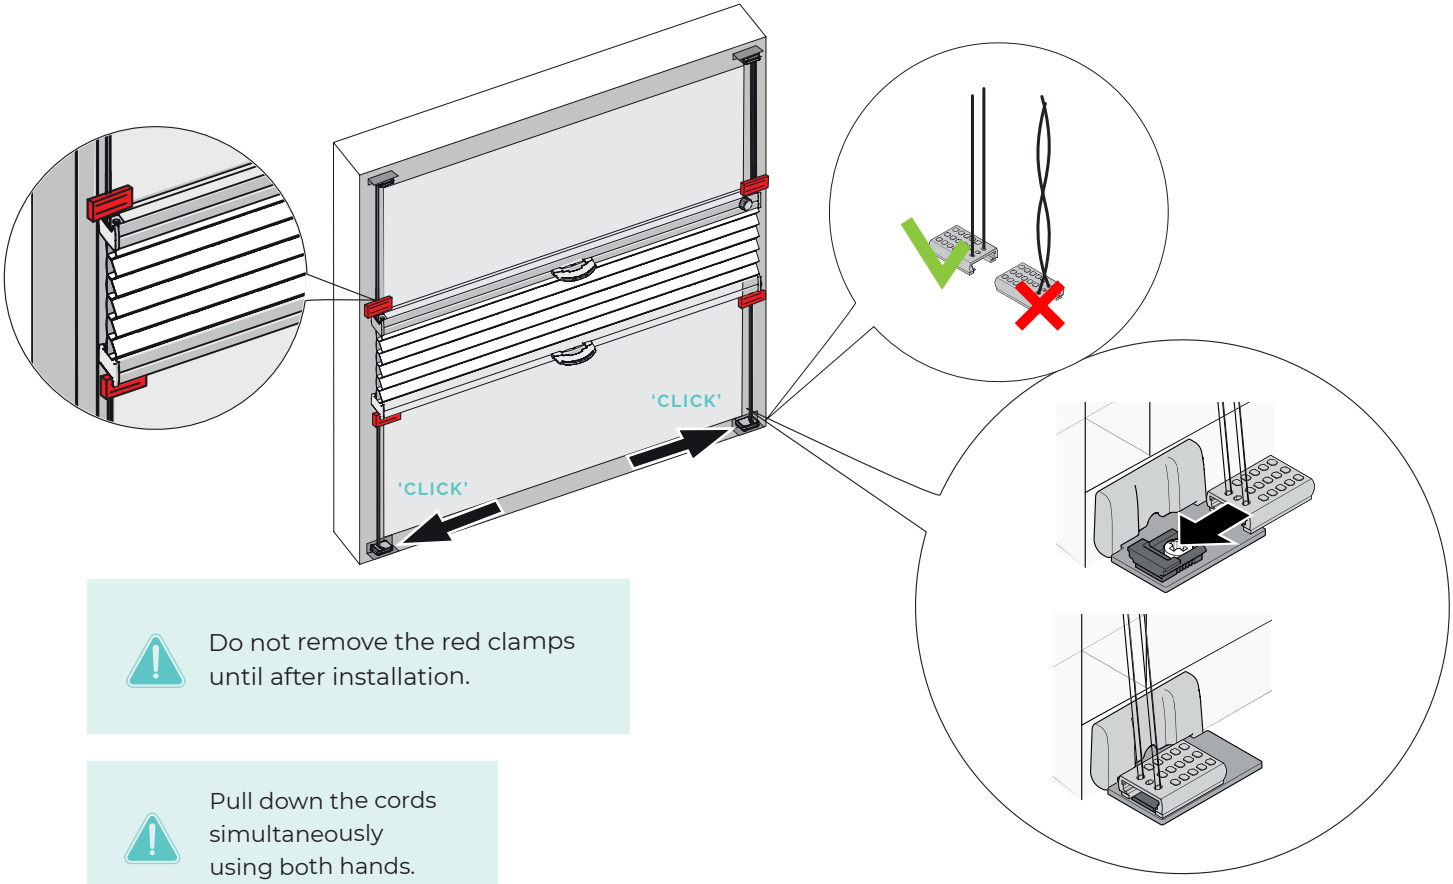


Do not remove the red clamps until after installation.

Pull down the cords simultaneously using both hands.

5

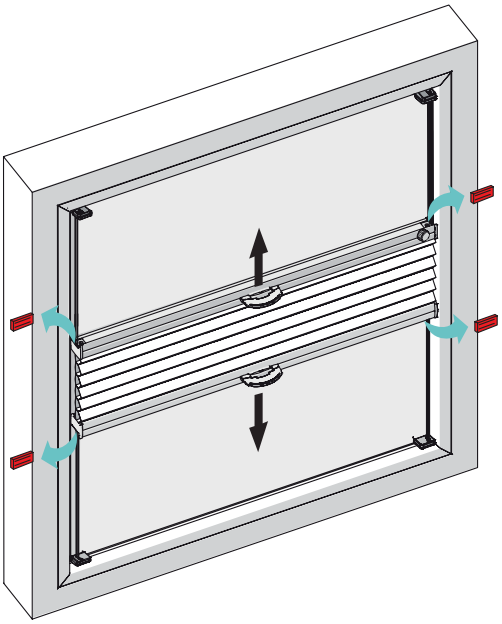


6 Level headrail

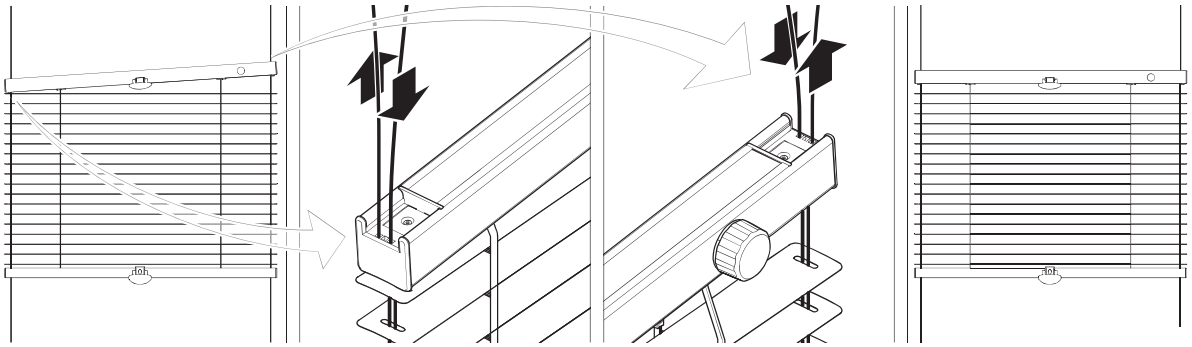

Disassembly

1

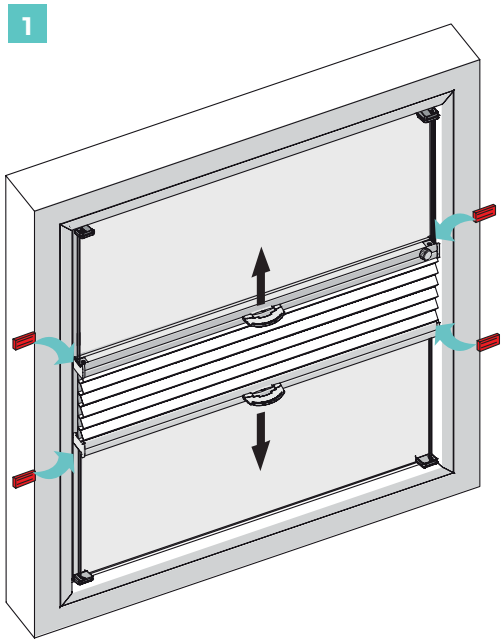

2

