
Manual

DIAZ | SUNPROTECTION

Somfy motor for switch control Smart Ø50/Ø65/Ø80

Connect the motor to the electricity

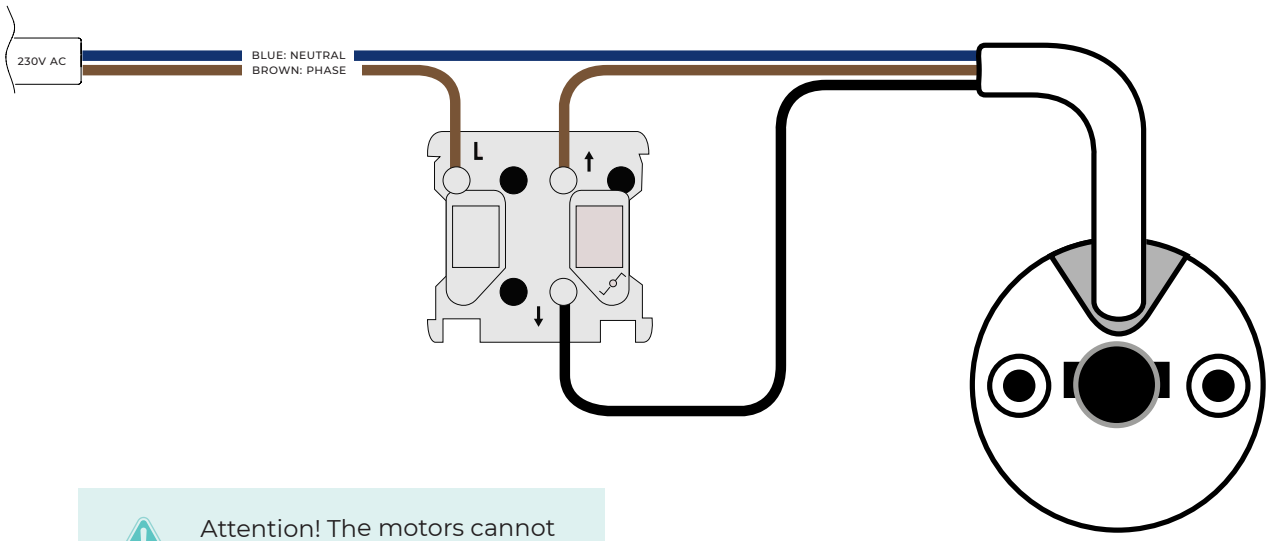

Attention! The motors cannot be parallel connected.

Installation of the rolling direction


1. Press the lower button of the switch.
2. Does the roller blind go down? The direction is installed correctly.
3. Does the roller blind go up? You need the change the rolling direction. Swap the brown and black wire at the motor on the back of the switch.


Attention! Make sure no buttons are pushed while switching the wires.

4 MOTOR LEFT - Installation of the end limits

4.1 Push the lower or upper button of the switch until the roller blind automatically stops at the end. If the roller blind doesn't stop in time, push the stop button.

4.2 With a hexagonal key you can adjust the adjustment bolt on the motor.

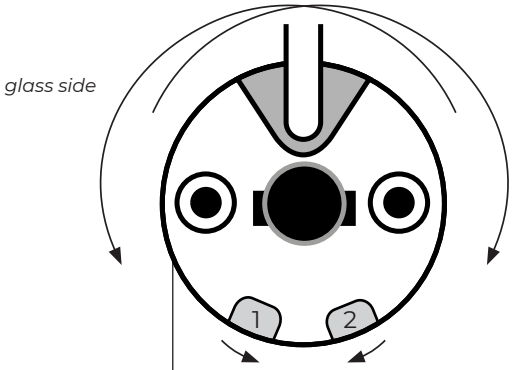

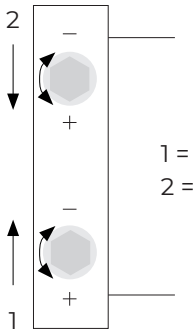

1 = bottom limit
2 = top limit

Installing the top limit (2):

rise the top limit = turn in the direction of the "+" (counter clock wise)
You will see that the roller blind rises in small steps. Once you've reached the right height, stop turning and your top limit is installed.

lower the top limit = turn in the direction of the "-" (clock wise)
The roller blind will not respond immediately, but when you push the lower and then the upper button of the switch, you will see that the roller blind stops at a lower limit.

Installing the bottom limit (1):

rise the bottom limit = turn in the direction of the "-" (clock wise)
The roller blind will not respond immediately, but when you push the upper and then the lower button of the switch, you will see that the roller blind stops at a higher limit.


lower the bottom limit = turn in the direction of the "+" (counter clock wise)
You will see that the roller blind lowers in small steps. Once you've reached the right height, stop turning and your bottom limit is installed.


Attention! If the roller blind has a contra-rolling direction, the function of the adjustment bolts is reversed.

5 MOTOR RIGHT - Installation of the end limits


5.1 Push the lower or upper button of the switch until the roller blind automatically stops at the end. If the roller blind doesn't stop in time, push the stop button.

5.2 With a hexagonal key you can adjust the adjustment bolt on the motor.

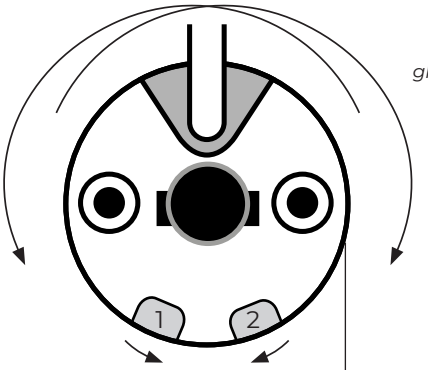

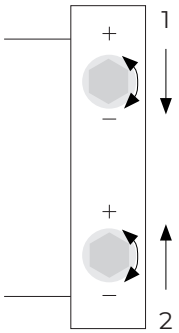


2 = bottom limit
1 = top limit

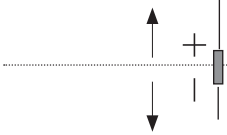

Installing the top limit (1):

rise the top limit = turn in the direction of the "+" (counter clock wise)
You will see that the roller blind rises in small steps. Once you've reached the right height, stop turning and your top limit is installed.

lower the top limit = turn in the direction of the "-" (clock wise)
The roller blind will not respond immediately, but when you push the lower and then the upper button of the switch, you will see that the roller blind stops at a lower limit.

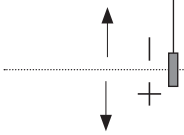

Installing the bottom limit (2):

rise the bottom limit = turn in the direction of the "-" (clock wise)
The roller blind will not respond immediately, but when you push the upper and then the lower button of the switch, you will see that the roller blind stops at a higher limit.

lower the bottom limit = turn in the direction of the "+" (counter clock wise)
You will see that the roller blind lowers in small steps. Once you've reached the right height, stop turning and your bottom limit is installed.

Attention! If the roller blind has a contra-rolling direction, the function of the adjustment bolts is reversed.